


T. A. Rogers, 4901 Lawton Ave., Oakland, California.







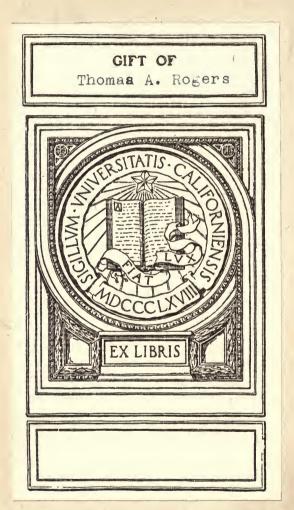





Mc Graw-Hill Book Co, Inc.


Electrical World
Engineering News-Record
Power
Engineering and Mining Journal-Press
Chemical and Metallurgical Engineering
Electric Railway Journal
Coal Age
American Machinist
Ingenieria Internacional
Electrical Merchandising
Bus Transportation
Journal of Electricity and Western Industry
Industrial Engineer

MECHANISM

ROBERT McARDLE KEOWN, B.S.

ENGINEER, INDUSTRIAL COMMISSION OF WISCONSIN
FORMERLY ASSOCIATE PROFESSOR OF MACHINE
DESIGN, UNIVERSITY OF WISCONSIN

SECOND EDITION
FIFTH IMPRESSION

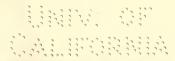

McGRAW-HILL BOOK COMPANY, Inc. NEW YORK: 370 SEVENTH AVENUE LONDON: 6 & 8 BOUVERIE ST., E. C. 4 1921

· /5/75

Rift of Thomas A. Rogues

COPYRIGHT, 1912, 1921, BY THE McGraw-Hill Book Company, Inc.

PRINTED IN THE UNITED STATES OF AMERICA

PREFACE TO SECOND EDITION

The purpose of this revision has been to make more clear those points that have been the most difficult for the students.

The definitions and rules have been italicized as it has been our experience that the student in going over the text for the first time is at a loss to know just what are the most important points.

Very little new subject matter has been added as it is felt that the size of the text is all that can be covered in the time usually allotted to this subject, and it has been the writer's experience that it is better to cover the entire text than to omit certain parts in order to complete the course.

The number of problems has been doubled and most of the illustrations for those problems suitable for drafting room practice have been enlarged to make them more clear than they were in the first edition.

Experience has shown us that the class and drafting room work can be more closely coordinated if the time allowed for the course be made one recitation and three two-hour drafting periods per week, using the third drafting period for a lecture or second recitation when necessary to keep ahead of the drafting room work.

The writer wishes to express his appreciation for the very helpful assistance of his former colleague Professor P. H. Hyland of the Department of Machine Design, University of Wisconsin, for his suggestions as to changes, preparation of drawings, and assistance in reading proof.

R. McA. Keown.

Madison, Wis., July, 1921.



PREFACE TO FIRST EDITION

The writer's aim has been to cover the subject of mechanism as briefly, simply and clearly as possible. The text is designed for a half year's work of one lecture, one recitation and four hours' drafting work per week.

No especial claim to originality of subject matter can be made, nor has the writer found need for a special effort in this direction. The arrangement and method of treatment are new, and these the author bases upon satisfactory results obtained in the work of his classes in the College of Engineering of the University of Wisconsin.

After a brief discussion of motions and velocities, linkages are taken up, as they are comparatively easy for the student to understand, and simple problems can be given out while the subject is yet new to him.

Cams are taken up in detail, as they form a part of the subject in which the student needs considerable practice in order to work out original problems, and practically all cam problems are original.

The involute system of gearing is taken up before the cycloidal system, because it seems to the writer easier for the student to grasp. Having once become familiar with the involute system, the student can more readily understand the cycloidal. Furthermore, the involute system is in more general use at the present time.

Problems are given at the end of each chapter. Some of these are designed especially for drafting-room work, and the necessary instructions as to scale, position of drawing on the sheet, method of procedure and time, etc., are given. These few problems are not intended to exhaust the subject, but rather to serve as a guide for instructors in giving the drafting-room work in connection with the recitations.

Quotations have been made from the various authorities, and

credit given where the quotations appear. The writer wishes to express his thanks to the several authors from whom he has made quotations, the manufacturing companies who have furnished cuts and to all others who have aided in the preparation of the manuscript.

PREFACE

R. McA. Keown.

Madison, Wis., August, 1912.

CONTENTS

PAGE

Preface	v
CHAPTER I	
Motions and Velocities	1
CHAPTER II	
Instantaneous Centers, Kinematic Chains	10
. CHAPTER III	
Solution of Relative Linear Velocities by Centro Method Relative linear velocity—Open four-linked mechanisms—Crossed link mechanisms—Slider crank mechanisms—Problems.	18
CHAPTER IV	•
Velocity Diagrams Linear velocity diagrams—Polar velocity diagrams—Velocity diagram of engine crank and crosshead—Comparison of velocity diagrams—Variable motion mechanisms—Variable rotary motion mechanism—Whitworth quick-return motion mechanism—Oscillating arm quick-return motion mechanism—Problems.	25

CHAPTER V

PA	GE
Parallel and Straight-line Motion Mechanisms	38
parallel mechanisms—Straight-line motion mechanisms—Watt's straight-line motion—Scott Russell straight-line motions—Thompson indicator motion—Tchebicheff's approximate straight-line motion—Robert's approximate straight-line motion—Peaucellier's exact straight-line motion—Bricard's exact straight-line motion—Problems.	
CHAPTER VI	
Cams	48
Definition—Cam and follower—Contact between cam and follower—Theoretical cam curve—Working cam curve—Base circle—Motions used for cam curves—Uniform motion—Harmonic motion—Uniformly accelerated motion—Uniformly retarded motion—Cams with offset followers—Flat face follower—Involute cams—Method of laying out an involute cam—Cams with oscillating followers—Problems—Positive motion cams—Cams of constant diameter—Main and return cam—Cams of constant breadth—Cylindrical cams—Layout of cylindrical cam without developing cylinder—Layout of cylindrical cam on developed surface—Cylindrical cams with oscillating follower—Inverse cams—Problems.	
CHAPTER VII	
	78
Friction gearing—Rolling cylinders—Velocity ratio—Grooved cylinders—Evans' friction cones—Velocity ratio—Seller's feed disks—Velocity ratio—Bevel cones—Velocity ratio—Brush plate and wheel—Velocity ratio—Spur gears—Velocity ratio—Definitions of tooth parts—Involute system—Spur gears—Involute rack and plnion—Involute annular gear and pinion—Interference of involute teeth — Effect of changing the distance between centers of involute gears—Interchangeable involute gears—Standard sizes of teeth for gears—Laying out a pair of standard involute gears—The stub tooth—Method of designing the stub tooth—Dimensions of stub tooth gear teeth—Advantages of the stub tooth—Cycloidal system—Cycloid—Epicycloid—Hypocycloid—A p p l i c a t i o n of cycloidal curves to gear teeth—Cycloidal spur gears—Cycloidal rack and pinion—Cycloidal rack teeth with straight flanks—Cycloidal annular gear and pinion—Limiting size of annular gear pinion—Interchangeable cycloidal gears—Standard diameter of rolling circle for cycloidal gears—Cymparyison of involute and cycloidal gears—Standard diameter of rolling circle	
for cycloidal gears—Comparison of involute and cycloidal systems— Pin gears—Stepped and helical gears—Approximate method of	

laying out tooth curves-Cutting spur and annular gears-Interchangeable gear cutters-Conjugate methods of cutting teeth-

Fellow's gear shaper—Gear hobbing—Problems.

CHAPTER VIII

GE
25
42
48
61



MECHANISM

CHAPTER I

MOTIONS AND VELOCITIES

The science of Mechanism treats of the design and construction of machinery.

"A machine is a combination of resistant bodies so arranged that by their means the mechanical forces of nature can be compelled to produce some effect or work accompanied by certain determinate motions," Reuleaux. In general it may be said that a machine is an assemblage of fixed and moving parts interposed between the source of power and the work for the purpose of adapting one to the other.

1. Design of a Machine.—In the design of a machine there are three distinct parts to be considered:

First.—The general outline is sketched without any regard to the detailed proportions of the individual parts, and from this sketch or skeleton, by means of pure geometry alone, the displacement, velocity, and acceleration of each of the moving parts can usually be accurately determined.

Second.—The forces acting on each part must be determined, and each part given its proper form and dimensions to withstand these forces.

Third.—Having designed the machine, the dynamical effects of the moving parts can be accurately determined.

The first part belongs to the subject known as the Kinematics of Machines, the second to the Design of Machine Parts, and the third to the Dynamics of Machines.

This course will treat only of the first part dealing with the motions of the machine parts, and the manner of supporting and guiding them without regard to their strength. This is sometimes called Pure Mechanism or the Geometry of Machinery.

Since Mechanism is a study of relative motion it will be well to discuss the different kinds of motion.

2. Motion.—Motion is a change of position. The change of position can be noted only with respect to the position of some other body which is at rest, or assumed to be at rest, or with respect to some body, the motion of which is known or assumed to be known. That is, the motion is purely a relative one.

Two bodies may be at rest relatively to each other but in motion relatively to a third body, as for example, two car wheels fastened to the same after have no motion with respect to each other, but may be in motion relatively to the truck or track.

In problems dealing with machinery the motions of the various parts are usually taken with reference to the frame of the machine. This is not always the case, however, as sometimes it is easier to compare the motion of one part of a machine directly with that of some other moving part, as for example the number of revolutions that the cylinder of a printing press makes to each revolution of the knife for cutting off the sheets.

- **3.** Forms of Motion.—In order to be of any use in machine construction, the motions must be completely controlled or constrained. Most of the motions used are, or can be reduced to one of three forms, *plane*, *helical* and *spherical*.
- **4.** Plane Motion.—Plane motion is the most common as well as being the most simple. In order to have plane motion all points in a plane section of the body must remain in that plane and all points outside that section will move in parallel planes.

In Fig. 1, if the lower face abcd of a cube is kept in contact with

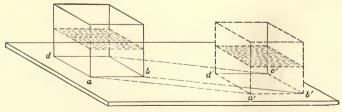


Fig. 1.

a flat table top, all points in the lower face will move in a plane, and all points similarly located in any other plane section will

move in parallel planes, no matter what path the cube describes in moving from one position to another.

Thus if we know the motions of two points in a body that has plane motion, the motions of other points in the body are also known.

Plane motion is always found as *rotation* or *translation*, or a motion that can be reduced to a combination of rotation and translation.

- **5. Rotation.**—In rotation all points in the body move in circles, that is, they remain at a fixed distance from a right line called the axis of rotation. For example, shafts, pulleys, flywheels, etc., have a motion of rotation.
- **6. Translation.**—Translation may be divided into two classes, Rectilinear Translation and Curvilinear Translation. A body has rectilinear translation when all points in it move in straight lines, as the carriage of a lathe, piston of an engine, or spindle of a drill press.

The crank pin of a locomotive driving wheel is an example of curvilinear translation. It moves in a circle around the center of the wheel and at the same time moves along the track.

7. Helical Motion.—The path traced by a point moving at a fixed distance from an axis and with a uniform motion along the axis is a helix, and a point moving in such a path is said to have helical motion.

Perhaps the most common example of helical motion is that of a screw being turned into a nut. All points in the screw, except those in the axis, have helical motion. Both limits of helical motion are plane motion, that is, if the pitch of the screw is zero the resulting motion is rotation, while if the pitch is infinity, the motion will be that of translation.

- **8.** Spherical Motion.—Spherical motion may be defined as the motion of a body moving so that every point in it remains at a constant distance from a center of motion, but does not remain in a plane.
- 9. Path.—A point in changing from one position to another traces a line called its *path*. The path may be of any form. The path traced by any point on a pulley revolving on its shaft is a circle, but a path need not be continuous, as for example the path traced by a rifle bullet.

In general, the motion of a body is determined by the paths of three of its points not in a right line. If the motion is in a plane, two points are sufficient, and if rectilinear, one point determines the motion.

10. Velocity.—In addition to knowing the path and direction of a moving body, there is another element necessary to completely determine its position, and that is its *velocity*.

Heretofore we have not considered the *time* necessary for a body to complete a certain motion.

Velocity is measured by the relation between the space passed over and the *time* occupied in traversing that distance. It is expressed numerically by the number of units of distance passed over in one unit of time, as miles per hour, feet per minute, inches per second, etc. It is the *rate of motion* of a point in space.

11. Linear Velocity (V^-) .—When a motion is referred to a point in the path of a body, its velocity is expressed in linear measure and is called its *linear velocity*.

Velocity is uniform when equal spaces are passed over in equal units of time; that is, the distance varies as the time.

Let V = velocity; S = total distance passed over; T = time occupied.

Then if we know the distance passed over by a body and the time it occupied in passing over that distance, the velocity, $V = \frac{S}{T}$. Thus if a body with a uniform velocity passes over a distance of 50 ft. and occupies 5 minutes in doing so, it has a velocity of $\frac{50}{5} = 10$ ft. per minute.

If the velocity and the time occupied are known, the space passed over, $S = V \times T$, while if the space and velocity are known, the time, $T = \frac{S}{V}$.

12. Variable Linear Velocity.—A body which has a motion that is accelerated or retarded is said to have a variable linear velocity. Such a velocity is not constant, but when calculating the velocity at any point in its path, its velocity is assumed to be constant for that instant. Thus a train starting from rest and gradually increasing its speed until it attains a velocity of 60 miles per hour, has a variable velocity. After the train had gone a distance of one mile from its starting-point, it might have a velocity of 15

miles per hour, meaning that if its velocity remained constant, it would go 15 miles in the next hour.

13. Angular Velocity (V°) .—The angular velocity of a point is the number of units of angular space which would be swept over in a unit of time by a line joining the given point, with a point outside its path, about which the angular velocity is desired.

The angular space is measured in circular measure, or it is the ratio of the *arc* to the *radius*.

The unit angle or the radian is one subtended by an arc equal in length to the radius, r.

Hence in one circumference there are $\frac{2\pi r}{r} = 2\pi = 6.2832$ radians, or a radian $= \frac{360^{\circ}}{6.2832} = 57.29^{\circ}$.

In engineering practice, angular velocity is usually expressed in revolutions per unit of time.

Thus if a point S in Fig. 2 makes n revolutions per unit of

time, its angular velocity, $V^{\circ}=2\pi n$ radians per unit of time. This is the angle that a line joining S with the center of the pulley will pass through per unit of time.

All points in the pulley have the same angular velocity, since they all pass through the same angle in a unit of time.

14. Linear Velocities of All Points in the Same Body.—The linear velocities of all points in the same body are directly

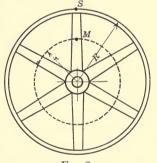


Fig. 2.


proportional to their distances from the center of rotation of the body.

All points in the pulley of Fig. 2 having the same radii will have the same linear velocity, but the greater the radius the larger the linear velocity. Thus if the point M on the pulley has a radius r, the $V^-M = 2\pi rn$ while the $V^-S = 2\pi Rn$. V^-S : $V^-M = 2\pi Rn$: $2\pi rn$ or

$$\frac{V-S}{V-M} = \frac{2\pi Rn}{2\pi rn} = \frac{R}{r}$$

15. Relation between Linear Velocity and Angular Velocity.—

The angular velocity of a point in a rotating body is $2\pi n$ radians per unit of time and the linear velocity of a point in the same body is $2\pi rn$ or the angular velocity is the same as the linear velocity

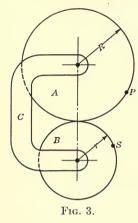

of a point in the body having a unit radius.

We may then say that the angular velocity = $\frac{\text{linear velocity}}{\text{radius}}$ or $V^{\circ} = \frac{V^{-}}{r}$. This gives the angular velocity in radians and to reduce it to revolutions, divide by 2π .

This relation is often used and should be remembered. The angular velocities of two points in different bodies having the same linear velocities, but different radial distances from their centers of rotation, are inversely proportional to their radii.

Let P and S, Fig. 3, be the two points in A and B respectively in which R is the radius of P from its center of rotation and r the radius of S from its center of rotation.

Let
$$V-P=V-S$$
.
$$V^{\circ}A=\frac{V-P}{R}; \qquad V^{\circ}B=\frac{V-S}{r}$$
 Then
$$V^{\circ}A:V^{\circ}B=\frac{V-P}{R}:\frac{V-S}{r}$$
 or
$$\frac{V^{\circ}A}{V^{\circ}B}=\frac{\frac{V-P}{R}}{\frac{V-S}{r}}$$
 But
$$V-P=V-S. \qquad \therefore \frac{V^{\circ}A}{V^{\circ}B}=\frac{r}{R}$$

Problems


1. An engine piston makes 400 single strokes per minute; the flywheel is on the crank shaft. What is the linear velocity of the crank pin if the length of the crank is 15 in.?

- 2. A pulley makes 400 R.p.m. and a point on its rim has a linear velocity of 4000 ft. per minute. How far is the point from the center of rotation?
- 3. A flywheel 28 ft. in diameter makes 30 R.p.m. On the flywheel shaft is a crank of 15 in. radius which transmits motion to a crosshead by means of a connecting rod 6 ft. long. Through how many feet does the crosshead travel per minute?
- **4.** A locomotive moving at the rate of 40 miles per hour has 72 in. drivers, and a piston stroke of 24 in. What is the linear velocity of the crank pin in feet per minute?
- 5. An engine crank pin has a linear velocity of 2400 ft. per minute, and makes 150 R.p.m. What is the length of the crank?
- **6.** Two axes 27 in. apart are to be connected by two friction wheels which roll together without slipping. Velocity ratio is as 7:5. What is the diameter of each wheel?
- -7. Two wheels A and B are in contact and roll together without slipping. The distance between their centers is 30 in. A makes 80 R.p.m. and B 300 R.p.m. What are their diameters?
- **8.** In two wheels A and B which roll together without slipping, their diameters are 16 in. and 12 in. respectively, and B makes 125 R.p.m. What are the R.p.m. of A?
- 9. Velocity ratio to be transmitted is as 3:4. Diameter of driven 20 in. Find the diameter of the driver and the distance between the center of the two wheels,
- 10. A tractor engine moves from A to B, a distance of three miles in one hour. The rear wheels are 8 ft. in diameter and the engine is geared down 20 to 1. What are the R.p.m. of the flywheel of the engine?
- 11. A racing car has 36 in. tires. What are the R.p.m. of the wheels when the car is being driven at 72 miles per hour, if slip is not considered? What is the linear velocity, in feet per minute of a point on the tire 18 in. out from the hub center at the above speed?
 - 12. Plot the path of D for one complete revolution of the crank EC.

 $\begin{array}{ll} {\rm Data:} & AE = 6^{\prime\prime}; & BC = 6\frac{1}{4}^{\prime\prime}; & BD = \\ CD = 5\frac{1}{2}^{\prime\prime}; & AB = 2\frac{3}{16}^{\prime\prime}; & EC = 1\frac{11}{16}^{\prime\prime}. \end{array}$

Diameter of hubs A and $E = \frac{1}{2}''$ Diameter of hubs B, C and $D = \frac{3}{8}''$ Diameter of pins A and $E = \frac{1}{4}''$ Diameter of pins B, C and $D = \frac{3}{16}''$


Note.—Make an ink drawing, full size, placing the point A as indicated. Divide the circle, the radius of which is EC, into 12 equal parts, numbering them consecutively, and also number the corresponding points on the path of D.

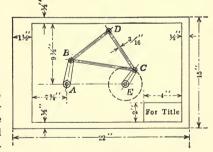

Problem 12.


The linkage is to be drawn in black and other lines in red. Put no dimensions on the drawing.

The statement of the problem and data are to be placed in the upper right-hand corner of the sheet. Time, 4 hours. 13. In the hand-operated oil switch shown, through what angle must the handle AC move in order to completely open or close the switch?

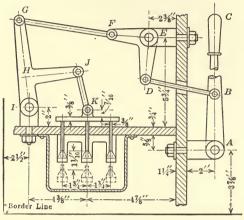

Problem 13.

Note.—Make a full size ink drawing and leave off all dimensions. Draw the links in one extreme position, and represent the other extreme by center lines only. Time, 6 hours.

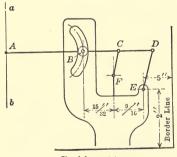

Problem 14.

14. In the Tabor engine indicator plot the path of B for a motion of $3\frac{1}{8}$ in. for A along the straight line ab.

Data: Diameter of roll at $B = \frac{3}{16}''$; $AD = 3\frac{1}{8}''$; $CD = \frac{5}{8}''$; $BC = \frac{5}{8}''$; CF = 1''; $DE = 1\frac{1}{4}''$.


Note.—Make a pencil skeleton drawing, scale 4 in. = 1 in. Take points on line ab $\frac{1}{8}$ in. apart and find the corresponding positions of B and F. Time, 4 hours.

15. Design the circuit-breaker so that it will make or break contact for a difference of $13\frac{1}{2}$ in. in the water

level in the tank. Locate the extreme positions of both balls and of all the levers. Marble slab for circuit-breaker 12 in. square.

Note.—Make an ink drawing half size, and design the different parts without regard to strength but so that they will look of the proper pro-

portions. The tank need not be drawn to scale, although the difference in water level must be drawn to the same scale as the switch mechanism. Do not show the rheostat, motor or pump.

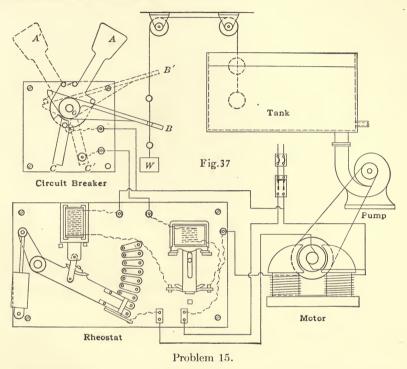

The statement of the problem to be placed in the upper right-hand corner of the sheet and underneath the drawing, Automatic Float Switch. Time 6 hours.

CHAPTER II

INSTANTANEOUS CENTERS, KINEMATIC CHAINS

16. Mechanisms.—A mechanism or train of mechanism is the term applied to a portion of a machine where two or more parts are combined so that the motion of the first compels the motion of the others according to a law depending on the nature of the combination. The two parts connected together are known as an *elementary combination*, so that a train of mechanism consists of a series of elementary combinations.

If a part is considered separately from the others it is at liberty to move in the two opposite directions and with any velocity, as the crosshead of an engine that is not connected to the connecting rod.

Wheels, shafts and rotating parts generally are so connected with the frame of the machine that any given point is compelled, when in motion, to describe a circle around the axis, and in a plane perpendicular to it. Sliding parts are compelled by fixed guides to describe straight lines, other parts to move so that points in them describe more complicated paths and so on.

These parts are connected in successive order in various ways so that when the first part in the series is moved, it compels the second to move, which again gives motion to the third, etc. The various laws of motion of the different parts of a train are affected by the mode of connection.

- 17. Modes of Connection.—Connection between the different parts of a machine may be made in any of the following ways:
- 1. By direct contact
- a. Turning pairs—connected links.
- b. Slide connector—crosshead.
- $\{c. \text{ Cams without rolls.}\}$
 - d. Friction contact—friction cylinders.
- e. Rolling and sliding contact—toothed gears.

- 2. By intermediate connectors $\begin{cases} a \\ b \end{cases}$
- a. Cams with rolls.
 - b. Rigid links.
 - c. Flexible connectors—ropes, belts and chains.
 - a. Electricity and magnetism.
- 3. Without material connectors
 - b. Gravity.
 - c. Centrifugal force—governor.

The first two methods are perhaps the most important in this subject, and will be discussed later on.

18. Instantaneous Motion.—When a body changes its position its motion at any instant may be said to be its *instantaneous motion*.

As an illustration take the car wheel A, moving along the track B, Fig. 4. For an instant there is contact between the wheel and

the track along a line at C perpendicular to the paper and parallel to the axis of the wheel. The wheel then rotates about C which becomes an element of both the wheel and the track for an instant, and this motion of the wheel is its instantaneous motion. The line through C and perpendicular to the paper is its instantaneous axis.

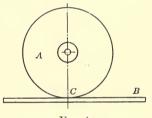


Fig. 4.

If instead of considering the whole wheel, we take a section made by passing a plane through it perpendicular to the axis, it will cut the line through C in a point which is called the *instantaneous center* or *centro*.


- 19. The relative motion between A and B is the same whether we consider the track stationary and the wheel revolving about it, or whether the wheel is considered stationary and the track revolving.
- 20. Centro.—A centro is a point common to two bodies having the same linear velocity in each, or it is a point in one body about which the other tends to rotate.

As an illustration of the first part of the definition, the tangent point of the two wheels A and B, Fig. 3, is an example. It is a point common to the bodies A and B and having the same linear velocity in each. The second part of the definition is illustrated by the points in the frame C of Fig. 3, about which A and B rotate.

21. Location of the Centro in a Single Body.—In any rigid body moving about an axis, the direction of motion of any point is perpendicular to a line joining the point with the axis; conversely, the axis of rotation will intersect a line drawn perpendicular to the motion of any point in the body, and lying in the plane of the motion of the point.

An illustration of a special case of this statement is the motion of a point on the rim of a fly wheel. Its instantaneous direction of motion is tangent to the rim, or perpendicular to a line joining the point with the axis of rotation.

A general illustration is as follows: Let the points M and N, Fig. 5, have the directions of motion shown by the arrows, both

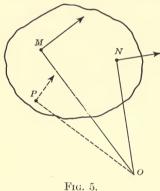

motions lying in the same plane. Lines drawn through M and Nand perpendicular to their respective directions of motion, will, if they intersect, locate the centro. or instantaneous center of the two points, and of the body as a whole. In Fig. 5 these lines intersect at O. To determine the direction of motion of any other point as P, draw a line through P, perpendicular to the line PO.

In some cases the centro cannot be located, as when the lines

drawn perpendicular to the directions of motion coincide or when they are parallel. In the latter case the centro is at an infinite distance away and the body has a motion of translation.

22. Location of Centros in Three Bodies Moving Relatively to Each Other.—Any three bodies moving relatively to each other have but three centros, and these centros lie on the same straight line.

In Fig. 6, let A, B and C be the three bodies that move relatively to each other. Assume that the body C is held stationary, and that A and B are fastened by pin joints to C at ac and bcrespectively.

The number and names of the centros are found by taking the bodies in combinations of two, using each one with each of the others, as AB, AC and BC. The bodies are usually represented by capital letters and the centros by lower case letters, so that the centros will be ab, ac and bc. It makes no difference in which order the letters are taken as ab or ba for the relative motion of A about B is the same as the relative mo-

tion of B about A (Art. 19)

The only motion that A can have is that of rotation about ac, while the only motion of B is that of rotation about bc. This locates two of the centros, and the third one ab is common to the bodies A and B and has the same linear velocity in each.

Assume that ab lies at the point o. When o is considered as a point in A, it has a radius from its center of rotation o-ac, and moves in the arc 1-2. Its direction of motion is perpendicular to its radius, or along the line m-n.

When o is considered as a point in B, it has a radius o-bc and moves in the arc 3-4. Its direction of motion is perpendicular to its radius, or along the line p-q.


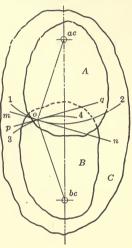


Fig. 6.

Thus we have the point o moving in two different directions at the same time, which is impossible. The lines m-n and p-qmust be parallel or they must coincide. They cannot be parallel since they must both pass through the same point, hence they

must coincide, and the only time that they will coincide is when

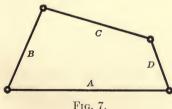


the radii o-ac and o-bc lie in the same straight line.

23. Kinematic Chain.—A kinematic chain is a combination of rigid bodies or links so connected that the motion of each is completely controlled by and depends upon the motions and positions of each of the others.


Figs. 7, 8 and 9 are examples. By holding one of the links stationary, any motion given to one will cause a certain definite motion in each of the others. The links can be of any shape whatever as long as their shape does not cause them to interfere with the motions of any of the other links.

Fig. 7 is a simple four-linked kinematic chain consisting of four turning pairs, while Fig. 8 is a simple chain of three turning and one sliding pair. Fig. 9 is a compound chain. A compound

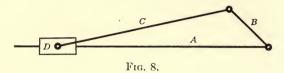

kinematic chain is one in which one or more of the links has more than two joints. In Fig. 9 the links B and E have three joints or are each connected to three other links.

24. Location and Number of Centros in a Kinematic Chain.—
To find the centros in a kinematic chain write the names of the

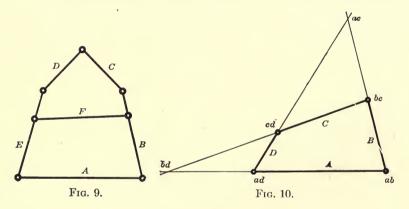

links in a row, and underneath each, its combinations with each of the others. The number of centros in any kinematic chain $=\frac{N(N-1)}{2}$, where N is the number of links in the chain.

In the four-link chain of Fig. 10, the number of centros will be $\frac{4(4-1)}{2} = 6$ centros. Their names can be found as stated above.

$$\begin{array}{cccc} A & B & C & D \\ ab & bc & cd \\ ac & bd & \\ ad & \end{array}$$


Four of these centros, ab, bc, cd and ad, can be found at the joints of the links, leaving ac and bd to be located. To locate the position of ac we know that the three centros of any three bodies moving relatively to each other lie on the same straight line (Art. 22), and also that to get ac the links A and C must be used since the centro ac is common to links A and C. Take A and C with one of the other links, say B. Then in the links A, B, C, the centros will be ab, ac, bc. We have already located ab and bc, and since ac also lies on the same straight line with them, we can draw a line of indefinite length through ab and bc.

Now take with the links A and C, a link not used before, as D. The centros of A, C, D, will be ac, ad, cd. We already know the positions of ad and cd, and ac will lie on the same straight line with them. Draw a line of indefinite length through ad and cd. Now since ac lies on this line, and also on the line

drawn through ab and bc. it must lie at the intersection of these lines.

The centro bd is found in a similar manner.

When there is sliding contact between two links of a kinematic chain as between A and B, Fig. 11, the centro will be at an infinite distance away, since it is the point in A about which B tends to rotate. and as B has a motion of translation, the point about which B tends to rotate is at infinity, along a line

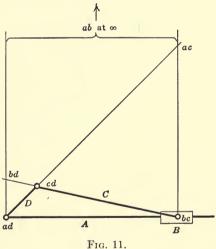


perpendicular to the direction of motion (Art. 21).

The centros ad, cd and bc being at the joints of the links are readily found, and bd is at the intersection of the lines bc-cd and ad-ab.

The location of the centros in a compound chain can be found in a similar way. First locate all of those at the joints of the links and at infinity, and then taking any three of the links in which two of the centros are known, find the third one.

25. Location of Centros in a Compound Kinematic Chain. Problem.—Locate all of the centros in the compound kinematic chain shown in Fig. 12. There being six links, there will be $\frac{6(6-1)}{2} = 15$ centros. Make a list of the centros as follows:

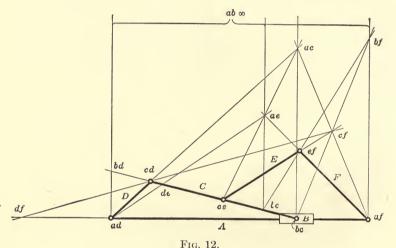

The centros ad, bc, af, ef, ce and cd are at the link joints and are found by inspection. The centros ab, ac and bd are found as in Fig. 11. By striking out the known centros in the above list, the centros ae, be, bf, cf, de and df remain to be located.

Proceed as explained in Art. 24 and it will be found that according to Art. 22,

Links AEC and AEF will locate centro ae, Links CFA and CFE will locate centro cf, Links DFA and DFC will locate centro df, Links DEA and DEC will locate centro de, Links BFC and BFD will locate centro bf, Links BEA and BEC will locate centro be.

Problems

- 1. Prove that in three bodies moving relatively to each other, their three centros lie on the same straight line.
- 2. Assume the positions of the links in a simple crossed-link chain and locate all of the centros.
 - 3. Locate all of the centros in Fig. 29 for the position of the links shown.
 - 4. Locate all of the centros in Fig. 9 for the position of the links shown.
 - 5. Combine Fig. 7 and Fig. 8 by inverting Fig. 7 making the links A and B common, thus forming a compound kinematic chain and locate all of the centros.
 - 6. Locate all of the centros in Fig. 30 for the position of the links shown.
 - 7. Locate all of the centros in the Watts straight-line motion mechanism for the position of the links as shown in Fig. 41.
 - 8. Locate all of the centros in Fig. 43 for the position of the links shown.
 - 9. Locate all of the centros in Fig. 44 for the position of the links shown.
 - 10. Locate all of the centros in the Thompson Indicator Motion Mechanism for the position of the links shown in Fig. 46.

CHAPTER III

SOLUTION OF RELATIVE LINEAR VELOCITIES BY THE CENTRO METHOD

26. Relative Linear Velocity.—In comparing the linear velocity of any point in one link with the linear velocity of a point in any other link, the comparison must be made through a point common to both of them.

In Fig. 13 let A and B be two bodies, held in contact with each other by the frame C, which consider stationary. The centros of

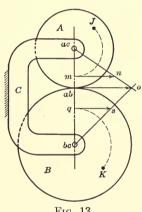


Fig. 13.

A, B and C are ab, ac and bc. If Cis stationary the centros ac and bc will be stationary since they are the points in C about which A and B respectively tend to rotate; and ab is a point common to A and B having the same linear velocity in each.

The common point is named from the two links in which the point being considered is located.

Let J be a point on A whose radius and linear velocity are known. and let K be a point on B, whose radius is known and whose velocity it is desired to find. The point J

has a radius J-ac and revolving J about its center will not affect its velocity as long as its radius is not changed. Revolve J around to the line of centers and lay off a line m-n to any convenient scale to represent its linear velocity.

The velocities of all points in the same link or body are directly proportional to their distances from the center of rotation (Art. 14), so that the linear velocity of ab having a radius ac-ab is directly proportional to the linear velocity of J, having the radius

J-ac. The velocity of ab can now be found by similar triangles and is represented by the line ab-o.


Since the point ab is common to the bodies A and B, its linear velocity will be the same in each, although its radius, when considered as a point in B is not the same as it was when considered as a point in A. The linear velocities of K and ab are directly proportional to their radii.

Complete the triangle bc-ab-o by drawing the line bc-o, and revolve K around its center to the line of centers at q. Draw through q the line q-s, parallel to ab-o. Then from similar triangles, if ab-o is the linear velocity of ab, q-s to the same scale will

be the linear velocity of K, or if m-n is the linear velocity of J then q-s is the linear velocity of K to the same scale.

Bear in mind that from the linear velocity of the given point, the linear velocity of the common point must first be found and from that find the linear velocity of the required point.

27. Open Four-linked Mechanisms.—Velocities of Points in Adjacent Links.—Let A, B, C, D, Fig. 14, be an open four-linked mechanisms.

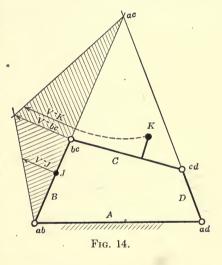

anism in which it is required to find the V^-K , a point in the link C, knowing the V^-J , a point in the link B, for the positions of the links shown and with the link A stationary.

It is only necessary to consider the links containing the points and the stationary link. These are A, B and C, the centros being,

$$\begin{array}{ccc} A & B & C \\ \overline{m} & bc \\ \overline{m} & ac \\ \overline{m} & \end{array}$$

The centro bc is the common point and is named from the links which contain the points. The centros $\frac{ab}{20}$ and $\frac{ac}{20}$ are the


centros about which the links B and C rotate. The three centros ab, ac and bc determine the line of centers.

Lay off from J, a length of line to any convenient scale, to represent the V^-J (this line should be laid off perpendicular to the radius of J).

By means of similar triangles, find the V^-bc .

Since the linear velocities of all points in the same link are directly proportional to their instantaneous radii, revolve K about \underline{ac} into the line of centers and after completing the triangle of which V^-bc is one side, lay off the V^-K .

28. Velocities of Points in Opposite Links.—Given the V^-J , Fig. 15, to find the V^-K with the link A stationary.

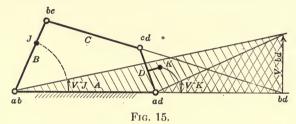

The links that must be considered are the two links containing the points and the stationary link, which in this case are $\frac{A}{ZZ}$, $\frac{B}{ZZ}$ and D, having centros $\frac{ab}{ZZ}$, $\frac{ad}{ZZZ}$ and $\frac{bd}{ZZZ}$. Since the link A is stationary, the centros of A will be stationary, viz., $\frac{ab}{ZZZ}$ and $\frac{ad}{ZZZ}$, and $\frac{bd}{ZZZ}$ is the common point, or the point common to B and D, and having the same linear velocity in each.

Revolve J around into the line of centers and lay off a line to any convenient scale to represent its velocity, then by means of similar triangles find the linear velocity of the common point bd. From this, find the linear velocity of K, after revolving it around into the line of centers.

29. Crossed Link Mechanisms.—Velocities of Points in Adjacent Links.—Let it be required to find the V^-K , Fig. 16, having given the V^-J with the link B stationary.


The links to be taken into consideration are A, $B_{\overline{z}}$ and C, having centros ab, ac and bc, of which ab and bc are stationary.

Lay off a line to represent the $V^{-}J$, and by means of similar

triangles find the V^-ac , the common point. Then revolve K about bc into the line of centers and by means of another set of similar triangles find the V^-K as shown.

30. Velocities of Points in Non-adjacent Links.—Let A, B, C and D, Fig. 17, be a crossed link mechanism in which it is desired to find the V^-K , a point in the link D, having given the V^-J a point in the link B, with the link A stationary.

The links that need to be considered are, $\frac{A}{ZZ}$, B and D, having centros $\frac{ab}{ZZ}$, $\frac{ad}{ZZ}$, and bd, in which $\frac{ab}{ZZ}$ and $\frac{ad}{ZZ}$ are stationary and bd is the common point. Notice that bd is located at the intersection of the links A and C, but of course there is no joint at that point, for if there were, the mechanism would be as one rigid link, as there could be no motion of any of the links.

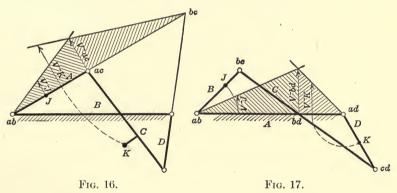


The link B rotates about the centro $\frac{ab}{ZZ}$, and as J is a point in the link B, it will rotate about $\frac{ab}{ZZ}$.

Revolve J into the line of centers and lay off a line to represent its linear velocity. From the V^-J , find the V^-bd by similar triangles. K rotates about the centro \underbrace{ad}_{ZZZ} as \underbrace{ad}_{ZZZ} is the point in A about which D rotates. Revolve K around \underbrace{ad}_{ZZZ} into the line of centers and find its linear velocity by similar triangles.


31. Slider Crank Mechanism.—Velocities of Points in Adjacent Links.—Let Fig. 18 be a slider crank mechanism in which the V^-K is desired, having given the V^-J with the link A stationary. The links to be considered are A, B and C, having centros AB, AB,

and bc, of which $\frac{ab}{22}$ and $\frac{ac}{22}$ are stationary and bc is the common point.

Lay off a line representing the V^-J and by similar triangles find the V^-bc . Then revolve K about ac to the line of centers and find its linear velocity.

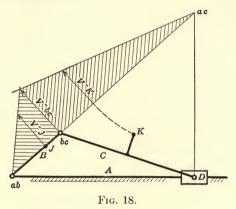

Notice that the above figure represents the crank, connecting rod and crosshead of an ordinary steam engine; the frame and crosshead guides being represented by the link A. Fig. 22, page 26.

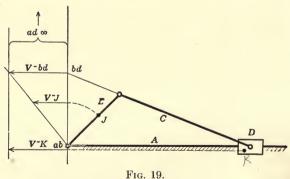

32. Velocities in Non-adjacent Links.—In the slider crank mechanism of Fig. 19 let the points J and K be in the links B and D respectively and the link A stationary.

The centros of the links $\frac{A}{ZZ}$, $\frac{B}{ZZ}$ and $\frac{A}{ZZ}$ and $\frac{A}{ZZ}$ and $\frac{A}{ZZ}$. Revolve

J about $ab \atop ZZZ$ into the line of centers and lay off a line to represent its linear velocity, then find the V^-bd , the common point.

The stationary centro $\frac{ad}{2Z}$ is at infinity, as it is the point in $\frac{A}{2Z}$ about which D rotates. The point K in being revolved about $\frac{ad}{2Z}$ into the line of centers describes a straight line instead of an arc, or it is an arc of infinite radius. It will be noticed that the V^-K is the same as the V^-bd , the common point.

The cases given above are but a few examples of the many that might arise. Remember that the velocities are the instantaneous linear velocities, or velocities for the positions of the links shown. For any other position of the links the velocities would be different. Even though the linear velocity of the point J remained constant, the linear velocity of the point K would change for every position of the links.

Problems


1. Take the link D stationary in Fig. 14 and assume the linear velocity of J in link A, to find the linear velocity of K in the link C.

2. Take the link C stationary in Fig. 17 and find the V^-K , assuming the V^-J .

3. Take the link B stationary in Fig. 18 and J in the link A. Assume the V^-J and find the V^-K .

4. (a) Locate all of the centros.

(b) With the link A stationary and the link B making two revolutions per second, find the instantaneous linear velocity of K when the angle 1-2-7=60 degrees.

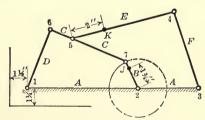

Problem 4.

Data: Length 1-2= $7\frac{7}{8}$ "; 2-3= $6\frac{1}{8}$ "; 3-4= $5\frac{7}{8}$ "; 4-5= $6\frac{5}{8}$ "; 6-1= $5\frac{1}{4}$ "; 6-7= $5\frac{1}{2}$ "; 6-5= $1\frac{1}{2}$ "; 7-2=2".


Angle 1-2-7=60 degrees.

Note.—Make a full-size drawing, using pencil lines only. Draw circles of $\frac{3}{32}$ in. diameter at all pin joints. In plotting the velocity of J use a scale of I in. = 10 in. Put statement of problem in upper right-hand corner of sheet. Time, 2 hours.

5. (a) Locate all of the centros.

(b) In the beam engine mechanism as shown, with the link A stationary and the velocity of the crosshead F equal to 4 ft. per second, find the revolutions per minute (R.p.m.) of the crank with the crank angle as shown.

Data: Length $1-2=1\frac{1}{4}$ "; 2-3=6"; 3-4=4"; 4-5=3"; $5-6=3\frac{3}{4}$ ".

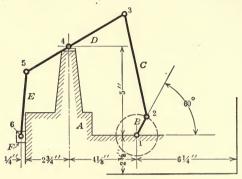


Problem 5.

Note.—Make a full-size drawing, using pencil lines only. Draw circles of $\frac{3}{32}$ in. diameter at all pin joints. Plot the velocity vector to the scale 1 in. = 3 ft.

6. (a) Locate all of the centros.

(b) In the valve gear mechanism as shown, what is the linear velocity of the valve in feet per minute, when the eccentric is making 15 R.p.m. for the linkage position when the angle 2-1-4=30 degrees.

Data: Length $1-2=1\frac{1}{2}$ "; 2-3=12"; $3-4=1\frac{3}{4}$ "; $4-5=1\frac{1}{4}$ "; $5-6=3\frac{3}{4}$ ".

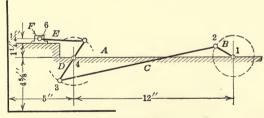

Problem 6.

Note.—Make a full-size drawing, using pencil lines only. Draw circles of $\frac{3}{32}$ in. diameter at all pin joints. Plot the velocity vector 1 in. = 5 ft. Time, 2 hours.

7. In the Thompson indicator motion mechanism, Fig. 46, assume the velocity of the piston rod connection E and find the velocity of the pencil point T.


8. In Fig. 43, assume the velocity of the point T and find the velocity of a point in the middle of the link B.

CHAPTER IV

VELOCITY DIAGRAMS

- **33.** Velocity Diagrams.—It is often desirable to find the velocity of a point for more than one instant, and this may be done by means of velocity triangles. There are two ways of representing the velocity, depending upon whether the point in question has a motion of translation or rotation, the former being shown by a linear velocity diagram and the latter by a polar velocity diagram.
- **34.** Linear Velocity Diagram.—A linear velocity diagram is one in which the velocities are plotted by using rectangular coordinates.

In the several positions of the block A, shown in Fig. 20, let a length of line represent the instantaneous velocity of a point in

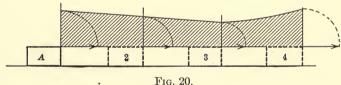

1 1G. 20.

the block, for each of these positions each line being drawn to the same scale. Revolve each velocity around the point, perpendicular to its direction of motion, and through each of the points cut off on the perpendiculars, draw a smooth curve, which is the velocity diagram.

To find the linear velocity of the block at any intermediate position, draw a line through the diagram perpendicular to the direction of motion, and the length of line cut off between the upper and lower sides of the shaded portion will be the linear velocity for that position.

35. Polar Velocity Diagram.—The polar velocity diagram differs from the linear velocity diagram in that polar coördinates

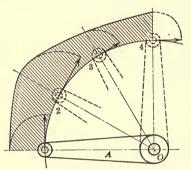


Fig. 21.

are used instead of rectangular coördinates.

In Fig. 21 let A be a crank revolving about the center O, and let the velocity of the outer end in its various positions be represented by a length of line, each of these lengths being drawn to the same scale. About the point in its several positions, revolve the velocity into the radius and draw a smooth curve through the points cut off on the radii.

The velocity at any intermediate point can then be assumed to be equal to the length of radial line cut off between the sides of the diagram.

36. Velocity Diagram of Engine Crank and Crosshead.—In Fig. 22 let O be the crank shaft, OA the crank, AB the connecting

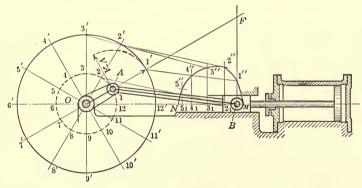


Fig. 22.

rod, and B the crosshead of an ordinary steam engine. If we know the length and revolutions per minute of the crank, its linear velocity can be found from the equation $V^- = 2\pi \times OA \times n$ (Art. 14).

Then if the length of the connecting rod is also known the various instantaneous velocities of the crosshead can be found.

The instantaneous velocities of the piston will be the same as those of the crosshead.

The angular velocity of the crank can be assumed to be constant throughout the revolution.

Draw the crank pin circle, Fig. 22, and divide it into any convenient number of parts as 12, corresponding to different crank positions. Find the extreme crosshead positions by taking O as a center and radii, length of connecting rod plus length of crank, and length of connecting rod minus length of crank, giving M and N respectively. For the intermediate positions of the crosshead take a radius equal to the length of connecting rod and centers at 1, 2, 3, 4 . . . 12 on the crank pin circle and strike arcs cutting the center line of the crosshead in B, 2_1 , 3_1 , 4_1 and 5_1 .

Lay off a length of line, drawn to any convenient scale to represent the V^- of the crank pin A, and revolve it around into the radius to get a point on the polar diagram.

Since we assumed the angular velocity of the crank constant for all parts of the revolution, the linear velocity of any point will also be constant, and the polar diagram becomes a circle, the radius of which is the length of the crank plus the length of line representing the linear velocity of the crank pin. Knowing the direction of motion of each end of the connecting rod, its instantaneous center F can be found by drawing lines perpendicular to the direction of motion and their intersection will give the instantaneous center or centro (Art. 21).

The linear velocity of the crosshead end of the connecting rod will be to the linear velocity of the crank pin end directly as their instantaneous radii, or

$$\frac{V^-B}{V^-A} = \frac{BF}{AF}$$
 or $V^-B = \frac{BF}{AF} \times V^-A$

Instead of locating the instantaneous center of the connecting rod for each of its positions, we may draw through the various points on the polar diagram, 1', 2', 3' . . . 12', lines parallel to the connecting rod in its several positions, and the lengths of lines cut off on the perpendiculars drawn through the crosshead in its various positions gives the linear velocities of the crosshead B-1'', $2_1-2''$, etc. This is true because a plane passed through a triangle parallel to the base cuts off proportional parts from the

other sides, and since the part cut off on one side will be the V^-A , the part cut off on the other side will be the V^-B .

After locating the points 1", 2", 3" . . . 6", draw a smooth curve through them. This curve will be the linear velocity diagram for the crosshead. The curve above and below the line is symmetrical, so that it is not necessary to draw the lower portion.

37. Comparison of Velocity Diagrams.—In order to compare the linear velocity of the crosshead with that of the crank pin so that the difference in their velocities can be seen at a glance, they can be superimposed, one on the other.

In Fig. 23 draw a circle of radius equal to the linear velocity of the crank pin, and divide it into the same number of equal parts

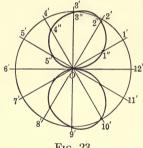


Fig. 23.

as the crank pin circle of Fig. 22, in this case 12. Lay off on the first crank position, O1'' = B1'' from Fig. 22 and on the second crank position, $O2'' = 2_12''$. etc., all the way around, then draw a smooth curve through the points 1". 2". 3"... 12" giving the velocity diagram of the crosshead. The distance 1"-1' is the amount of linear velocity of the crank pin in excess of that of the crosshead. In some parts of the revo-

lution the linear velocity of the crosshead is greater than that of the crank pin. This occurs when the instantaneous radius of the crosshead is greater than that of the crank pin.

38. Variable Motion Mechanism.—If the horizontal center line of the crosshead does not pass through the center of the crank as in Fig. 24, the linear velocity diagram for the crosshead will not be the same for the forward and back stroke. Let O be the center of the crank OA and MN the center line of the crosshead travel. The points M and N can be found by taking O as the center and radii equal to the sum and difference of the lengths of connecting rod and crank respectively. Draw a line through M and O, cutting the crank pin circle at R, and through N and O, cutting the crank pin circle at S. R and S then will be positions of the crank pin when the crosshead is at each end of its stroke.

If the crank moves in a clockwise direction as indicated by the arrow, the crosshead will move from M to N while the crank is going through the angle ROS, which is less than 180°. The crosshead moves from N to M while the crank moves through the angle SOR which is more than 180° , so that if the linear velocity of the crank pin is constant throughout the revolution, the crosshead will have to move from M to N at a faster rate than it does when travelling from N to M, and this is shown by the linear velocity diagram of the crosshead, the area of the curve above the horizontal line MN being greater than the area of the curve below the line.

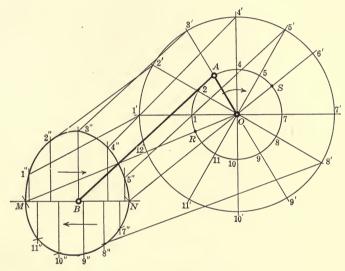


Fig. 24.

The construction of the velocity diagram is similar to that of Fig. 22.

39. Variable Rotary Motion Mechanism.—By using the same combination of links as shown in Fig. 22, but by making the crank stationary, and using the frame as one of the moving links and also changing the proportions of the links another variable motion mechanism can be obtained.

Let A, B, C and D of Fig. 25 be the links, with A stationary. Assume that the end of the revolving arm B, which is fastened to the sliding block, has a constant velocity, represented by the length of line L-R, laid off at right angles to B. To find the linear velocity of K, a point in the link D, when the mechanism is in the position shown by the full lines.

The velocity of K can be found by the method of instantaneous centers as was done in a previous chapter, but a more simple way where the velocity is to be found for a number of different positions is as follows.

The length of line L-R represents the velocity of the sliding block C, turning about the center ab. To find the velocity of C

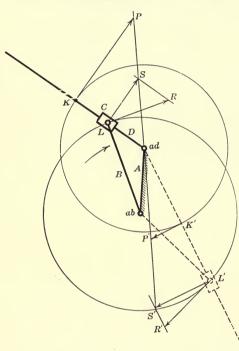


Fig. 25.

turning about the center ad, resolve L-R into two components, one L-S at right angles to D. and the other R-S parallel to D. The length of line L-S represents the velocity at which the block is turning about the center ad. while R-S, is its sliding velocity along D. Knowing the turning velocity of the sliding block around the center ad. we can find the turning velocity of K around the same center by means of similar triangles, by drawing the line ad-P through S, and K-P parallel to L-S. The length of line K-P then repre-

sents the linear velocity of K to the same scale that L-R represents the linear velocity of the end of B, since linear velocities of points in the same link are directly proportional to their radii. In the dotted positions of the links is shown the velocity of K for the same length of line representing the linear velocity of L.

The link B is called the constant radius arm since its length does not change and the center about which it rotates is called the constant radius arm center. The link D is called the variable radius arm, since its radius from the sliding block to the center ad

is continually changing. Its center is called the variable radius arm center.

40. Whitworth Quick Return Motion Mechanism.—By attach-

ing a connecting rod to the link D, Fig. 25, and a crosshead, or ram to the connecting rod, a mechanism, known as the Whitworth Quick Return Motion is obtained. It is shown in simple diagrammatic form in Fig. 26, while Fig. 27 shows a form used in machine tools.

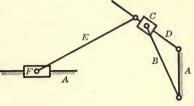


Fig. 26.

The method of laying out the velocity diagrams can best be shown by working out a problem.

Problem.—Design a Whitworth quick return motion mechanism for a shaper, and construct the velocity diagram of the ram for the maximum stroke.

Velocity ratio forward to return stroke 2:1.

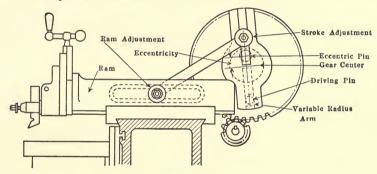


Fig. 27.

Distance between constant radius arm center and variable radius arm center 2 in.

Center of variable radius arm center above center line of ram $2\frac{1}{2}$ in.

Length of stroke—maximum, $5\frac{1}{2}$ in.

Length of stroke-minimum, 4 in.

Length of connecting rod, 12 in.

Lay out the maximum stroke AB, Fig. 28, and draw the horizontal line CD at a distance above AB equal to the height of the variable radius arm center above the center line of the ram.

With A as a center and a radius equal to the length of the connecting rod, draw the arc mn, and with the same radius and center B, draw the arc rs.

Locate O, the center of the variable radius arm by trial, on the line CD, by taking O as the center of a circle, the circumference of which will be tangent to the arcs mn and rs.

Through A and O draw a line intersecting the arc mn at K, and one through B and O intersecting the arc rs at K'. Then OK and OK' are the positions of the variable radius arm when the ram is at the extreme ends of its stroke A and B respectively.

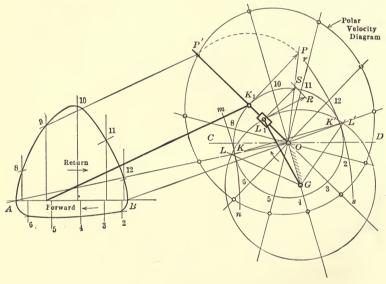


Fig. 28.

Draw a line KK' and through O, perpendicular to KK' draw the line OG of indefinite length. Locate the constant radius arm center G on this line at the given distance from O, the variable radius arm center.

Next locate the positions of the constant radius arm when the ram is at each end of its stroke.

In this problem the velocity ratio is 2:1 or it takes twice as long for the forward stroke as the return stroke, and since the constant radius arm revolves at a constant velocity, it will take 240° of revolution for the forward stroke and 120° for the return stroke.

With G as a center lay off two lines symmetrical with OG, making an angle of 120° with each other. These lines will intersect the lines through OA and BO at L and L' respectively, giving the positions of the constant radius arm when the ram is at the ends of its stroke.

With G as a center and radius GL describe a circle, which will be the path of the end of the constant radius arm.

Divide the variable radius arm circle up into any convenient number of equal parts, as 12, symmetrical with the line OG, to represent different positions of the variable radius arm and find the corresponding positions of the ram by taking centers at 1, 2, 3 . . . 12, and a radius equal to the length of the connecting rod and striking arcs cutting the line AB.

Since the velocity of the constant radius arm is constant for all parts of the revolution we may represent it by a line of any convenient length. Let L_1 -R represent the velocity of the end of the constant radius arm, laid off at right angles to the radius. To find the V^-K , resolve L_1 -R into two components (Art. 39), one L_1 -S perpendicular to the variable radius arm K_1O and the other R-S, parallel with it. The component L_1 -S is the linear velocity with which L_1 is turning about the center O, and the V^-K_1 which is turning about the same center, is found by similar triangles and is equal to K_1 -P. Revolve P around P' to get a point on the polar velocity diagram and through P' draw a line parallel to the connecting rod, getting the point 9 on the linear velocity diagram of the ram.

Repeat the process for each of the other points by using the same length of line to represent the linear velocity of the constant radius arm, resolve it into its two components, find the velocity of the joint of the connecting rod and variable radius arm, and from that the velocity of the ram.

After completing the diagram it will be noticed that the velocity for the forward stroke of the ram is very much more constant than for the return stroke.

The minimum stroke of the ram is obtained by moving the end of the connecting rod K_1 , toward O until the ram moves through the required minimum stroke. The radius OK_1 will not, however, be one-half of the stroke because O does not lie on the line AB.

It will be seen from the figures illustrating this mechanism that

the constant radius arm and the variable radius arm, both describe complete circles.

42. Oscillating Arm Quick Return Motion Mechanism.—By using the same combination of links as in the Whitworth quick return motion mechanism, but with different proportions, a mechanism known as the oscillating arm quick return motion can be obtained.

Let Fig. 29 represent it in the same manner that Fig. 26 represented the Whitworth quick return motion. Note that the distance between the fixed centers is much greater and that the variable radius arm D is much longer than the constant radius arm, so that while the constant radius arm revolves in a complete circle, the variable radius arm oscillates. The angle through

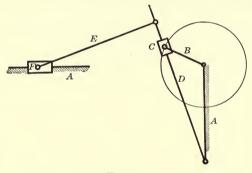


Fig. 29.

which it oscillates is found by drawing lines from the variable radius arm center, tangent to the circle described by the end of the constant radius arm.


Except for the difference noted, the method of laying out the velocity diagram of the ram is similar to that of the Whitworth quick return motion.

Problems

- 1. Make sketches showing the essential difference between the Whitworth quick return motion mechanism and the oscillating arm quick return motion mechanism.
- 2. Is the velocity diagram of the crosshead, Fig. 22, symmetrical about a vertical axis? Why?
- 3. Make a sketch showing how the velocity diagram for the crosshead is obtained when its path of travel is above the center of the crank.

4. (a) Lay out the velocity diagram of the ram for the oscillating arm shaper.

(b) How many R.p.m. must H make in order that the maximum cutting speed be 60 ft. per minute? Diameter of G=12''. Diameter of H=4''.

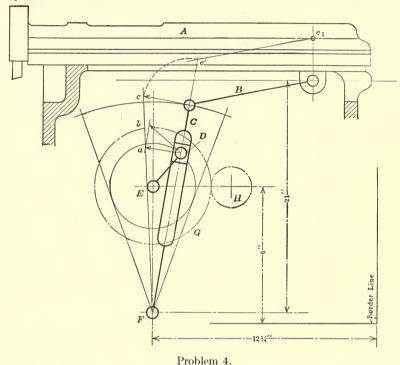

Data: Length of oscillating arm C=20''. Length of link $B=9\frac{1}{2}''$. Maximum length $DE=4\frac{1}{4}''$. Time ratio (maximum stroke) =5:3.

Note.—Make a skeleton pencil drawing, half size. Lay off the line representing the velocity of $D = \frac{DE}{3}$ (not half size).

Put no statement of problem or data on sheet, but this title:

LAYOUT OF VELOCITY DIAGRAMS

FOR


OSCILLATING ARM QUICK RETURN MECHANISM Time, 8 hours.

5. (a) Lay out the velocity diagram of the ram for the oscillating arm shaper.

(b) If C makes 50 R.p.m., what will be the maximum cutting speed?

BED BEF


Data: Diameter of gear=14"; diameter of pinion $c=4\frac{1}{4}$ "; ratio of strokes 1: 2. DE=5".

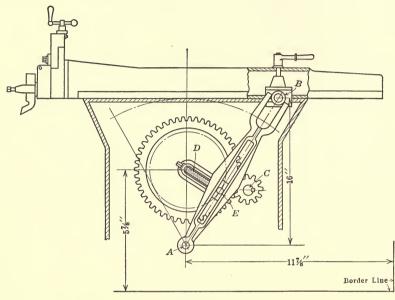

Problem 5.

Note.—Make a pencil drawing, half size. Lay off line representing the linear velocity of the pitch point of the gears = $1\frac{1}{2}$ " (not half size). The sub-title is the same as for Problem 4. Time, 8 hours.

6. (a) Lay out the linear velocity diagram of the crosshead in the crank, connecting rod and crosshead mechanism.

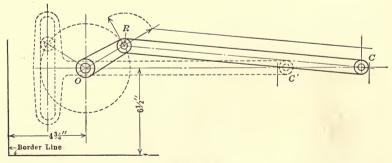

Problem 6.

(b) Lay out the linear velocity diagram of the crosshead in the crank and Scotch crosshead mechanism.


Data: Length OR = 3''; length RC = 12''; hub $O = \frac{5}{8}''$ diameter.

Hubs R and $C = \frac{1}{2}$ diameter; pins R and $C = \frac{5}{16}$ diameter.

Pin $O = \frac{3}{8}$. Take the velocity vector equal to $1\frac{1}{2}$.

Note.—Make a full-size pencil drawing, superimposing the linear velocity diagrams one over the other. Time, 3 hours.

7. Lay out the linear velocity diagram of the ram of the shaper, using the Whitworth quick return motion mechanism.

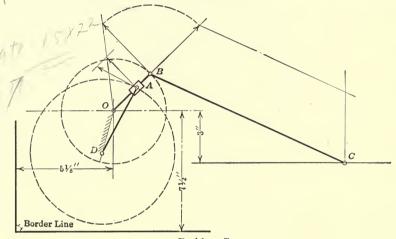

Problem 7.

Data: Length OB = 3''; length $DA = 4\frac{1}{8}''$; length $OD = 2\frac{1}{8}''$; length BC = 12''. Take the length of the velocity vector equal to $1\frac{13}{16}''$.

Note.—Make a full-size pencil drawing. Sub-title similar to that of Problem 4. Time, 8 hours.


- **8.** Assume the linear velocity of the block C (Fig. 29) and find the linear velocity of a point in the middle of the link E.
- **9.** Assume the linear velocity of the ram F (Fig. 29) and find the linear velocity of the sliding block C.
- 10. What is the essential difference between the Whitworth quick return motion mechanism (Fig. 26) and the oscillating arm quick return motion mechanism (Fig. 29).
- 11. A plank 10 ft. long leans against the wall. The foot of the plank is drawn out at a constant rate of 30 ft. per minute. At the instant the foot of the plank is 6 ft. from the wall, find (a) at what velocity the upper end is moving, (b) at what velocity the middle point of the plank is moving and in what direction, (c) what point in the plank has the least velocity, its amount and direction.
- 12. Referring to Fig. 23, why are the linear velocity diagrams of the crosshead not symmetrical about the vertical center line 3'-9'?

CHAPTER V

PARALLEL AND STRAIGHT-LINE MOTION MECHANISMS

- 43. Parallel and Straight-line Motion Mechanisms.—A parallel motion mechanism is a combination of links so constructed that when one point in it moves in any path, another point will move in a parallel path. A straight-line motion mechanism is a combination of links so constructed that some point or points in one of the links will trace a straight line.
- **44.** Parallelogram.—The parallelogram is one of the most simple mechanisms for giving an exact parallel motion. It consists of four links, the lengths of opposite ones being equal.

Fig. 30 is a parallelogram in which D, the joint of the two links CD and AD, is fixed.

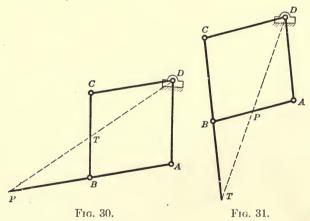


Take a point P on the link AB extended and draw the line PD, cutting the link BC at T, then in the triangles PBT and PAD.

$$\frac{BT}{AD} = \frac{PB}{PA}$$
 or $BT = \frac{PB}{PA} \times AD = a$ constant.

Therefore T is always at the same point on BC for a given position of P on the link AB.

Also, $\frac{DP}{DT} = \frac{AP}{AB}$, which is constant for all positions of the linkage so that if T is the tracing point and is made to follow any outline, the pencil point P, will trace a similar outline, only on a larger scale. If the link BC is extended and T taken on the extension as in Fig. 31, P will fall between D and T, and P will then trace an outline smaller than that traced by T.

By moving T along the link BC, any ratio of size can be obtained the ratio being $\frac{DP}{DT}$.

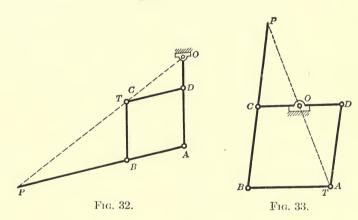

It will be noticed in these figures that the fixed, pencil and tracing points lie on the same straight line. This must always be true.

Fig. 32 shows the fixed point O on an extension of one of the links, while in Fig. 33 it is between the ends of the links. The same principles hold good for these cases as in the first two considered.

In Fig. 33 the ratio $\frac{OP}{OT}$ =1, so that P traces an exact duplicate of that traced by T.

These mechanisms as shown in Fig. 34 are used for copying and enlarging maps, engravings, etc.

In the latter case the pattern is usually made to an enlarged scale to eliminate errors, the engraving tool being an end milling cutter revolving at a high speed, is made to produce the similar pattern reduced or enlarged as the case may be.1


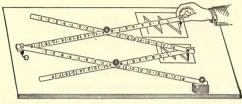


Fig. 34.

- 45. Parallel Ruler.—Fig. 35 shows the application of the parallelogram to the parallel ruler for drawing parallel lines.
- 46. Roberval Balance.—By adding a fifth link to the parallelogram, a double parallelogram is obtained in which an application

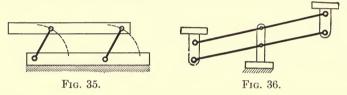


is found in the druggists' balance of Fig. 36. By placing the support midway between the scale pan uprights, the load will be the same on each pan when they are at the same level.

47. Drafting Board Parallel Mechanisms.—There are many of these devices for guiding the straight-edge with a parallel motion, only a few of which will be shown here.


In Figs. 37 and 38 the straight-edge is made so that it projects beneath the board at the ends, as well as being on top.

In Fig. 37 one cord is fastened to the straight-edge where it projects beneath the board at a, carried up and around one pulley,

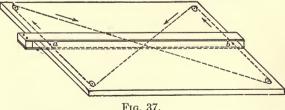


¹ For a description of an engraving machine see Machinery of April, 1911, page 602.

then diagonally down across the board around a second pulley and fastened to the straight-edge at b. Another cord beginning at b is carried up and around a pulley then diagonally across the board around a second pulley and up to a. Fig. 38 is somewhat similar except that there are two pulleys each at a and b and the cords are fastened to the corners of the board.

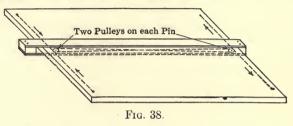

In Fig. 39, six pulleys are required, but the cord is continuous. Fig. 40 shows the "Universal Drafting Machine." This machine

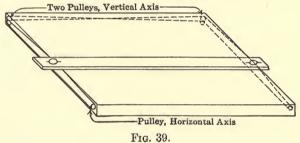

takes the place of the tee-square, scales, triangles and protractor. The mechanism consists of two sets of parallelograms, so arranged that in no matter what position they are placed, the scales will be

parallel to their original positions. The head to which the scales are connected is movable about its center, thus allowing any angle of the scales with the horizontal, the most common angles being obtained by a pin dropping into holes, and the others by means of a vernier, the head being clamped by a thumb screw.

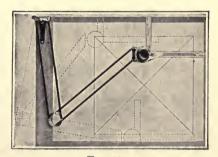


Fig. 40.

48. Straight-line Motion Mechanisms.—A straight-line motion mechanism is one that will cause some point in the mechanism to move in a straight line without the aid of guides.

It was necessary to use them originally when it was desired to make some part move in a straight line, as for example, the crosshead of an engine, because machine tools were not far enough developed to make plane surfaces.

Most of the so-called straight-line motions are only approxi-

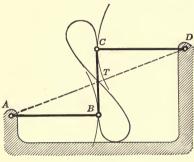


Fig. 41.

mate, while there are a few that are mathematically correct.

49. Watt's Straight-line Motion.—This is the best known and most widely used of all the straight-line motions. In Fig. 41, it is shown in its simplest form. In the figure the connecting link BC is shown perpendicular to AB and CD when they are parallel,

but while this is the best proportion, it is not necessary that they be so. The tracing point T is located on BC, where a line joining A and D intersects it.

Fig. 42 shows the application of the Watt straight-line motion in combination with the form of parallelogram shown in Fig. 32,

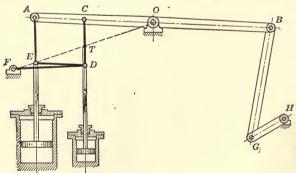


Fig. 42.

to a walking beam engine. O is the center of the walking beam, F, a point on the frame and H, the crank shaft bearing. The

links OC, CD and DF compose the Watt motion mechanism, the point T, moving in a straight vertical line, while the links OA, AE, ED and DC make up the elements of the parallelogram.

The point T is found as in Fig. 41 and E is taken on a line drawn through O and T. In practice OC and FD are usually taken as one-half of OA. A pump rod is usually attached to link CD at T as shown.

50. Scott Russell Straight-line Motions.—In this mechanism shown in Fig. 43 there are two links A and B and the sliding block


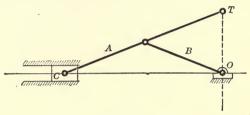


Fig. 43.

C. B is one-half the length of A and is fastened to A at its middle point. Take a center at the intersection of A and B and a radius of length B; strike an arc which will pass through the points T, O and C, so that the angle TOC is a right angle, and T will move in a straight line. This is an exact straight-line motion, but it requires the sliding block moving between plane guides.


Fig. 44 shows a modification of the mechanism, in which the link D is substituted for the sliding block. In this case, the longer the arm D, the more nearly will T move in a straight line. This is sometimes known as the "grass-hopper motion."

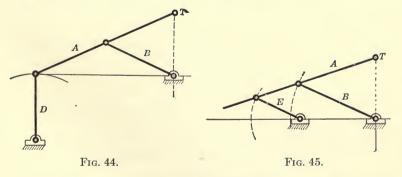

In Fig. 45 is shown a second modification of the mechanism


that will give an approximate straight line. In this case, the arm E is substituted for D of the previous figure.

51. Thompson Indicator Motion.—Fig. 46 shows the application of the Scott Russell motion to a Thompson steam engine indicator. The pencil at T, which traces the diagram on an oscillating drum, is guided by a Scott Russell straight-line motion, consisting of the links OA, AT and CD. The length of link BE is determined by drawing a line through O and T, and noting the point E, where it cuts the center line of the cylinder. If instead of the link CD, the link FE were used, the linkage would then be

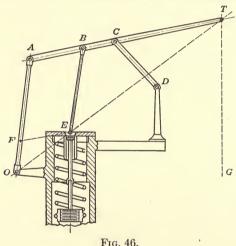

the parallelogram shown in Fig. 32. This link is impossible, however, as it would cut the side of the steam cylinder of the indicator.

While the pencil point does not move in an exact straight line TG, the error is slight.

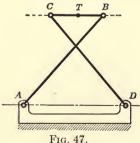


52. Tchebicheff's Approximate Straight-line Motion.—This mechanism devised by Prof. Tchebicheff of Petrograd, is shown in Fig. 47. The proportions of the links are such that AB = CD=5, BC=2 and AD=4. The tracing point T in the middle of BC moves in an approximatestraight line parallel to AD.

¹ For various other forms of indicator mechanisms, together with the proportions as made by the various manufacturers, see "Machine Design," Part 1, by Forrest R. Jones,

53. Robert's Approximate Straight-line Motion.—Fig. 48

shows this mechanism which consists of two equal links AB and DE and a triangular-shaped link BTD in which BT = TD = AB, and $BD = \frac{AE}{2}$. The tracing point T closely follows the straight line AE.

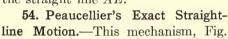

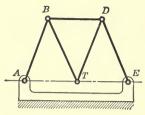


Fig. 48.

49, consists of seven movable links and one stationary link. proportions are such that AO = BO; AC = BC = BT = AT, and CD

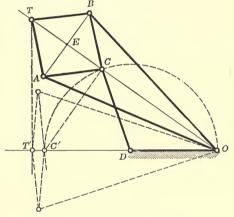


Fig. 49.

Then O, C and T will always lie on the same straight line, and

$$\overline{OB}^2 - \overline{OE}^2 = \overline{BT}^2 - \overline{TE}^2$$

or transposing

$$\begin{split} \overline{OB}^2 - \overline{BT}^2 &= \overline{OE}^2 - \overline{TE}^2 \\ &= (OE + TE)(OE - TE) \\ &= OT \times OC \end{split}$$

Therefore $OT \times OC$ is a constant.

Now suppose that the linkage is moved until C falls at C' and let T' be the new position of T.

Then we have $OC' \times OT' = OC \times OT$ or

$$\frac{OC'}{OC} = \frac{OT}{OT'}$$

And OD = DC = DC' so that O, C and C' lie on a semi-circle which makes the angle OCC' a right angle.

In the triangles COC' and TOT', the angle TOT' is common, and since the sides are proportional, the triangles are similar.


Thus since the angle OCC' is a right angle, the angle TT'O is also a right angle.

In the same way it can be shown for any other position of the linkage, that the line TT' is perpendicular to OT', and therefore T moves in a straight line.

In applying this motion to engines, the piston rod is fastened to T and this takes the place of the usual crosshead and guides.

If the link DC is not made equal to DO, T will describe a circular $\operatorname{arc.}^1$

If $\frac{CD}{OD}$ <1, the arc described by T will be concave toward O, while if $\frac{CD}{OD}$ >1, the arc will be convex toward O.

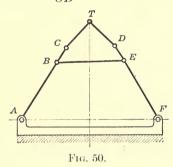


55. Bricard's Exact Straightline Motion.—If the linkage of Fig. 50 is made of the proportions 2 such that AC = DF = a; CT = TD = b; AF = c; $BC = DE = \frac{b^2}{a}$, and $BE = \frac{bc}{a}$, the point T will describe a straight line perpendicular to and bisecting AF.

Problems

- 1. With the arrangement of the links of a parallelogram as shown in Fig. 30, let DA = 10 in.; DC = 6 in.; CT = 4 in. Will the copy be larger or smaller than the original and how much?
- 2. Prove that a point in the Peaucellier cell moves in an exact straight line
- Make sketches of two approximate and two exact straight-line motion mechanisms.
- 4. Make sketches of as many approximate straight-line motion mechanisms as you can.
 - 5. Make a sketch of the Thompson indicator motion mechanism.
 - ¹ For the proof of this see "Kinematics of Machines," by R. J. Durley.
- ² For these proportions and the proof see "Kinematics of Machines," by R. J. Durley, page 94.


- 6. Make sketches of the different kinds of parallelograms, showing the fixed, pencil and tracing points.
- 7. Design a pantograph to reduce the motion of the crosshead of an engine that has a stroke of 18 in. (F to G) to 4 in., so that a steam engine indicator may be operated from it. The distance from the fixed point D to the center of the crosshead connection P, measured in a line vertical to the crosshead guides is 19 in.

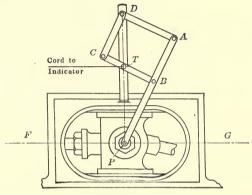

Problem 7.

Note.—Make a pencil drawing half size. Time, 2 hours.

8. Design a straight-line motion mechanism that will reduce the motion of the crosshead of an engine that has a stroke of 16 in., to 4 in., so that a steam-engine indicator may be operated from it.

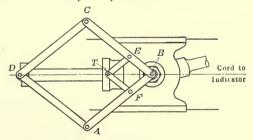

Problem 8.

Data: The point D is fixed to the engine frame, while the point B is fixed to the engine crosshead. The indicator cord is fastened to the point T. Note.—Make a pencil drawing, half size. Time, 2 hours.


CHAPTER VI

CAMS


- 56. Definition of Cam.—A cam is commonly a plate or a cylinder that transmits motion to its follower by means of its edge or a groove cut in its surface. The cam is a very important part in the construction of many machines, especially those of the automatic type such as printing presses, screw machines and shoe machinery. Their shapes are as numerous as the uses to which they are put, so that only some of the most common forms will be considered.
 - **57.** Cam and Follower.—The cam mechanism usually consists of two elements, the cam and the follower. The cam is usually the driver.
- 58. Contact between Cam and Follower.—Theoretically the contact between a cam and its follower is a point or a line (see Fig. 51). This is impracticable for wear, so a roll is generally used as in Fig. 52. The roll turns on a pin that is rigidly fastened to the follower, which gives rolling contact between the roll and the face of the cam and a sliding contact between the roll and the pin. In this way nearly all the wear will be on the pin which is easily replaced. Rolls are ordinarily from $\frac{1}{2}$ inch to 2 inches in diameter. When the rise is small and the load is light, a flat face follower, as shown in Fig. 53 may be used.
- 59. Theoretical Cam Curve.—The theoretical cam curve (often called the pitch line) is the cam curve that would give the follower the desired motion, if the contact between the cam and the follower were a point or a line. See Fig. 51. In this case the theoretical curve and the working curve would be identical.
- 60. Working Cam Curve.—The working curve is the curve which gives the desired motion to the follower when contact between the cam and the follower is made by other than point or line contact. This is accomplished by the use of a roll follower or by a flat-face follower.

CAMS 49

61. Base Circle.—The base circle is a circle with its center at the center of the cam shaft and a radius equal to the shortest distance to the theoretical cam curve. The cam is laid out from

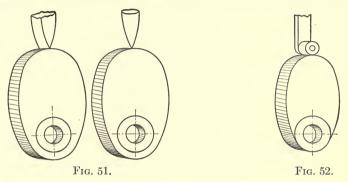

the base circle. In choosing the size of the base circle it should be taken large enough to insure an easy motion to the follower, the larger the base circle, the easier the follower's motion will be for any given rise in any given angle of rotation of the cam, as shown in Fig. 54.

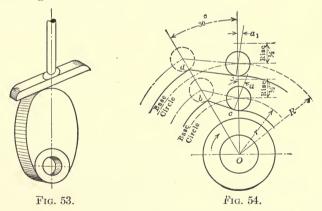

Let O be the center of the cam shaft and the angle through which the cam turns equal 30° to raise the roll follower $\frac{1}{2}$ inch.

It can be seen that the line d-e representing the rise when using the base circle of radius R is more gradual than the rise represented by the line b-c, using the base circle of radius r. Also note that the *pressure angle a* is greater than the pressure angle a_1 .

On the other hand, the larger the base circle, the larger the resulting cam will be, and the designer often has to make the cam small in order to get it into a certain space, so that it is largely a matter of judgment as to how large to make the base circle, but it should be large enough to leave plenty of stock around the cam shaft.

When using a small base circle and a large rise of follower in a small angle of revolution of cam, a difficulty that is apt to be

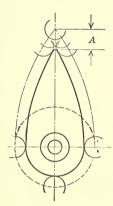


Fig. 55.

encountered is shown in Fig. 55. The theoretical curve is shown by the dot two-dash line, and the working curve is found, if using a roll follower, by taking centers of the roll on the theoretical curve and striking arcs, then drawing a smooth curve tangent to these arcs. This curve is the working curve. At the top of the cam shown in the figure, the distance from the center of the roll to the working curve, represented by A, is more than the radius of the roll, so that the follower would not be raised to the proper height by the difference between the radius of the roll and the distance A.

The remedy for this is to use a larger base circle or a smaller roll or both.

- **62.** Motions Used for Cam Curves.—The motions most commonly used in the layout of cams are *uniform*, *harmonic*, *uniformly accelerated* and *uniformly retarded*.
- **63.** Uniform Motion.—As applied to the motion of the cam follower, uniform motion means equal rises of follower in equal intervals of time, the time being measured by divisions or degrees on the base circle.

The heart-shaped cam of Fig. 56 is an example of this kind.

In this cam the base circle has a radius OA and the follower is to be raised a distance 08 in 180° of revolution of the cam with a uniform motion, and to drop a distance 08 in 180° of revolution with a uniform motion.

The method of laying out the curve is as follows:

Divide the semi-circumference of the base circle into any number of equal parts, in this case 8, and after laying out the rise .08 on any

CAMS 51

of the radial lines, divide it into the same number of equal parts as the semi-circumference of the base circle, and number the points on the rise to correspond to the divisions into which the base circle is divided.

The radial lines dividing the base circle can be assumed to be the different positions of the center line of the follower revolving around the cam, as it is not possible to revolve the cam on the paper. With a center O and radius O1 strike an arc intersecting O1' at 1'; with the same center and a radius O2 intersect O2' at 2'.

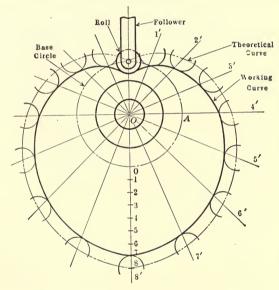


Fig. 56.

Do this for all the divisions of the rise, then draw a smooth curve through the points 1', 2', 3' . . . 8' which will give the theoretical curve for one-half of the cam. Since the second half of the cam is the same, if the second half of the base circle is divided into the same number of equal parts as the first half, the same points on the radial line can be used for finding the points on the theoretical curve.


If the follower were of the knife-edge type shown in Fig. 51, the curve just found would also be the *working curve*, but where a roll follower is used, it is necessary to find the working curve by taking a radius equal to the radius of the roll, and with centers on

the theoretical curve strike arcs, then draw a smooth curve tangent to these arcs which will give the working curve.

It will be seen from this, that for the same theoretical curve, an infinite number of working curves can be obtained by changing the diameter of the roll.

64. Harmonic Motion.—The projection on the diameter of a circle of a point moving with uniform velocity in the circumference is said to have harmonic motion. The application of this motion to the follower of a cam can perhaps best be seen by working out a simple problem.

Problem.—Design a disk edge cam that will give a reciprocating follower a harmonic rise of 4 in. in 180° of the cam's revolution,

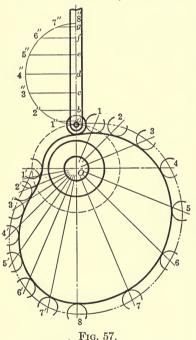

a harmonic drop of 4 in. in the next 90°, and a "rest" or "dwell" during the remaining angle. Cam to revolve counter-clockwise.

Lay out the base circle of radius 00, Fig. 57, and divide the 180° angle through which the cam is to revolve during the harmonic rise of the follower into any convenient number of equal parts, as 8, and draw radial lines through these points. On one of these radial lines lay off 08" from the base circle equal to 4 in. Take 08" as a diameter and construct a semi-Divide the circumference of the semi-circle into the same number of equal parts as the 180° of revolution, thus getting the points 1'', 2'', 3"...8". Through the points

1", 2", 3" . . . 8" drop perpendiculars to the diameter of the semi-circle to get the points a, b, c . . . g. The distances 0a, ab, bc, etc., will be the rise of the follower for equal angles through which the cam revolves. With O as a center and radii Oa, Ob, Oc . . . O8", strike arcs cutting O1, O2, O3, etc., at 1, 2, 3, etc.

CAMS 53

Draw a smooth curve through 1, 2, 3, etc., which will be the theoretical curve.

The next angle through which the cam turns for the 4 in. harmonic drop is 90°. Divide the 90° into any convenient number of equal parts. Since the drop is the same amount, as the rise, if the 90° is divided into the same number of equal parts as the rise, the same construction for the harmonic motion can be used.

During the remaining angle the follower is to remain at "rest," which means that during that part of the revolution the follower does not move toward or away from the center of the cam, so that the theoretical curve is the arc of a circle with a center at O and a radius O0, which in this case is the radius of the base circle. The working curve is found in the same way as was done in the previous case.

65. Uniformly Accelerated Motion.—This is motion with a uniformly increasing velocity. It is the easiest motion that can be given to the follower of a cam.

When the follower starts from rest, the formula $S = \frac{1}{2}aT^2$ is applicable, where S = space passed over; a = acceleration (a constant) and T = time.

Taking the successive angles through which the cam turns as the units of time, the space passed over in

1	unit of time, $S = \frac{1}{2}a = k$ (where k is a constant) Dis	fference	1k
2	units of time, $S=2a=4k$	"	3k
3	units of time, $S=4\frac{1}{2}a=9k$	"	5k
4	units of time, $S = 8a = 16k$	"	7k
	units of time, $S = 12\frac{1}{2}a = 25k$	"	9k

So that if the angle through which the cam turns, and the total rise of the follower during which it has uniformly accelerated motion are known, by dividing the angle up into any number of units, we can solve for k.


For example, if the total rise is 3 in. and there are five units of time in the angle, $k=\frac{3}{25}=0.12$ in. Lay off from the base circle on the line at the end of the first unit of time 0.12 in. and on the second line 0.12 in. $\times 4=0.48$ in., on the third 0.12 in. $\times 9=1.08$ in., on the fourth 0.12 in. $\times 16=1.92$ in., and on the fifth line 0.12 in. $\times 25=3$ in. These are the various distances that the

follower has been moved away from the base circle at the different intervals of time.

Instead of calculating this amount each time, a graphical method is often used and is much more simple.

It will be seen that in the series 1k-4k-9k-16k-25k, etc., the distance that the point has moved from the starting place at the end of successive units of time, that the distance moved during each successive unit of time is in the series 1-3-5-7-9, etc.

In order to apply this to the follower of a cam, a simple example will be used.

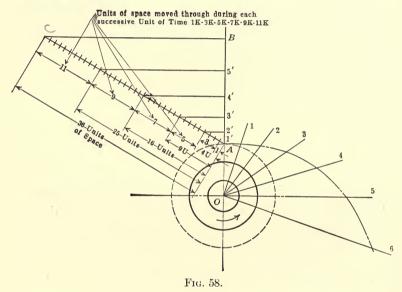

Let AB, Fig. 58, be the distance that a reciprocating follower is to be raised with a uniformly accelerated motion while the cam turns through the angle AO6. Divide the angle AO6 into any convenient number of equal parts as six, and on a line AC of indefinite length lay off units in the series 1-3-5-7-9-11, using as many numbers in the series as there are divisions in the angle, in this case six. Through the end division and through B draw a line; parallel to this line and through the other points on AC draw lines intersecting AB at 5', 4', 3', 2' and 1'. This gives divisions on AB that are proportional to those on AC.

With O as a center and radii O1', O2' . . . OB strike arcs

intersecting O1, O2 . . . O6 at 1, 2, 3 . . . 6. Through these latter points draw a smooth curve, which will be the theoretical cam curve.


- 66. Uniformly Retarded Motion.—This is the opposite of uniformly accelerated motion, and when applied to a cam curve, the series is laid off in the reverse order as 11–9–7–5–3–1. Very often both motions are combined so that the follower starts slowly and is uniformly accelerated for half of the rise and uniformly retarded for the second half, thus bringing it to rest slowly. In using the two the angle must always be divided into an even number of equal divisions, as there will be the same number accelerated as retarded. If there were eight equal divisions, the series would be 1–3–5–7–7–5–3–1, and should be laid out in the same way as was described for uniformly accelerated motion.
- 67. Cams with Off-set Followers.—In the cases considered thus far, the center line of the follower has been taken directly over the center of the cam shaft, but there are numerous cases where the follower is "off-set" and while the principle of laying out the curve is the same there are some minor differences which will be illustrated by a problem.

Problem.—Design a disk edge cam that will raise a reciprocating roll follower 3 in. with harmonic motion in 90° of the cam's revolution; the follower to remain at rest for 90°, and to drop with uniform motion in the remaining angle. Center line of follower $\frac{3}{4}$ in. to left of cam shaft center. Cam to turn clockwise.

Draw a base circle, Fig. 59, of any convenient radius and $\frac{3}{4}$ in. to the left of center of cam draw the center line of the follower, AB. With O as a center and a $\frac{3}{4}$ in. radius draw a circle. Divide the base circle by starting at the point where the center line of the follower cuts it, and draw lines through the divisions on the base circle and tangent to the circle of $\frac{3}{4}$ in. radius, which has already been drawn. These lines, as in the previous cases, represent different positions of the center line of the follower, as if it were revolved around instead of the cam turning.

Since the first angle is 90° , the last division will be horizontal, as the first one is vertical. Divide the 90° into any convenient number of equal parts as six, and lay off on AB from its intersection with the base circle, 3 in., the rise of follower. With 3 in. as a diameter draw the semi-circle, and divide the semi-circumference into six equal parts 1', 2', 3', 4', 5' and 6_1 . Project these

points on the diameter, giving the points 1_1 , 2_1 , 3_1 , 4_1 , 5_1 and 6_1 . With O as a center and a radius $O1_1$, strike an arc cutting the first division of time at 1, and so on for all of the points, always using the center O. Since the follower is to remain at rest during the next 90° , the theoretical cam curve will be the arc of a circle for 90° , with O as a center and a radius $O6_1$.

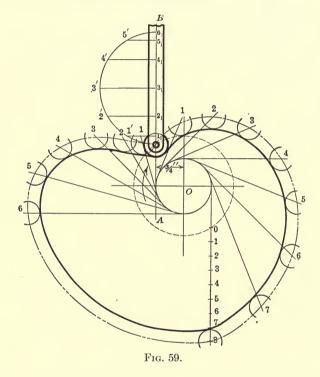


The cam has now turned through 180°, which leaves 180° to complete the revolution. Divide the 180° into any convenient number of equal parts, as eight, and as the drop is to be uniform, also divide the 3 in. into eight equal parts. Then with O as a center, find points on the theoretical curve as before.

68. The Flat Face Follower.—In any of the foregoing cams, the flat face follower can be substituted for the roll follower and the method of laying out the cam is exactly the same up to the point of laying out the working curve.

Using the same data as were used in Fig. 59, let us design the

cam for a flat face follower, the face of the follower being perpendicular to its center line.

Let us assume that the theoretical curve has already been found. To get the working curve draw lines 1a, 2b, 3c, etc., Fig. 60, perpendicular to the center line of the follower in its various positions. After these lines are drawn in they will form a series

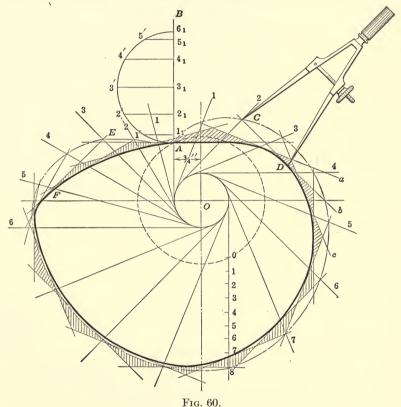

of triangles, which are shown cross-hatched in the figure. Draw a smooth curve tangent to the middle point of the base of each of these triangles, which will be the working curve.

If it is impossible to draw the curve tangent to all of the lines without crossing some of the others, the curve cannot be found, and a larger base circle must be taken.

The length of the flat face of the follower is found as follows:

With the dividers, measure the greatest distance from the point where the theoretical curve crosses the center line of the follower, as at C in Fig. 60, to the point D where the working curve is tangent to the follower face, this distance is the necessary length of the follower face to be laid off to the right of the center line of the follower. The length of the follower face to the left of the center line of the follower is found in a similar manner and is represented by the distance EF in the figure. These distances will be the

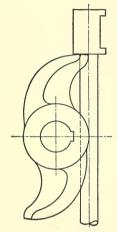


Fig. 61.

lengths of the follower face required on the right-hand and left-hand side of the center line of the follower respectively.

69. Involute Cams.—Involute camsso-called because the cam curve is usually of involute form. The follower is generally raised in less than half of the revolution of the cam and is brought back to the starting point by gravity or springs. Fig. 61 shows such a cam. One use for them is on ore crushers in stamp mills. Several cams are placed on the same shaft and so arranged that they will raise their respective rods at different times during the revolution of the The cam may be so designed that the follower is raised twice for each revolution of the shaft.

70. Method of Laying Out an Involute Cam.—An involute is the curve generated by a point in a taut string as it is unwrapped from a cylinder, or by a point on a straight edge that is rolled on a cylinder.

The circle from which the involute is developed is called the base circle.

Divide the angle ϕ , Fig. 62, through which the involute is to be developed into any number of preferably equal parts, as six and tangent to the base circle through these points draw the lines $1a, 2b, 3c \ldots 6f$. Where the lengths of divisions on the base circle are not too great ¹ the chord can be taken as the length of the arc. Lay off the chord 01 on 1a getting the point a. Twice

¹ If the lengths of divisions are taken equal to one-tenth the diameter of the base circle, they will be accurate to about one-thousandth of an inch per step.


the chord 01 on 2b, getting the point b, etc., then draw a smooth curve through the points a, b, c, \ldots etc., which will be the involute curve.

The equation for the involute is $\phi = \frac{\text{Length of are}}{\text{Radius of base circle}}$, the

angle ϕ being in circular measure.

In applying this to a cam follower, the amount that the follower is raised is equal to the length of the arc.

Problem. — Through how many degrees must an involute cam turn in order to raise its follower 3" if the diameter of the base circle from which the involute is developed is 5''?

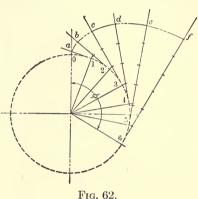

$$\phi$$
 (in degrees) = $\frac{3 \times 180}{2\frac{1}{2} \times \pi} = \frac{540}{7.85} = 68.79$ °.

The distance between the center of the cam and the center line of the follower should be equal to the radius of the base circle, so that contact between the cam and follower will be on the center line of the follower. The force exerted on the follower will then be more nearly all used in raising it.


CAMS WITH OSCILLATING FOLLOWERS

71. Cams with Oscillating Followers.—An oscillating follower is one in which points in it move in arcs of circles instead of in straight lines. Fig. 63 illustrates a roll follower cam of this type, while Fig. 64 shows a flat face or tangent follower cam.


The method of laying out a cam of this kind is somewhat more difficult than that for the reciprocating follower.

Let the angle ABC, Fig. 65, be the angle through which an oscillating follower is to be raised with a harmonic motion, while the cam turns through an angle of 120°; the follower to remain

at rest for 150° of revolution, and to drop with harmonic motion in the remaining angle. In this figure OA is the radius of the

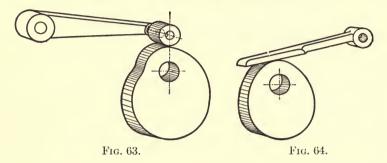

base circle, AB the radius of the follower arm, and the arc AC the path of the center line of the roll as the follower is raised.

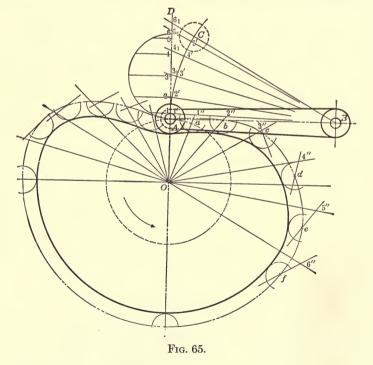

As the center of the roll moves along AC with a harmonic motion which cannot be laid out directly on the arc, it is neces-

sary to rectify the arc on a straight line and lay out the harmonic motion on that. Lay off on AD a length A6 equal to the arc AC. With A6 as a diameter lay out a semi-circle and divide it into any convenient number of equal parts as six then project these points on the diameter, getting the points 1, 2, 3, 4, 5 and 6. Lay off these points on the arc, so that A1' = A1, 1'2' = 12, 2'3' = 23, etc. Through the points 1', 2', 3' . . . C and the center of the follower B draw lines intersecting the line OD at 1_1 , 1_2 , 1_3 , 1_4 , 1_5 and 1_5 .

Divide the first 120° of the cam's circumference into six equal parts to correspond with the parts into which the semi-circle was divided.

With O as a center lay off $O1''=O1_1$, $O2''=O2_1$, $O3''=O3_1$... $O6''=O6_1$. If the roll had moved along the line AD, instead of along the arc, the points 1'', 2'', 3''... 6'' would be points on the theoretical cam curve, but since it moved on the arc and the lines O1'', O2'', O3''... O6'' represent different positions of the line OD, it is necessary to make a correction for the distance that the center of the roll is away from the straight line.

This can be done by drawing through the points 1'', 2'', 3''... 6'', lines making the same angles with O1'', O2'', O3''... O6'' that 1_1B , 2_1B , 3_1B ... 6_1B make with OD and laying off $1''a=1_11'$, $2''b=2_12'$, $3''c=3_13'$... $6''f=6_1C.^2$

A smooth curve drawn through the points a, b, c, d, e and f will give the theoretical cam curve. Taking points on this line and a radius equal to the radius of the roll the working curve can be found. The remaining part of the cam curve is found in a similar manner.


If a flat-face follower is to be used the method is the same up to the point of finding the working curve, except that it will be necessary to draw the lines 1"a, 2"b, 3"c . . . etc., much longer so that they will form triangles as was done in Fig. 60.

72. There are a number of other methods of laying out this cam which will give the same results; one of these is shown in Fig.

 $^{^{1}}$ 1_{1} and 2_{1} are not shown on the figure on account of the smallness of the drawing, but they will be at the intersection of the lines through 1'B, 2'B and OD.

² The reason for making the correction can be seen if the student will take a piece of tracing paper or cloth and placing it over the figure, mark the center O. Then trace any line as O5'' and 5''e. Revolve O5'' around O until it coincides with OD, when the point e will fall on 5'.

66. This method requires a much larger sheet of paper for the layout, but is less laborious if the facilities are at hand. Assume

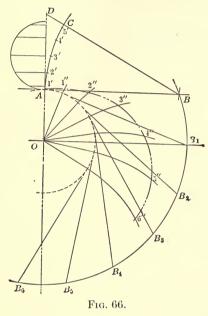

the data as in Fig. 65 and after locating the center of the oscillating arm B take a radius OB, and with O as a center, strike an arc. Divide the angle through which the cam is to turn to give the desired rise to the follower up into six equal parts, and through these points draw tangents to the base circle. intersecting the arc of radius OB at B_1 , B_2 , B_3 . . . B_6 . With these points as centers and a radius AB, draw arcs from the base circle outward.

The points 1', 2', 3', 4' and 5' on the arc AC are found as in Fig. 65; with O as a center and radii O1',

O2', . . . OC strike arcs, getting the points 1'', 2'', 3'' . . . 6'', which will be points on the theoretical curve.

Problems

- 1. Lay out the theoretical and working curves for a disk-edge cam that will raise a reciprocating roll follower 4 in. with harmonic motion in 180° of the cam's revolution; the follower to remain at rest for 90°, and to drop with uniform motion to the starting point in the remaining angle. Cam to revolve clockwise.
- 2. Lay out the theoretical and working curves for a disk-edge cam that will raise a reciprocating roll follower 3 in. with uniform motion in 120° of revolution; the follower to remain at rest for 60°, and to drop 3 in. with harmonic motion in the remaining angle. Cam to revolve counter-clockwise. Center line of follower 1 in. to left of cam shaft center.
- 3. Show the theoretical and working curves for a disk-edge cam that will raise a reciprocating flat-face follower 5 in. with uniform motion in 120° of the cam's revolution; the follower to remain at rest during the next 60°, and to drop with harmonic motion to the starting point in the next

180°. Cam to revolve counter-clockwise. Flat face of follower to make an angle of 75° with center line of follower.

- **4.** (a) Design a disk-edge cam to revolve in a clockwise direction and give its $\begin{Bmatrix} \text{roll} \\ \text{flat-face} \end{Bmatrix}$ follower a reciprocating motion, uniformly accelerated upward during the first portion of the cam's revolution; a uniformly retarded motion upward during the second portion, and a uniform drop during the remaining portion.
- (b) After laying out the curve as in (a), lay it out for the first two portions of the revolution according to the law of harmonic motion, the third portion being the same as before.

,		1	i	1
Data	1	2	3	4
Diameter of base circle, inches	414	$3\frac{3}{4}$	4 1/8	35/8
Diameter of roll, inches	$1\frac{1}{4}$	$1\frac{1}{16}$	$1\frac{5}{16}$	1 1/8
Diameter of roll pin, inches	$\frac{5}{16}$	5 16	5 16	5 16
Width of follower, inches (see Fig. 52)	3 4	5 8	$\frac{3}{4}$	11 16
Rise of follower, inches	$3\frac{3}{4}$	4	$3\frac{7}{8}$	4 1/8
Diameter of cam shaft, inches	$1\frac{1}{4}$	1 1/8	$1\frac{1}{4}$	1 1/8
Distance of center line of follower to left of			\	
cam-shaft center, inches	1	0	7 8	$\frac{1}{2}$
First portion, degrees	90	90	60	120
Second portion, degrees	90	90	60	120
Third portion, degrees	180	180	240	120

If a flat-face follower is specified, disregard the dimensions relating to cam roll and pin, and make the length of follower face $\frac{1}{4}$ in. longer than length of contact on each side of center line.

Note.—Make an ink drawing, full size, with center of cam shaft 7½ in. from top border line and in the center of the sheet right and left.

Use 32 divisions for Nos. 1 and 2 and 36 divisions for Nos. 3 and 4, laying them out upon a 12 in. diameter circle to insure greater accuracy.


Do not ink in this circle, and ink radial lines only about $\frac{1}{2}$ in, farther out than roll centers.

The object of drawing the harmonic curve superimposed on the uniformly accelerated and uniformly retarded curve is to see the difference between them. Time, 6 hours.

- 5. An involute cam follower is to be raised $5\frac{1}{2}$ in. Distance between center of cam and center line of follower is 6 in. Through how many degrees must the cam turn?
- 6. What should be the distance between the center of an involute cam and the center line of its follower if the follower is raised 7 in. in 100 degrees of revolution?
- 7. How high will an involute cam follower be raised in 120 degrees of revolution if the distance between the center of the cam shaft and the center line of the follower is 4 in.

Positive Motion Cams

73. Positive Motion Cams.—A positive motion cam is one that does not depend upon the force of gravity, springs or any other

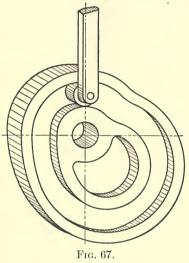


external means to bring the follower back to its initial position.

A common method of making a positive motion cam where a roll follower is used, is to have the roll move in a groove in the side of a disk or plate as is shown in Fig. 67.

74. Constant Diameter Cam.—A constant diameter cam is one in which the distance between centers of rolls, measured through the center of the cam shaft, is constant. It has the disadvantage that any desired law of motion can be laid out for but 180°, the second 180° being

laid out to correspond. The layout of a cam of this type is shown in Fig. 68. Lay out the first 180° of the cam for the

desired law of motion, getting the points $1, 2, 3 \dots$ 8 on the theoretical cam curve. The distance from the starting point through the center of the cam shaft to the point 8 (not shown in Fig.), will be the distance between the centers of the rolls. With this length as a radius and centers at 1, 2, 3 . . . 7 strike arcs intersecting their respective radii drawn through the center of the

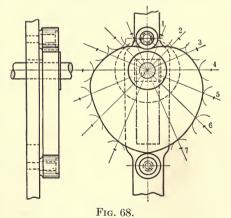

cam. These intersections will give points on the theoretical curve for the second half of the cam.

This type of cam can be used for heavier work than the groove cam already mentioned.

75. Main and Return Cam.—As the name implies, this consists of two cams. The main cam is laid out for any desired law of motion for a complete revolution or 360°. Lay out the points 1, 2, 3 . . . 16 on the theoretical curve, Fig. 69, for any desired law of motion and choose a distance that the rolls are to be apart. With this distance as a radius and centers at 1, 2, 3 . . . 16 strike arcs on the radii diametrically opposite the points, which will give points on the theoretical curve of the second cam. The working

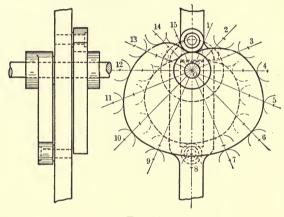



Fig. 69.

curves may then be found after choosing rolls of any convenient diameter.

In this case as in that of the constant diameter cam, the follower is generally constructed so that it envelops the shaft and is guided by a square bushing. This cam combination is particularly desirable for heavy work and slow speeds.

76. Constant Breadth Cam.—A constant breadth cam is one in which the distance between parallel faces is constant. It is used with a flat-face follower, and as in the case of the constant diameter cam, can be laid out for any desired law of motion, for 180° only. Assume that the points 1, 2, 3 . . . 8, Fig. 70, are points on the theoretical cam curve. The distance 08 determines the distance between the parallel sides of the follower faces. Through the points 1, 2, 3 . . . 8 draw lines perpendicular to

the radial lines, and on the opposite side of the cam center locate the points 7', 6', 5' . . . 1' by using 1, 2, 3 . . . 7 as centers and

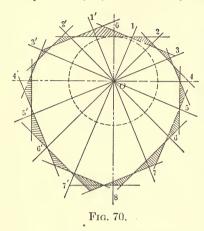

a radius 08. Through the points 1', 2', 3' . . . 7' draw lines parallel to those drawn through 1, 2, 3, . . . 8. To obtain the working curve draw a smooth curve tangent to the middle points of the triangles formed by these perpendicular lines, as was done in Fig. 60.

It will be noted that the above construction is similar to that of the constant diameter cam up to the point of finding the working cam curve.

Fig. 71 is a special type of

constant breadth cam used on light mechanisms such as sewing machines.

Lines joining the three points of the cam form an equilateral

triangle. The sides are arcs of circles with centers at the points of the triangle, and radii equal to the chordal distances between the points.

77. Cylindrical Cams.—
These cams may be used for either rectilinear or oscillating motion.

The motion is obtained by a groove in the cam as in Fig. 72 or by fastening strips on the surface of the cylinder as in Fig. 73. The latter case is used on automatic machines such as screw machines for

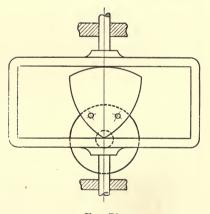


Fig. 71.

operating the turrets and wire feeds, where it is desired to do different kinds of work. The same cylinder can be used by making a different adjustment of the strips, instead of using a new cam complete.

Cylindrical cams can be laid out in several different ways, one of which is to lay out the cam without developing the cylindrical surface, and another is to develop the surface before laying out the curve. A problem will illustrate each of these two methods.

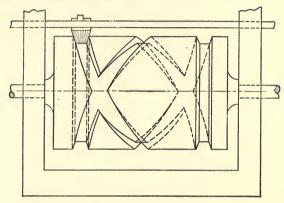


Fig. 72.

78. Layout of Cylindrical Cam without Developing Cylinder.

Problem.—Lay out the theoretical curve for a cylindrical cam that will move a reciprocating follower a distance of 12 in. to the right with a uniform motion in $1\frac{1}{4}$ turns of the cam; the follower to remain at rest for $\frac{1}{4}$ turn; to move 12 in. to the left with a uni-

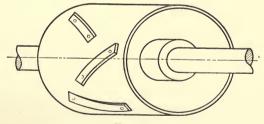


Fig. 73.

formly accelerated and uniformly retarded motion in one turn, and to remain at rest for $\frac{1}{2}$ turn, thus bringing the follower back to the starting point.

Lay out the end and side views of the cylinder, Fig. 74, and divide the circle representing the end of the cylinder into any convenient even number of equal parts, as eight. Divide the 12 in. on the side view into the same number of equal parts as

there are equal divisions in $1\frac{1}{4}$ revolutions on the end view, or ten, and number all of the divisions to correspond. Through the points on the side view draw lines across the cylinder, perpendicular to its axis. Then through the points 1, 2, 3 . . . 8 on the end view, draw lines parallel to the axis of the cylinder until they intersect the lines drawn through the points 1, 2, 3 . . . 8 on the side view, thus getting the points 1', 2', 3', etc.

Assume that the top of the cylinder moves away from you as you look at the side elevation; then the curve will pass across the

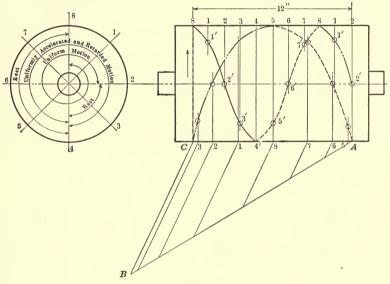


Fig. 74.

front of the cylinder and disappear at 4', and will be on the far side until the point 8 is reached, when it will again pass in front.

From 2' to A the follower is to remain at rest, so the curve can have no motion along the cylinder.

During the next revolution the follower is to move 12 in. to the left with uniformly accelerated and uniformly retarded motion. From A draw a line AB of indefinite length and lay off on this line eight divisions in the series 1-3-5-7-7-5-3-1, using any convenient unit.

Through B and the point C, 12 in. away from A draw a line. Parallel to BC and through the points on AB draw lines inter-

secting AC. Through these intersections on AC and perpendicular to the axis of the cylinder draw lines, and project across from the points on the end view to get points on the theoretical curve as before.

From this point the follower is to remain at rest for $\frac{1}{2}$ revolution of the cylinder, so that the theoretical curve will be drawn from C to 8, perpendicular to the axis.

79. Layout of Cylindrical Cam on Developed Surface.—In order to lay out this same cam on a developed surface, lay out the circumference and length of the cylinder, as in Fig. 75, and divide the circumference into the same number of equal parts as there are divisions in the end view of Fig. 74, or eight.

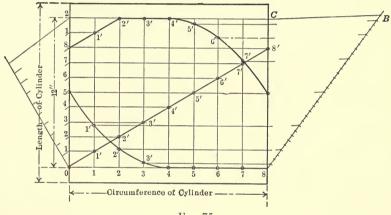


Fig. 75.

Divide the length of the cylinder up, according to the law of motion desired, and obtain points on the theoretical curve as shown on the figure.

In cams of this kind where the groove crosses itself, the part that follows in the groove, which in disk-groove cams is a roll, but in cylindrical cams is the frustum of a cone, must be of special shape.

It is generally made oblong and of such a length that the leading end will be across the intersecting groove and well entered in the original groove before the widest part of the follower has reached the intersecting groove

In order to obtain best results with a cylindrical cam the angle that the theoretical curve on the developed cylinder makes

with a perpendicular to the axis of the cam should not be more than 30°. If the angle exceeds this, make the diameter of the cylinder larger.

80. Cylindrical Cam with Oscillating Follower.—The layout for a cam of this type is shown in Fig. 76. The radius of the follower is OA and turns through the angle AOB. The other data are the same as in the previous case. It will be seen that the elements into which the cylinder is divided, instead of being parallel to the axis as in the case of the reciprocating follower, are arcs of circles, of radii OA and with centers on a line through O perpendicular to the axis of the cylinder. Other than this, there is no

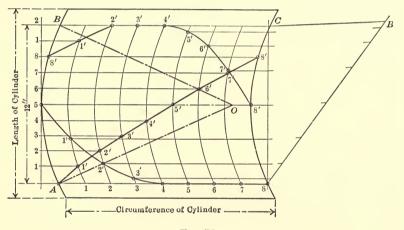


Fig. 76.

difference between the methods of laying out the oscillating and reciprocating follower cams.

81. Inverse Cams.—An inverse cam is one in which the roll is on the driver and the groove in the follower. Fig. 77 shows a cam of this type.


The inversion is made to avoid "dead points" that would sometimes occur when using an ordinary cam combination. It has the disadvantage that the motion can be laid out for only 180°. It is largely used for light mechanisms such as sewing machines.

Fig. 78 represents a "Scotch crosshead" which is a special case of an inverse cam with a reciprocating follower, and often

CAMS · 71

used on fire engines. In this case the groove is straight and perpendicular to the center line of the follower.


The method of laying out the inverse cam can be illustrated by a simple problem.

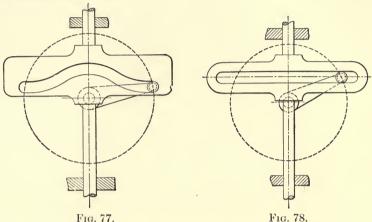

Problem.—Lay out the theoretical and working curves for an inverse cam that will give its follower motions as follows: 1 in. raise during the first 20° of revolution of driving arm; $\frac{1}{2}$ in. raise during the next 40°; rest during the next 30°; $\frac{3}{4}$ in. drop during

the next 30°; 2 in. raise during the next 40°, and rest during the next 20°. Driving arm to turn counterclockwise. Length of driving arm 6 in.

Draw a circle, Fig. 79, of radius OA = 6 in. to represent the path of the center of the roll. Draw O1, O2, O3, O4, O5 and O6 to represent the different positions of the center line of the driving arm, and through 1, 2, 3, 4, 5 draw lines perpendicular to the

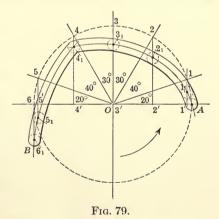

horizontal diameter of the circle of radius OA, thus getting the points 1', 2', 3', 4', 5'. If the groove were horizontal and straight as in

Fig. 78, when the driving arm had passed through the angle AO1 with its initial position, the follower would have been raised a distance 11', but since the follower is to be raised but 1 in. in that angle, the groove must be curved upward the difference between 11' and 1 inch, or the distance 1'1₁. The point 1₁ can be found directly by laying off on the line 11', from 1, 1 in.

When the driving arm passes through the angle 102, the follower is to be raised $\frac{1}{2}$ in., and since it has already been raised 1 inch, lay off $1\frac{1}{2}$ in. on 22', getting the point 2_1 . During the next angle the follower remains at rest, so 3_1 will be $1\frac{1}{2}$ in. down from 3.

While the follower is passing through the angle 304, the follower drops $\frac{3}{4}$ in., and as we already had a raise of $1\frac{1}{2}$ in., the net raise laid off from 4 will be $\frac{3}{4}$ in.

A 2 in. raise during the next 40° makes $2\frac{3}{4}$ in. to be laid off from 5. During the last 20° the follower remains at rest, so $2\frac{3}{4}$ in. will also be laid off from 6, to get the point 6_1 .

The points 5_1 and 6_1 in this problem fall below the original position of the groove at A, but since the follower is $2\frac{3}{4}$ in. higher than it was there, the groove must be the same amount lower for the driving arm is horizontal in both cases. Draw a smooth curve through the points $1_1, 2_1, 3_1 \ldots 6_1$ to obtain the theoretical curve. From 2_1 to 3_1 and from 5_1 to 6_1 the follower remains at rest so these parts of the curve should be arcs of circles of radii OA, and a center on the center line of the follower.


The working curve is found by choosing a diameter of roll and with centers on the theoretical curve draw circles the diameter of the roll, then draw curves tangent to them.

During the last 180° of revolution of the driving arm, the roll passes through the groove in the opposite direction, and causes the follower to go very much below its original position. If this is not desirable, the ends of the groove can be left open and the roll leave the groove during the last 180°,

Problems

1. Design an oscillating arm cam to raise the sliding block 4 in. with harmonic motion in 180° of counter-clockwise revolution of the cam; the block to remain at rest for 45°, and to drop 4 in. with a uniform motion in the remaining angle.


Data: $AB = 9\frac{1}{2}''$; $BC = 4\frac{1}{2}''$; $CE = 8\frac{5}{8}''$. Diameter of base circle = 6''. Diameter of cam roll = $1\frac{7}{16}''$. Diameter of cam roll pin = $\frac{1}{2}''$.

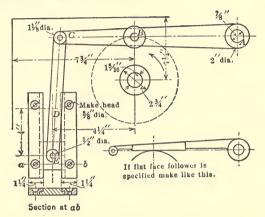

Problem 1.

Note.—Make a full-size ink drawing and leave off all dimensions. Divide the 180° angle into 12 equal parts and the 135° angle into 10 equal parts. Time, 6 hours.

2. Make a full-size ink drawing of the belt-shifter cam. The shifter arms to move with uniform acceleration and retardation about their centers c and g while the cam turns about its center f. Diameter of cam rolls 1 in. Diameter of shifter arm studs $\frac{5}{8}$ in. θ =angle through which shifter arms move.

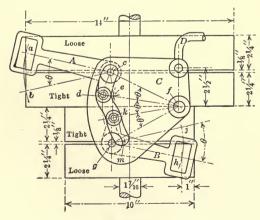


Problem 2,

Note.—Find the centers c and g on a line parallel to the pulley shaft and midway between the outer ends of the shifter arms. The angle $cfg=3\theta$, and f is located by drawing through c, downward to the right, a line making an angle of $1\frac{1}{2}\theta$ with the horizontal, and a line through g upward to the right and also making an angle of $1\frac{1}{2}\theta$ with the horizontal. The point f is at the intersection of these lines.

Divide cfg into three equal parts. With f as a center and a radius fc strike the arc cd, thus locating d. Lay off $dce = \theta$. With c as a center and a radius cd strike the arc de. Then d and e are the two extreme positions of the cam roll. The movement of the other roll is the same. Divide the angle efk into six equal parts and the arc de into corresponding parts for uniformly accelerated and uniformly retarded motion. Time, 6 hours.

- **3.** Lay out the theoretical and working curves for a main and return cam that will give a reciprocating follower a harmonic rise of 6 in. in 90° of revolution, to remain at rest for 180°, and a uniform drop during the remaining angle. Cam shaft revolves clockwise.
- **4.** Lay out the theoretical and working curves for a constant diameter cam that will raise a follower 8 in. with harmonic motion in 60°; rest for 60°, and a uniform rise of 3 in. in the next 60°. Cam revolves clockwise. If the diameter of the base circle is 6 in., what is the correct distance between the rolls?
- 5. Make a sketch showing the theoretical curve for a cylindrical cam that will give a reciprocating follower a harmonic motion of 8 in. to the left in one revolution of the cam; to remain at rest for $\frac{1}{2}$ revolution; to move uniformly to the left 2 in. in $\frac{1}{2}$ revolution, and a uniform motion back to the starting point in the least number of revolutions. Top of cam to turn away from you as you look at side elevation.
- **6.** Lay out the theoretical and working curves for a cylindrical came that will give its oscillating follower a harmonic motion from A to C in $\frac{1}{3}$ revolution; the follower to remain at rest for $\frac{1}{6}$ revolution; to return from C to A in $\frac{1}{3}$ revolution with uniform motion, and remain at rest for $\frac{1}{6}$ revolution.

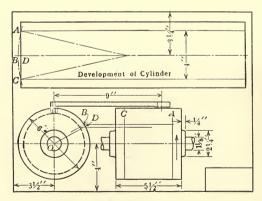


Problem 6.

Diameter of base of roll $\frac{3}{4}$ in.

Depth of groove $\frac{1}{2}$ in.

Note.—Make the views as shown, in ink and full size. Put no statement of the problem on the sheet. The student's attention is called to the correction to be made in finding the bottom lines of the groove in the cylinder. The center of the roll passes through the axis of the cylinder when the roll is at A or C only. When the roll is at B, its center line is parallel to D and a distance BD from it. Time, 8 hours.

- 7. Make a sketch showing the theoretical curve for an inverse cam that will raise its reciprocating follower 1 in. during the first 30° revolution of the driving arm; to raise $\frac{1}{2}$ in. during the next 30°; to rest during the next 30°; to raise 2 in. during the next 20°; to drop $1\frac{1}{4}$ in. during the next 20°, and to raise $1\frac{1}{2}$ in. during the next 50°. Driving arm $6\frac{1}{2}$ in. long and turns counter-clockwise.
- 8. Design an oscillating follower cam to lower the rod CD 2 in. with uniformly accelerated and uniformly retarded motion in 120° of clockwise revolution of the cam; the rod CD to dwell for 120° and to rise 2 in. with uniformly accelerated and uniformly retarded motion.

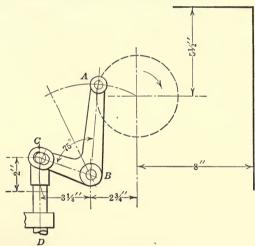

Problem 8.

Data: Diameter of base circle = 5"; length of arm $AB = 5\frac{1}{2}$ "; length of arm $BC = 3\frac{1}{8}$ ".

Diameter of roll = $1\frac{1}{8}$ ".

Diameter of roll pin = $\frac{5}{8}$ ".


Diameter of hub at $B = 1\frac{3}{8}$ ".

Diameter of pin at $B = \frac{3}{4}$ ".

Diameter of pin at $C = \frac{5}{8}$ ".

Note.—Make a full-size ink drawing and leave off dimensions. Time, 6 hours.


9. Design a cylindrical cam that will move a clutch 1 in. to the left along the shaft with harmonic motion in \(\frac{1}{4} \) revolution. Shaft to turn clockwise.

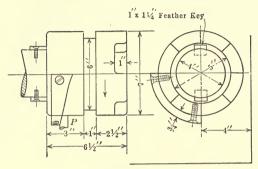

Problem 9.

Note.—The pin P is moved down by a system of levers operated by a pedal; when the pin P drops down below the cam, the clutch is forced along the shaft to the right by springs (not shown) engaging with the other half of the clutch. The shaft then turns and as the pin P engages with the cam, the clutch is disengaged. Make a full-size pencil drawing, showing the developed surface of the cam with all dimensions. Time, 4 hours.

10. Design a main and return cam that will move its follower 3 in. to the left with uniform motion during 135° of the cam's revolution. Rest for 45°; return the follower to the starting point during the next 135° of the cam's revolution with uniform motion and rest for the remaining portion Cam revolves counter-clockwise.

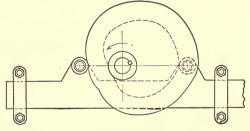

Problem 10.

Data: Diameter of base circle = 6".

Diameter of shaft = $1\frac{1}{8}$ ".


Diameter of hub = 2''.

Diameter of rolls = $1\frac{1}{8}$ ".

Distance between rolls = $7\frac{5}{8}$ ".

Note.—Place cam shaft center in the center of the sheet. Make a full-size ink drawing. Time, 4 hours.

11. Design a constant diameter cam that will move its follower 4 in. to the left with uniformly accelerated and uniformly retarded motion in 135° of the cam's revolution and to rest for 45° of revolution. Cam revolves clockwise.

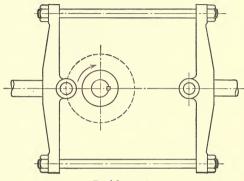

Problem 11.

Data: Base circle 5" diameter;

Hub $2\frac{5}{8}$ " diameter. Shaft $1\frac{1}{4}$ " diameter.

Rolls $1\frac{1}{2}$ " diameter.

Note.—Make ink drawing. Place the center line of the cam $13\frac{1}{2}$ in. from the right border line and 7 in. from the top border line. Time, 4 hours.

CHAPTER VII

GEARING

82. There are three separate cases for which gears can be used.

First. To connect parallel shafts. $\begin{cases} a. \text{ Constant velocity ratio.} \\ b. \text{ Variable velocity ratio.} \end{cases}$ Second. To connect inter- $\begin{cases} a. \text{ Constant velocity ratio.} \\ b. \text{ Variable velocity ratio.} \end{cases}$

To connect shafts that are neither parallel nor inter-Third. secting.

The first two cases with a constant velocity ratio are the most common.


FRICTION GEARING

- 83. Friction Gearing.—This may be said to be gearing in which the motion or power that is transmitted depends upon the friction between the surfaces in contact. In this case the power that can be transmitted at a constant velocity ratio is limited, for as soon as slipping occurs, the velocity ratio changes.
- 84. Rolling Cylinders.—This is the most simple friction gear combination and is used to transmit motion between parallel shafts with a constant velocity ratio. Fig. 80 shows such a combination.

Velocity Ratio.—It has been stated before (Art. 15) that the angular velocities of two points in two bodies having the same linear velocities, but different radial distances from their centers of rotation, are inversely as their radii. Thus if the two cylinders of Fig. 80 roll together without slipping, their revolutions are inversely as their radii. In order to have a constant velocity ratio, there must be pure rolling contact between the cylinders. This means that the consecutive points or elements on the surface of one must come in contact with the successive points or elements on the surface of the other in their order, or in other words there must be no slipping.

GEARING 79


85. Grooved Cylinders.—In order to transmit more power than can be obtained by smooth cylinders, they are sometimes grooved as shown in Fig. 81. With this arrangement there is not pure rolling contact between the cylinders, except at a point about midway along the depth of the grooves.

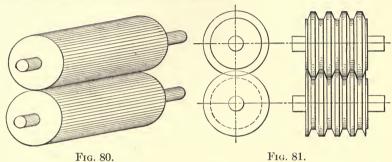

The angle included between the sides of the grooves should not be more than 30° or less than 10° in order to obtain best results. If the angle is made too great, the effect of the grooves will be lost and the action will be more like the case of plain cylinders, while if the angle is made too small, there will be a tendency for the cylinders to wedge themselves together, and it will require excessive power to drive them.

86. Evans' Friction Cones.—This combination, shown in


Fig. 82, is for connecting parallel shafts to obtain a variable velocity ratio. On the shafts that are to be connected are placed frustums of two similar cones, A and B, with the large end of one opposite the small end of the other, and between them an endless

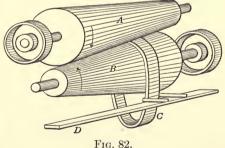

belt C, which is held in place by a belt shipper, or other similar device.

Velocity Ratio.—If A is the driver, the revolutions of B will be inversely as the radii of the cones where they are in contact with the belt. Thus if the radius of the large ends of the cones is 4 in. and that of the small ends 2 in., when the belt is at the large end of the driver, the revolutions of the driven will be twice those of the driver, while if the belt is at the small end of the driver and the large end of the driven, the revolutions of the driven will be one-half those of the driver.

It can also be seen from the figure that the direction of rotation, or the *directional relation* is opposite in the two shafts. If it is desired that they turn in the same direction, a small wheel can be substituted for the belt. This wheel should be covered

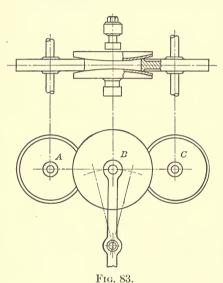

with some soft material, such as rubber or leather, to make good frictional contact. This combination is used on machine tools, such as grinders and speed lathes, for obtaining variable speeds.

87. Sellers' Feed Disks.

This is also a type of friction gear for connecting parallel shafts to obtain a variable velocity ratio and is shown in Fig. 83. The disks A and C are on the shafts to which it is required to give the desired velocity ratio.

Two disks B, having their inner surfaces slightly convex, fit loosely on the same shaft and engage the sides of A and C near their rims, between the convex surfaces.

On the shaft with the disks B, between the frame and the back of the disks, are helical springs which tend to push the disks together and exert pressure on the sides of A and C.

Velocity Ratio.—If A is the driver, the revolutions of C can be increased by moving the intermediate disks B, toward A.

This combination derives its name from the fact that it was first used on the feed mechanisms of machine tools built by the William Sellers Company of Philadelphia.

88. Bevel Cones.—These cones of which Fig. 84 is an illustration are used for transmitting motion between shafts that inter-

sect. The cones need not be of the same size, and the shafts need not intersect at a right angle.

Velocity Ratio.—If the velocity ratio is as 1:1, the bases of the cones must be the same diameter. In order to lay out a pair of cones for any velocity ratio and shaft angle, the method is as follows:


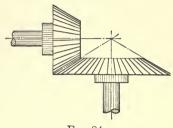


Fig. 84.

Assume that the driver is to make 5 revolutions while the driven makes 7 and that the shaft angle is 75°. Let OA, Fig. 85, be the axis of the driver and OB that of the driven. At any point as a on OA draw a perpendicular line ab and on this line lay off 7 units; also at any point as c on OB draw the perpendicular line

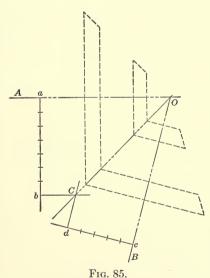


cd, and on it lay off 5 units of the same size as those laid off on ab. Through b and d draw lines parallel to OA and OB respectively; through their intersection at C, draw the line CO. This line will be an element of the two cones, and cones of any diameter may be drawn as indicated in the dotted outlines, by using CO as the common element.

89. Brush Plate and Wheel.

—This form of friction gearing shown in Fig. 86 is for the purpose of transmitting variable velocity ratio between shafts that intersect at right angles. It consists of a large

disk A and a small wheel B, which can be moved across the face of A, by means of a feather key in the shaft of B. The small wheel is usually made of some softer material than the disk which is generally of iron, in order to secure more friction between the surfaces.

The small wheel should be the driver so that in case the load becomes excessive and there is slipping, the small wheel will be

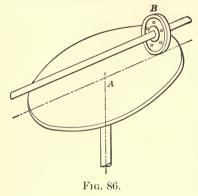


worn down an equal amount all around. If the large disk were the driver and the load became excessive, a flat spot would be worn on the small wheel, which would then have to be trued up.

Velocity Ratio.—The velocity ratio depends upon the diameter of the small wheel and the *effective* diameter of the disk, that is, the diameter of the path that the small wheel makes on the disk.

The brush plate is used on a number of forms of sensitive drills and is useful in other cases for light loads where slight variations in speed are desired.

TOOTHED GEARING

90. Spur Gears.—In order to transmit more power than can be obtained with the rolling cylinders of Fig. 80 let us assume that

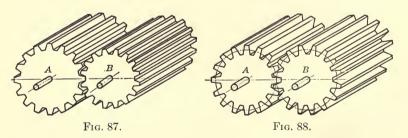


projections are put on cylinder A, Fig. 87, parallel to the axis, and corresponding grooves in cylinder B. Between the grooves on B, put projections, and corresponding grooves on A. The cylinders will then appear as in Fig. 88.

The end view of the original cylinders will be imaginary circles, and are called the *pitch circles*, and their point of tangency is the *pitch point*.

Velocity Ratio.—The velocity ratio of a pair of gears will be inversely as the radii of the pitch point of the pitch circles. In order that a pair of gears transmit a constant velocity ratio, their tooth curves must be such that a normal to the common tangent of the teeth at the point of contact will always pass through the pitch point. This statement is called the fundamental law of gearing. The velocity ratio in this case will be constant for any fraction of a revolution, or, in other words, the pitch circles have pure rolling contact (Art. 84).

Two gears the centers of which are at A and B, Fig. 89, and pitch point P have a pair of teeth in contact at T as shown.

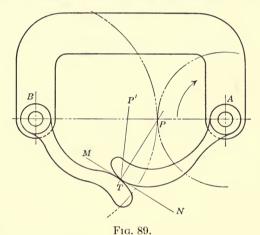

Their tooth curves are so formed that a normal to the common tangent MN through T also passes through the pitch point P.

The same relative motion between the tooth curves is obtained by holding one gear stationary and revolving the other gear and the frame, as by holding the frame stationary and revolving the gears. Suppose that the gear whose center is at B is held stationary and the one with a center at A revolved. Then the direction of motion of the contact point T of A is at right angles to PT, or along the line MN, and therefore in instantaneous contact with the contact portion of B.

Suppose that the curves are so formed that the common normal passes through any other point P' instead of P and let A be revolved as before in the direction indicated by the arrow:

then A and B will break contact, because the contact point T of A moves toward M along the line MN as before, which is not the direction of the contact portion of B. If A is revolved in the opposite direction, the contact point T of A will move toward N, and the tooth curves will interfere, hence the fundamental law of gearing as stated above.

91. Definitions of Tooth Parts.—The addendum circle is the circle bounding the ends of the teeth. See Fig. 90.

The working depth circle is the circle below the pitch circle, a distance equal to that of the addendum circle above the pitch circle.

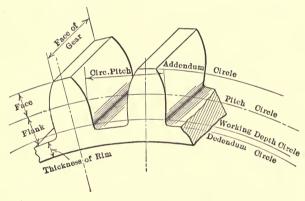


Fig. 90.

The dedendum circle or root circle is the circle bounding the bottoms of the teeth.

The *clearance* is the distance between the working depth and dedendum circles.

The face or addendum of the tooth is that part of the tooth lying between the pitch and addendum circles.

The *flank* of the tooth is that part of the tooth lying between the pitch and dedendum circles.

The thickness of tooth is its width measured on the pitch circle. The width of space is the space between the teeth measured on

the pitch circle.

Backlash is the difference between the thickness of a tooth and the space into which it meshes, measured on the pitch circles.

Pitch diameter is the diameter of the pitch circle, and is the

diameter that is used in making all calculations for the size of gears.

Pitch is the measure of the size of the teeth. There are two kinds of pitch in general use for calculating gear teeth sizes, circular and diametral.

Circular pitch is the distance in inches between similar points of adjacent teeth measured along the pitch circle. It is the sum of the thickness of tooth and width of space, measured on the pitch line.

As there must be a whole number of teeth on the circumference of a gear, it is necessary that the circumference of the pitch circle divided by the circular pitch be a whole number. Thus it is seen that if the circular pitch is a whole number, the diameter of the pitch circle will usually be a number containing a fraction.

Let P' = circular pitch in inches

Let D = pitch diameter

Let T = number of teeth

Then
$$TP' = \pi D$$
 or $T = \frac{\pi D}{P'}$; $P' = \frac{\pi D}{T}$; $D = \frac{TP'}{\pi}$. Thus if

 $P' = 1\frac{1}{2}$ in., T = 36, the pitch diameter $D = \frac{36 \times 1\frac{1}{2}}{3.1416} = 17.19$ in. very nearly.

Diametral pitch is the number of teeth on the gear per inch of diameter of the pitch circle.

Let P = diametral pitch

Let T = number of teeth

Let D = pitch diameter

Then

$$T = PD$$
; $D = \frac{T}{P}$; $P = \frac{T}{D}$

In a gear having 64 teeth and a pitch diameter of 16 in., the diametral pitch $P = \frac{64}{16} = 4$. Meaning that for every inch of diameter of the pitch circle, there are 4 teeth on the gear.

Diametral pitch is more generally used than circular pitch for the reason that the pitch diameter comes out in equal fractions, and the pitch is deduced from the diameter and number of teeth without having to use the constant π , which is necessary when using circumferences.

It is sometimes desirable to convert from one pitch to the other. This can be done as follows:

In a given gear by the circular pitch system $T = \frac{\pi D}{P'}$, while if using the diametral pitch, T = PD.

So that we may write $\frac{\pi D}{P'} = PD$.

In the same gear by the two systems, the pitch diameter D will be the same, and as it appears in both sides of the equation may be canceled out.

Then

$$\frac{\pi}{P'} = P$$
 or $\pi = P'P$

So that circular pitch \times diametral pitch $=\pi$.

The *angle of action* is the angle through which a gear turns while a tooth on it is in contact with its mate on the other gear.

The arc of action is the arc subtending the angle of action.

The angle of approach is the angle through which a gear turns from the beginning of contact of a pair of teeth until contact reaches the pitch point.

The angle of recess is the angle through which a gear turns while contact in a pair of teeth is from the pitch point until the teeth pass out of contact.

 $Angle\ of\ Approach + Angle\ of\ Recess = Angle\ of\ Action.$

There are two systems of generating tooth curves in general use that will give a constant velocity ratio—the *involute* system and the *cycloidal* system.

Problems

- 1. In a brush plate and wheel combination, the diameter of the small wheel, which is the driver, is 4 in., and makes 60 R.p.m. The minimum effective radius of the brush plate is $1\frac{1}{2}$ in., and its maximum effective radius is 15 in. What are its revolutions in each case provided there is no slipping?
- 2. Let P = diametral pitch, P' = circular pitch, T = number of teeth and D = pitch diameter.
 - 1. Given P=10; D=5. Find T.
 - 2. Given D=15; P'=2. Find T.
 - 3. Given T = 48; $D = 4\frac{1}{2}$. Find P'.
 - 4. Given $P' = 1\frac{1}{4}$; T = 30. Find P.
- 3. In two spur gears the driver turns five times while driven turns three times. Circular pitch $= \frac{7}{8}$ in. Number of teeth in driven 30. Find distance between centers and number of teeth in driver.

D, -D.

- 4. Two spur gears are in mesh. Teeth in driver, 80. Circular pitch $=1\frac{1}{2}$ in. Distance between centers of shafts = 20 in. Find pitch diameter of, and number of teeth in driven.
- 5. The distance between the centers of two spurs gear that are in mesh is 20 in. If one gear makes three times as many revolutions per minute as the other how many teeth in each if the diametral pitch is 4?
- 6. In an annular gear and pinion combination, the distance between their centers is 8 in. Teeth in pinion = 36. Diametral pitch = 4. What are the diameters of, and how many teeth in each of the gears?
- 7. Two spur gears in mesh have 80 and 50 teeth respectively, and are of 1½ in. pitch. What is the proper distance between their centers?

INVOLUTE SYSTEM

92. Involute System.—In the involute system the tooth outlines are involute curves.

The construction for the involute was shown in Fig. 62. As far as the generation of the involute curve is concerned, it makes no difference whether the band or string is unwrapped from a stationary cylinder, as was done in that case, or the band pulled in a straight line and the cylinder allowed to revolve as in Fig. 91. In this figure the cylinder A revolves about its center, and the tracing point T in the band traces the involute curve ab.

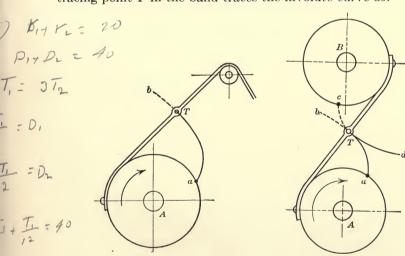


Fig. 91. $T_{i} + T_{j} = 40 \text{ y/}^{2}$ Now suppose that a second cylinder B, is used Fig. 92, and 7 = 10 (12the band unwrapped from A to B. As it is unwrapped from A,

Fig. 92.

the tracing point T will trace the involute aT and at the same time it will trace the involute dT as it is wrapped on B. The dotted portions of the curves Tb and Tc are the parts of the involutes that will be traced as the cylinders are revolved further.

It is a property of the involute that a normal to the curve is tangent to the base circle. The two curves have a common normal at the point of contact T, which is tangent to both base circles. This line which is the locus of all the points of contact is called the *line of action*.

93. Spur Gears.—Let A and B, Fig. 93, be the centers of two spur gears with pitch radii AP and BP respectively.

The radii of the base circles from which the involutes are developed are obtained by drawing the line of action *ab* and dropping perpendiculars to it from the centers of the gears. The lengths of these perpendiculars are the radii of the base circles.

The angle of obliquity α , is the angle that the line of action makes with a tangent to the pitch circles drawn through the pitch point.

If the angle of obliquity is zero the base circles will coincide with the pitch circles, and the teeth of the gears will

act only at the pitch point. The angle of obliquity can be taken any angle more than zero, but in practice for the standard involute tooth it is usually taken such that its sine is 0.25, which corresponds to an angle of approximately $14\frac{1}{2}^{\circ}$.

94. In the figure, let the gear with its center at A be the driver and revolve clockwise as shown. There should be no contact between the teeth of A and B until the point a, where the line of action is tangent to the base circle of the driver, is reached, as this is the point where the generation of the involute begins.

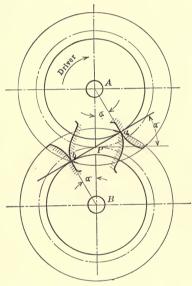


Fig. 93.

GEARING 89

The limit of contact on the other side of the pitch point is b, where the line of action is tangent to the base circle of the driven gear. Contact will be along the line ab, beginning at a and ceasing at b provided the teeth of the driven are long enough to reach the point a, and the teeth of the driver of sufficient length to reach the point b.

If the teeth of the gears are not long enough for contact to begin at a and cease at b, it will begin where the addendum circle of the driven cuts the line of action and cease where the addendum circle of the driver cuts the line of action. Contact between a pair of teeth should be continuous between the beginning and end of contact along the line ab.

Contact between the teeth of any pair of gears that are in mesh always begins between the driver's flank and the follower's face and ceases between the driver's face and the follower's flank.

For a pair of gears having equal arcs of approach and recess to have continuous contact, that is, not to have one pair of teeth cease contact before a second pair have begun contact, the angle $PAa=\alpha$, Fig. 93, should not be less than $\frac{180^{\circ}}{T}$, where T equals the number of teeth in the smaller gear.

It is desirable to have more than one pair of teeth in contact at one time, or to have the pitch arc less than the arc of action. Thus if the pitch arc is one-half the arc of action, two pairs of teeth will be in contact at one time.

The maximum pitch angle equals $2PAa = 2\alpha = \frac{360^{\circ}}{T}$ or $\alpha = \frac{180^{\circ}}{T}$. Taking α as 15° the least number of teeth that can be used is $\frac{180}{15} = 12$ teeth, which is taken as the smallest standard interchangeable gear. Since there cannot be a fractional tooth on a gear, if the number of teeth does not come out a whole number, the next higher whole number must be taken.


95. Involute Rack and Pinion.—If one of the spur gears of a pair is enlarged until its diameter is infinite, the combination will be that of a rack and pinion, shown in Fig. 94, since a rack is the same as a spur gear of infinite diameter.

Let AP, Fig. 95, be the radius of the pitch circle of the pinion in a rack and pinion combination. The pitch circle of the rack being of infinite diameter is therefore a straight line,

Let ab be the line of obliquity, then Aa will be the radius of the base circle of the pinion.

If the pinion is the driver and turning as shown, contact cannot begin before the point, a, the tangent point of the pinion's base circle with the line of obliquity, is reached, thus limiting the length of the rack teeth. Since the base line of the rack is tangent to the line of obliquity at infinity, the length of the pinion teeth can theoretically be of infinite length, but practically they are limited by their becoming pointed.

A point on the line ab will generate the rack and pinion teeth, as in the case of spur gears (Art. 92). As the pinion turns in the direction of the arrow, the rack will move to the left with the

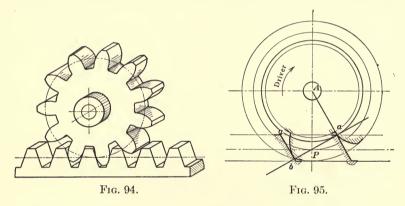

same linear velocity as a point on the pitch circle of the pinion, which is greater than the linear velocity of a point on the base circle of the pinion in the ratio: $\frac{AP}{Aa}$.

When the generating point reaches b, the point a on the rack will have reached a', for in the triangles PAa and aba', ab is perpendicular to Aa and aa' is perpendicular to AP. Also $\frac{aa'}{ab} = \frac{AP}{Aa}$, so that the triangles are similar and the angle a'ba which is equal to the angle AaP, is a right angle. Therefore the outline of the rack tooth is a straight line perpendicular to the line of obliquity.

It will be noted that the directional relation between the rack and pinion is not constant, but depends upon the length of the rack.

91

96. Involute Annular Gear and Pinion.—An annular gear is one in which the teeth are cut internally on the pitch circle instead

of externally as in the case of spur gears. Fig. 96 illustrates an annular gear and pinion combination.

The method of laying out the teeth of the annular gear is precisely the same as for the spur gear, except that the tangent points of the base circles with the line of obliquity, lie on the same side of the pitch point instead of on opposite sides as in spur gears.

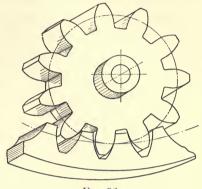


Fig. 96.

Let AP and BP, Fig. 97, be the pitch radii of the pinion and annular gear respectively, and let aP be the line of obliquity. Then the radii of the base circles will be Aa and Bb.

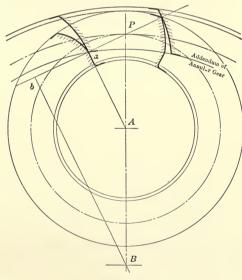


Fig. 97.

Let the pinion drive as shown, then since contact always begins between the driver's flank and follower's face, and cannot begin before the tangent point of the pinion's base circle with the line of action is reached, the teeth of the annular gear cannot pass inside the point a. Ba will then be the shortest radius for the addendum circle of the annular gear.

The length of the pinion teeth, as in the case of the rack and pinion combination, are limited only by their becoming pointed.

In the figure, contact begins where the addendum circle of the driven cuts the line of action and ceases where the addendum circle of the driver cuts the line of action.

It will be noted that the sides of the teeth on the annular gear are concave instead of convex, as in the case of spur gears. The annular gear tooth is exactly the same as the space between the teeth of a spur gear of the same angle of obliquity, pitch and number of teeth, with the exception of clearance top and bottom.

- 97. Interference of Involute Teeth.—If the teeth of the gears of Fig. 93 are long enough to pass outside of the points a and b there will be interference between this extra length of the teeth and that part of the flank of its mate, lying inside the base circle, unless the flank is hollowed out, or the extra length of face rounded off. The latter method is generally used as the objection to hollowing out the flank is that it weakens the tooth. This part of the tooth lying between the base and working depth circles is generally made radial.
- 98. Effect of Changing the Distance between Centers of Involute Gears.—In involute gears, the tooth curves being developed by a point on a line tangent to the base circles, if the centers of the gears are drawn apart, the same involutes will be generated and the gears will still transmit a constant velocity ratio, even though the pitch circles are not tangent.

The gears can be drawn apart until the teeth just touch at their ends, but in this case the backlash will be excessive.

The centers may also be moved toward each other so that the pitch circles overlap, the limit being when the backlash is reduced to zero.

This is a desirable property of involute gears as it allows gears to be used on shafts that are not the exact center distances apart, as calculated by the pitch diameters.

The path of action being along a straight line, the pressure on the bearings is constant and tends to keep the centers as far apart as possible, and prevent rattling if there is any looseness in the bearings. This property of involute gears used to be considered objectionable, but with gears and bearings of modern design the pressure is not excessive.

- 99. Interchangeable Involute Gears.—In order that involute gears may be interchangeable, that is, any gear of a set mesh properly with any other gear, the pitch and angle of obliquity of one must be the same as the pitch and angle of obliquity of the mating gear.
- 100. Standard Sizes of Teeth for Gears.—In the spur gears thus far discussed, nothing has been said about standard sizes of tooth parts. Two gears can be made to mesh properly together even though some of the parts are not the same size. For different pitches there are standard lengths and thicknesses of teeth, however, and those adopted by the Brown & Sharpe Manufacturing Company and given in Tables A and B on pages 94 and 95 are almost universally used in this country. Fig. 98 shows

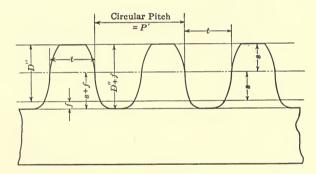


Fig. 98.

parts of the teeth referred to in each column of the tables. The sizes of the parts apply to other systems of teeth as well as to the involute system.

101. To Lay Out a Pair of Standard Involute Spur Gears.

Problem.—Lay out the tooth curves for a pair of involute spur gears of 24 teeth and 16 teeth respectively; 2 diametral pitch and 15° angle of obliquity.

24 teeth, 2 diametral pitch=12 in. pitch diameter for large gear.

16 teeth, 2 diametral pitch = 8 in. pitch diameter for small gear.

Table A.—Gear Wheels

Table of Tooth Parts—Diametral Pitch in First Column

	1 '	1	1		1	
Diam-		Thickness	Addendum	Working	Depth of	Whole
etral	Circular	of tooth	or	depth of	space	depth of
pitch.	pitch,	on pitch	1"	tooth,	below pitch	tooth,
procin	proces,	line,	$\frac{1}{P}$,	line,	, tootii,
P	P'	t t	8	$D^{\prime\prime}$	s+f	$D^{\prime\prime}+f$
•	1		. "		017	2 13
$\frac{1}{2}$	6.2832	3.1416	2.0000	4.0000	2.3142	4.3142
34	4.1888	2.0944	1.3333	2.6666	1.5428	2.8761
1	3.1416	1.5708	1.0000	2.0000	1.1571	2.1571
$1\frac{1}{4}$	2.5133	1.2566	.8000	1.6000	.9257	1.7257
$1\frac{1}{2}$	2.0944	1.0472	.6666	1.3333	.7714	1.4381
$1\frac{3}{4}$	1.7952	.8976	.5714	1.1429	.6612	1.2326
$\overline{2}^{*}$	1.5708	.7854	.5000 ~	1.0000	.5785	1.0785
$\frac{2}{4}$	1.3963	.6981	.4444	.8888	.5143	.9587
$2\frac{1}{2}$	1.2566	.6283	.4000	.8000	.4628	.8628
$2\frac{3}{4}$	1.1424	.5712	.3636	.7273	.4208	.7844
3	1.0472	. 5236	.3333	.6666	. 3857	.7190
$3\frac{1}{2}$.8976	.4488	.2857	.5714	.3306	.6163
4	.7854	.3927	.2500	.5000	.2893	. 5393
5	. 6283	.3142	. 2000	.4000	. 2314	.4314
6	. 5236	. 2618	.1666	.3333	.1928	.3595
7	.4488	.2244	.1429	. 2857	. 1653	. 3081
8	. 3927	.1963	.1250	.2500	. 1446	. 2696
9	. 3491	. 1745	.1111	.2222	.1286	. 2397
10	.3142	.1571	.1000	,2000	.1157	.2157
11	.2856	.1428	.0909	.1818	.1052	. 1961
12	.2618	.1309	.0833	.1666	.0964	. 1798
13	.2417	.1208	.0769	.1538	.0890	. 1659
14	.2244	.1122	.0714	.1429	.0826	. 1541
15	. 2094	. 1047	.0666	.1333	.0771	. 1438
16	. 1963	.0982	.0625	.1250	.0723	. 1348
17	.1848	. 0924	.0588	.1176	.0681	. 1269
18	. 1745	.0873	.0555	.1111	.0643	.1198
19	.1653	.0827	.0526	. 1053	.0609	.1135
20	.1571	.0785	.0506	.1000	.0579	.1079
22	.1428	.0714	.0455	.0909	.0526	.0980
24	.1309	.0654	.0417	.0833	. 0482	.0898
26	.1208	. 0604	.0385	. 0769	.0445	.0829
28	.1122	.0561	. 0357	.0714	.0413	.0770
30	. 1047	.0524	. 0333	.0666	.0386	.0719

Table B.—Gear Wheels
Table of Tooth Parts—Circular Pitch in First Column

	Threads		7DL:-1	Addon		Depth of	
C' 1	or teeth	Diam-	Thickness	Adden-	Working	space	Whole
Circular	per	etral	of tooth	dum or	depth of	below	depth of
pitch,	inch,	pitch,	on pitch	1"	tooth,	pitch	tooth,
	1''		line,	\overline{P}	1	line,	,
P'	$\overline{P'}$	P	t	8	$D^{\prime\prime}$	s+f	D''+f
0	1	1 7700	1 0000	0900	1 0720	7000	1 0700
2	1/2	1.5708	1.0000	. 6366	1.2732	.7366	1.3732
$1\frac{7}{8}$	8 15	1.6755		. 5968	1.1937	. 6906	1.2874
1 3	47	1.7952	.8740	. 5570	1.1141	. 6445	1.2016
1 5/8	13	1.9333	.8150	.5173	1.0345	. 5985	1.1158
$1\frac{1}{2}$	2/3	2.0944	.7500	.4775	. 9549	. 5525	1.0299
$1\frac{7}{16}$	$\frac{1}{2}\frac{6}{3}$	2.1855	.7187	.4576	.9151	. 5294	.9870
$1\frac{3}{8}$	8	2.2848	. 6875	.4377	.8754	. 5064	.9441
$1\frac{1}{3}$	34	2.3562	. 6666	. 4244	.8488	. 4910	.9154
$1\frac{5}{16}$	$\frac{1}{2}\frac{6}{1}$	2.3936	. 6562	.4178	.8356	. 4834	.9012
$1\frac{1}{4}$	4 5	2.5133	. 6250	.3979	.7958	. 4604	. 8583
$1\frac{3}{16}$	18	2.6456	. 5937	.3780	.7560	.4374	.8156
$1\frac{1}{8}$	8 9	2.7925	. 5625	.3581	.7162	.4143	.7724
$1\frac{1}{16}$	$\frac{1}{1}\frac{6}{7}$	2.9568	. 5312	.3382	. 6764	.3913	.7295
1	1	3.1416	. 5000	.3183	. 6366	. 3683	. 6866
$\frac{15}{16}$	$1_{\frac{1}{15}}$	3.3510	.4687	. 2984	. 5968	. 3453	. 6437
78	$1\frac{1}{7}$	3.5904	.4375	.2785	. 5570	. 3223	.6007
$\frac{13}{16}$	$1\frac{3}{13}$	3.8666	.4062	.2586	.5173	. 2993	. 5579
4 5	$1\frac{1}{4}$	3.9270	.4000	.2546	. 5092	.2946	. 5492
4 5 3 4	$1\frac{1}{3}$	4.1888	.3750	.2387	.4775	.2762	.5150
$\frac{11}{16}$	15	4.5696	.3437	.2189	.4377	. 2532	.4720
	$1\frac{1}{3}$	4.7124	. 3333	.2122	.4244	. 2455	.4577
2 5 8	1 3	5.0265	.3125	. 1989	. 3979	. 2301	.4291
8	$1\frac{2}{3}$	5.2360	. 3000	. 1910	. 3820	.2210	.4120
47	$1\frac{3}{4}$	5.4978	.2857	.1819	. 3638	.2105	. 3923
9 16	$1\frac{7}{9}$	5.5851	.2812	. 1790	.3581	.2071	.3862
$\frac{1}{2}$	2	6.2632	.2500	.1592	. 3183	. 1842	.3433
49	$2\frac{1}{4}$	7.0685	.2222	.1415	.2830	. 1637	.3052
$\frac{7}{16}$	$2\frac{3}{7}$	7.1808	.2187	. 1393	.2785	.1611	.3003
8 7	$2\frac{1}{3}$	7.3304	.2143	. 1364	.2728	.1578	.2942
	$2\frac{1}{2}$	7.8540	.2000	.1273	.2546	. 1473	.2746
38	$2\frac{2}{3}$	8.3776	.1875	.1194	.2387	.1381	.2575
4	$2\frac{3}{4}$	8.6394	.1818	.1158	.2316	.1340	.2498
$\frac{1}{2}$	3	9.4248	.1666	.1061	.2122	.1228	.2289
5 16	$3\frac{1}{5}$	10.0531	.1562	.0995	.1989	.1151	.2146
3 10	31/3	10.4719	.1500	.0955	.1910	.1105	.2060
10	$3\frac{1}{2}$	10.9956	.1429	.0909	.1819	.1052	.1962
7	0 2			.0000	.2010	. 2002	. 1002

Draw the pitch circles Fig. 99 with radii AP and BP equal to 4 in. and 6 in. respectively, and through P draw the line of obliquity ab having the given angle of obliquity with the common tangent to the pitch circles through the point P. Drop perpendiculars from the centers A and B, cutting the line of obliquity in a and b respectively. Then Aa and Bb will be the radii of the base circles which can now be drawn.

From Table A on page 94 find the amount that the adden-

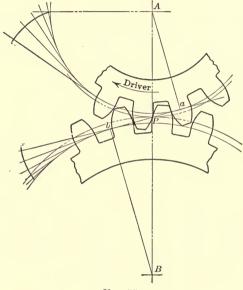


Fig. 99.

dum, dedendum and working depth circles differ from the pitch circle, and draw them in.

Divide the pitch circle of the smaller gear into 16 equal parts and that of the larger gear into 24 equal parts, which will give the circular pitch. When no backlash is allowed, the thickness of the tooth, and the width of space measured on the pitch circle will be the same. Bisect the circular pitch on each of the gears which will give 32 equal divisions on the pitch circle of the small gear and 48 on the large one.

At any point on the base circle of each gear develop an involute, and draw in the curves between the base and addendum

circles through alternate points on the pitch circles. This will give one side of all the teeth on each gear. The curve for the other side of the teeth is the reverse of the one just drawn.¹ Draw the part of the teeth lying between the base and working depth circles radial, and put in a small arc or fillet between the working depth and dedendum circles. This fillet should be as large as possible without passing outside of the working depth circle.

STUB TOOTH GEAR

102.—The Stub Tooth.—In 1898 the Fellows Gear Shaper Company adopted the stub form of tooth having the angle of obliquity 20°. This gives a shortened and thicker tooth at the root as compared with the standard involute tooth.

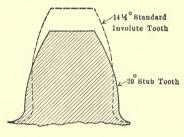


Fig. 100.

103. Method of Designating the Stub Tooth.—The stub tooth is designated by the use of two diametral pitches, such as $\frac{5}{7}$. The numerator being used to calculate the pitch diameter and the number of teeth, while the denominator is used for calculating the addendum and dedendum.

¹ A convenient method of transferring the original involute to draw in the tooth curves is by means of a templet. This can be made of a thin piece of soft wood. Put a fine needle through the wood, near one end, and the center of the gear, then cut away the wood to conform to the developed tooth outline. Then swinging the templet about the center draw in one side of all the teeth. Draw the other sides of the teeth by turning the templet over and keeping the same centers. The same templet can be used for two gears only when they have the same number of teeth and angle of obliquity.

Table C.—Dimensions of Stub Tooth Gear Teeth (The Fellows Gear Shaper Company Standard)

	Dimensions in Inches					
Diametral pitch,	Thickness on pitch line,	Addendum,	Working depth,	Depth of space below pitch line,	Whole depth of tooth,	
P	t	8	$D^{\prime\prime}$	s+f	$D^{\prime\prime}+f$	
34	0.5236	0.2500	0.5000	0.3125	0.5625	
	.3927	. 2000	.4000	.2500	.4500	
4 6 5 5 7 6 8 7 9 8 1 0	.3140	.1429	.2858	.1786	.3215	
6 8	.2618	. 1250	. 2500	. 1562	. 2812	
79	. 2244	.1111	.2222	.1389	.2500	
8 10	. 1963	.1000	. 2000	.1250	.2250	
9	. 1745	.0909	.1818	.1136	.2045	
$\frac{1}{1}\frac{0}{2}$. 1571	.0833	. 1667	.1042	.1875	
$\frac{1}{1}\frac{2}{4}$. 1309	.0714	.1429	.0893	. 1607	

The clearance in this system is made greater than in the standard gear tooth system and is equal to the addendum divided by 4.


104. Advantages of the Stub Tooth.—The advantages of the stub tooth are as follows:

- 1. Greater strength.
- 2. Wear on the teeth more uniform.
- 3. Longer life.
- 4. Less distortion in hardening.
- 5. Greater production (less metal to be cut away).

Problems

- 1. Make a sketch of a pair of involute spur gears, assuming the angle of obliquity and diameters of the pitch and addendum circles. Show the path of contact and skeleton teeth where contact begins and ceases only.
- 2. Make a sketch of two involute spur gears of unequal diameter, with the smaller gear driving clockwise. Assume the angle of obliquity and the addendum circles so that there will be no angle of approach, but a maximum angle of recess.
- 3. Make a sketch showing the path of contact in a rack and pinion combination, involute system, with the rack driving to the left. Assume the angle of obliquity and addendum lines.

- 4. Make a sketch showing the path of contact in an annular gear and pinion combination, involute system, with the pinion driving counter-clockwise. Assume the angle of obliquity and the diameters of addendum circles.
- 5. Draw the correct tooth curves for two spur gears that are in mesh. Involute system. Cut templets to lay out the tooth curves and check them for contact. Show the teeth going into and out of action.

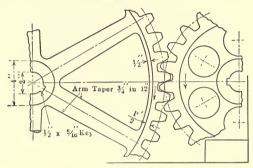

Problem 5.

Data: Number of teeth in gears 36 and 21.

Diametral pitch $1\frac{1}{2}$; angle of obliquity 15° .

Small gear is driver and revolves counter-clockwise.

Thickness of rim below tooth bottoms, $\frac{\text{circular pitch}}{2} \left(= \frac{P'}{2} \right)$.

Note.—Make center line of gears horizontal and in center of sheet with smaller gear to the right.

Lay out the pitch, addendum, dedendum, base and working depth circles, and develop the involute between the base and addendum circles. The part of the tooth between the base and working depth circles is to be drawn radial. Cut templets to fit the tooth outline between the working depth and addendum circles. Space out the teeth on the pitch circles. Ink drawing, slant lettering. Put no dimensions on drawing. Time, 5 hours.

6. Draw the correct tooth curves for an involute rack and pinion that are in mesh. Check the templet for contact and show the teeth going into and out of action.

Data: Teeth in pinion 21. Diametral pitch 1½. Angle of obliquity 15°. Pinion is driver and turns clockwise.

Note.—Make rack horizontal and center of pinion in center of sheet right and left and 1¼ in, from top border line. Use templet of 21 tooth gear of Problem 5. No statement of problem to go on sheet, but under the drawing put Involute Rack & Pinion in vertical capital letters. Ink drawing. Time, 3 hours.

7. Draw the correct tooth curves for an involute annular gear and pinion that are in mesh.

Data: Same as Problem 5. Use same templets.

NOTE.—No statement of problem or data. Only Involute Annular Gear & Pinion. Ink drawing. Time, 3 hours.

8. Draw the correct tooth outlines for two spur gears that are in mesh. Stub tooth 20° system. Show the teeth going into and out of action.

Data: Number of teeth 36 and 21. Diametral pitch $\frac{1\frac{1}{2}}{2}$. Angle of obliq-

uity 20°. Small gear is driver and revolves counter-clockwise.

Note.—This problem is for the purpose of comparing the standard $14\frac{1}{2}^{\circ}$ involute tooth outline with that of the stub tooth 20° tooth outline. It is suggested that, since the data other than the type of tooth is the same as the data used for Problem 5, that this drawing be made on transparent paper and the two systems be compared by superimposing one drawing over the other and the difference noted. Time, 5 hours.

The pitch used in this problem is not found in the table for the stub tooth gear, and the proportion should be taken from Table A on page 94.

9. Draw the correct tooth curves for an involute rack and pinion that are in mesh and show the teeth going into and out of action.

Data: Number of teeth in the pinion 42.

Diametral pitch $\frac{3}{4}$. Angle of obliquity 20°.

Rack is driving to the left.

Note.—Make rack horizontal and the center of the pinion in the center of the sheet right and left and $1\frac{1}{4}$ in. from top border line. Make templet and check for contact. Full-size ink drawing. Time, 4 hours.

10. Draw the correct tooth curves for an involute annular gear and pinion that are in mesh.

Data: Number of teeth in gear 72.

Number of teeth in pinion 42.

Diametral pitch 3; angle of obliquity 20°.

Pinion is driving clockwise.

Note.—Make center line of gears horizontal and in the center of the sheet with the pinion to the left. Full-size ink drawing. Time, 3 hours.

11. Draw the correct tooth curves for a standard involute gear of 12 teeth and for a stub tooth gear of 12 teeth.

Data: Pitch diameters 8".

Shaft 1½" diameter; face of gear 3".

Key $\frac{3}{8}$ " $\times \frac{5}{16}$ ".

Note.—Place gears on center line of sheet top and bottom. Pencil drawing. Cut and check templets. Drawing full size. Time, 5 hours.

12. Two spur gears are in mesh. It is desired to design the teeth so that the addendums will be a maximum. Show the outlines of the teeth going into and out of action.

Data: Number of teeth in gears 40 and 18.

Diametral pitch 2; angle of obliquity 15°.

Large gear is the driver and revolves counter-clockwise.

Note.—Make a full-size pencil drawing on center line of the sheet top and bottom.

Show angles of approach and recess and compare the angle of action with the angle that would be found if the teeth were of standard length. Time, 4 hours.

CYCLOIDAL SYSTEM

105. Cycloidal System.—The cycloidal system, as the name implies has tooth curves of cycloidal form. It is an older system than the involute, but is being replaced by it for many classes of work.

Before taking up the tooth outlines, a brief discussion of the construction of the different cycloidal curves will be given.

106. Cycloid.—A cycloid is the curve generated by a point on the circumference of a circle rolling on a straight line. Let the circle of radius OT, Fig. 101, be the rolling or generating circle, which rolls on the straight line T6'.

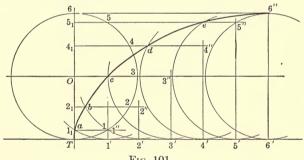


Fig. 101.

Divide the semi-circumference of the circle up into any convenient number of equal parts as six, and lay off on the straight line T1' = T1, 1'2' = 12, 2'3' = 23, 3'4' = 34, 4'5' = 45 and 5'6' = 56.

Through 1', 2', 3', 4', 5' and 6' draw perpendiculars to T6', and through the points 1, 2, 3, 4 and 5 on the semi-circle draw lines parallel to T6', intersecting the diameter of the semi-circle in 1_1 , 2_1 , 0, 4_1 , and 5_1 , and the perpendiculars in 1'', 2'', 3'', 4'', 5" and 6".

On $1_1 1''$ from 1'', lay off $1''a=11_1$; on $2_12''$ from 2'' lay off $2''b=22_1$, etc. Through the points a, b, c, d, e, and 6" draw a smooth curve, which will be the cycloid traced by T as the circle rolls on the straight line,

107. Epicycloid.—The epicycloid is the curve traced by a point on the circumference of a circle as it rolls on the outside of a second circle, called the directing circle. Let OT, Fig. 102, be the radius of the rolling circle and AT, the radius of the directing circle.

Divide the semi-circumference of the rolling circle into any convenient number of equal parts as six, and lay off from T, divisions of the same length on the directing circle. Through

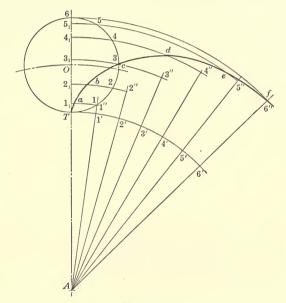


Fig. 102.

the points 1' 2', 3', . . . 6' just found and through the center A draw lines.

With A as a center and radii A1, A2, A3, . . . A6 draw arcs intersecting the diameter of the rolling circle in 1_1 , 2_1 , 3_1 , . . . 5_1 , and the radial lines in 1", 2", 3" . . . 6". On 1" 1_1 , from 1" lay off 1" $a=11_1$; on 2" 2_1 , lay off 2" $b=22_1$; on 3" 3_1 , lay off 3" $c=33_1$, etc.

Through the points a, b, c, d, e and 6'' draw a smooth curve which will be the epicycloid.

If the rolling circle is larger than the directing circle and rolled internally on it, an epicycloid will still be generated.

In Fig. 103 let AT be the radius of the directing circle and OT and OT the radii of the rolling circles which roll externally and internally on the directing circle respectively. In this case, the diameter of the large rolling circle is taken equal to the sum of the diameters of the directing circle and small rolling circle. The curve generated by the large rolling circle rolling internally will then be the same as that generated by the small rolling circle rolling externally. This is called the double generation of the epicycloid, and will be referred to later under annular gears.

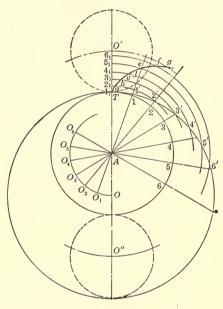


Fig. 103.

108. Hypocycloid.—The hypocycloid is a curve generated by a point on the circumference of a circle rolling internally on the directing circle.

The construction is shown in Fig. 104, and is the same as that for the epicycloid, so that no further explanation is necessary.

If the rolling circle has a diameter one-half that of the directing circle, the hypocyloid formed will be a radial line of the directing circle.

109. Application of Cycloidal Curves to Gear Teeth.—In Fig. 105 let AP be the radius of the pitch circle of a gear, and DP

the radius of a circle that rolls on the outside of the pitch circle and traces the epicycloid Pm. CP is the radius of a circle that

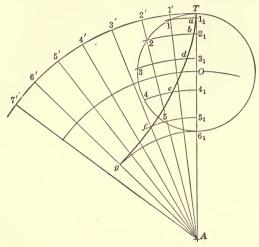


Fig. 104.


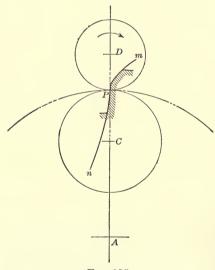


Fig. 105.

rolls on the inside of the pitch circle and traces the hypocycloid Pn. Pm will be the face and Pn the flank of a gear tooth which is shown shaded.

110. Cycloidal Spur Gears.—Let AP and BP, Fig. 106, be the pitch radii and CP and DP the radii of the rolling circles of two cycloidal spur gears that are in mesh.

The rolling circle with its center at C, when rolled on the inside of the lower pitch circle generates the hypocycloid Pn, and when rolled on the outside of the upper pitch circle generates the epicycloid Pr. These curves are the flank of the lower gear and

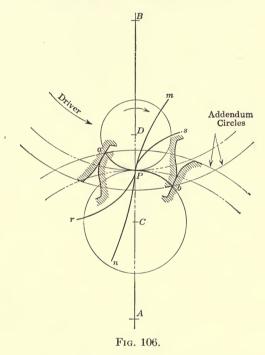

the face of the upper gear respectively, and are generated simultaneously.

The rolling circle with a center at D when rolled on the inside of the upper pitch circle generates the hypocycloid Pm, and when rolled on the outside of the lower pitch circle generates the epicycloid Ps. These curves are respectively the flank and face of the teeth of B and A, and are also generated simultaneously.

The tooth outlines that are generated simultaneously are the parts of the teeth that are in contact, which is the face of one tooth with the flank of its mate on the other gear.

If the addendum circles are as shown and the upper gear is the driver turning in a counter-clockwise direction, contact will begin at a where the addendum circle of the driven cuts the rolling circle of the driver. It will follow along the upper rolling circle until the pitch point is reached. At this point contact will change from the driver's flank and follower's face, to the driver's face and follower's flank, where it will follow along the rolling circle of the driven to the point b where the addendum circle of the driver cuts the rolling circle of the driven, where contact between that pair of teeth will cease.

From the figure it can be seen that the length of the face of the driver's teeth governs the angle of recess, and the length of the face of the driven gear's teeth governs the angle of approach.

Thus, if no angle of approach is desired, the teeth of the driven gear will have no faces, and the driver's teeth will require no flanks. An example of this is sometimes found in the rack and pinion on planer beds.

It will also be noted that if the diameters of the rolling circles are made equal to the pitch radii of their respective gears, that the flanks of the teeth will be radial.

111. Cycloidal Rack and Pinion.—In the rack and pinion combination shown in Fig. 107 let AP be the radius of the pitch circle of the pinion, and C and D the centers of the rolling circles.


The upper rolling circle when rolled on the inside of the pitch circle of the pinion generates the hypocycloid Pm, the flank of the pinion teeth, and when rolled on the pitch line of the rack generates the cycloid Ps, the face of the rack teeth. The lower rolling circle when rolled on the outside of the pinion's pitch circle generates the epicycloid Pr, the face of the pinion teeth, and generates the flank of the rack teeth when rolled on the lower side of the pitch line of the rack, which is the cycloid Pn.

If the pinion drives clockwise as shown, contact will begin at a on the rolling circle of the pinion, and cease at b on the rolling circle of the rack.

112. Cycloidal Rack Teeth with Straight Flanks.—In order to have straight flanks on the rack teeth, the rolling circle of the rack will be of infinite diameter and will coincide with the pitch line. The faces of the pinion teeth, which are developed by this circle, will therefore be involutes. The disadvantage of this form of tooth is that all of the wear on the rack teeth is between the pitch and

addendum lines, there being no contact on the rack teeth below the pitch line.

113. Cycloidal Annular Gear and Pinion.—In Fig. 108 let AP be the pitch radius of the pinion and BP the pitch radius of the annular gear in an annular gear and pinion combination. Let PC be the radius of the inside rolling circle, and PD the radius of the outside rolling circle. The outside rolling circle will generate the epicycloids Pm and Pn which is the flank of the annular

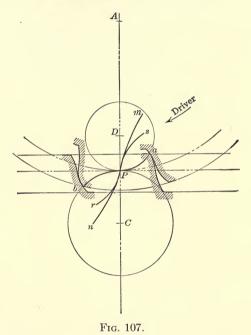


gear tooth and the face of the pinion tooth respectively. The face of the annular gear tooth is the hypocycloid Pr, while the flank of the pinion tooth is the hypocycloid Ps. These curves are generated by the inside rolling circle.

With the pinion driving as shown, contact will begin at a and cease at b. The method of laying out the gears is in every respect similar to that of spur gears.

114. Limiting Size of Annular Gear Pinion.—It was seen in Art. 107 that the same epicycloid could be generated by two different sized rolling circles. The difference in their diameters being

equal to the diameter of the directing circle. On account of this fact, the difference between the pitch circles of a cycloidal annular gear and pinion combination must be equal to the sum of the diameters of the rolling circles or else there will be what is called secondary contact between the teeth.¹

If the pitch circles differ by the sum of the diameters of the rolling circles, and the gears are standard, interchangeable gears, they will differ by twelve teeth.

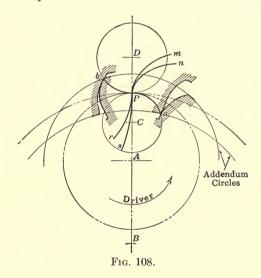

Provided one of the gears have no faces on its teeth, they need differ by but six teeth.²

115. Interchangeable Cycloidal Gears.—In the different pairs of cycloidal gears thus far considered, the rolling circles have not been taken of the same diameter, and it is possible to lay out the teeth of two gears having the same pitch that will mesh properly together even though their rolling circles are not the same size. If, however, the gears are to be interchangeable, that is, any gear mesh with any other of the set, they must, besides having the same pitch, have their tooth curves developed by the same size

¹ For a full discussion of this property of the cycloidal annular gear and pinion, see Professor MacCord's "Kinematics," also a "Treatise on Gear Wheels," by George B. Grant, M. E.


²The reason for this is discussed in Art. 116.

rolling circles. In Fig. 109 if the gears, A, B and C are all of the same pitch, and their tooth curves developed by rolling circles of the diameter shown, B will mesh properly with A and C, but A and C will not mesh with each other.

116. Standard Diameter of Rolling Circle for Cycloidal Gears.—The standard diameter of rolling circle is one that will give radial flanks on a gear of twelve teeth. In order to have radial flanks on the teeth, the diameter of the rolling circle must be one-half that of the pitch circle. (Art 108.)

This does not mean that all the gears of the set will have radial flanks, but only the 12-tooth gear.

For example, the standard diameter rolling circle for a 64-tooth 4-pitch gear would be the same as that for a 12-tooth of the same

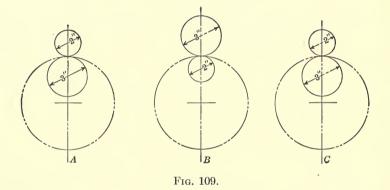

pitch, or $\frac{12}{4} = 3$ in. pitch diameter, and $\frac{3}{2}$ in. $= 1\frac{1}{2}$ in. diameter of rolling circle.

Geo. B. Grant says: ¹ "The standard adopted by the manufacturers of cycloidal gear cutters is that having radial flanks on a gear of fifteen teeth, but is not and should not be in use for other purposes. If any change is made, it should be in the other direction, to make the set take in gears of ten teeth.

"It must be borne in mind that the standard adopted does not limit the set to the stated minimum number of teeth, but that it simply requires that the smaller gears have weak under curved teeth."

^{1 &}quot;Treatise on Gear Wheels," page 41.

- 117. Comparison of Involute and Cycloidal Systems.—In the two systems, the advantages are practically all in favor of the involute tooth. Some of them are as follows:
- 1. The distance between the centers can be changed without affecting the velocity ratio.
- 2. The path of contact is a straight line, thus keeping a constant pressure on the axes.
 - 3. Tooth curves of single curvature.
- 4. Involute rack teeth have straight sides, thus cutter is easily made.
 - 5. Wear on involute teeth more uniform than in cycloidal.
 - 6. Less cutters required to cut a complete set of gears.

The cycloidal system is the older of the two, and for those using it, the expense of changing over to the involute system would be large, but the main objection would be that for repairs on machines already equipped with cycloidal gears, cutters of that system must be kept on hand.

Problems

- 1. Construct an epicycloid for a 3-in. generating circle and an 8-in. directing circle.
- 2. Construct hypocycloids using a 12-in. directing circle and generating circles of 4 in. and 7 in. respectively.
- **3.** In a cycloidal spur gear combination of unequal size, assume the diameters of the pitch, addendum and rolling circles, and show the path of contact for the small gear driving clockwise.
- **4.** In a cycloidal rack and pinion combination with the pinion driving counter-clockwise, assume the diameters of pitch, addendum and rolling circles so that there will be no angle of recess, and show path of contact.
- 5. What are the standard diameters of rolling circles that would be used to generate the tooth outlines for each of the following gears?
 - 1. 28 teeth 2 pitch
- 4. 86 teeth 4 pitch.
- 2. 49 teeth 2 pitch.
- 5. 4 pitch 20 in. pitch diameter.
- 3. 100 teeth 12½ in. pitch diameter. 6. 50 teeth 1 in. pitch.
- 6. Draw the correct tooth curves for two spur gears that are in mesh, cycloidal system. Cut templets to lay out the tooth curves and check them for contact. Show the teeth going into and out of action.

Data: Number of teeth in gears 36 and 21.

Diametral pitch $1\frac{1}{2}$.

Diameter of rolling circles 4 in.

Thickness of rim below tooth bottoms, $\frac{\text{circular pitch}}{2} \left(= \frac{P'}{2} \right)$.

Small gear to drive and revolve clockwise.

Note.—Make center line of gears horizontal and in center of the sheet with the smaller gear to the right. Lay out the pitch, addendum, dedendum and rolling circles. Develop the tooth curves and cut templets to fit them. Space out the teeth on the pitch circles. Ink drawing. Time, 5 hours.

7. Draw the correct tooth curves for a cycloidal rack and pinion that are in mesh. Check the templets for contact and show the teeth going into and out of contact.

Data: Teeth in pinion 21.

Diametral pitch 11/2.

Diameter of rolling circles 4 in.

Note.—Make rack horizontal and center of pinion in center of sheet right and left and $1\frac{1}{4}$ in from top border line. Pinion to drive counterclockwise. Use templet of 21 tooth gear of Problem 6. No statement of problem but this title, Cyclodal Rack & Pinion. Time, 4 hours.

8. Draw the correct tooth curves for cycloidal annular gear and pinion that are in mesh.

Data: Same as for Problem 6. Use same templets. No statement of problem or data, but this title, Cycloidal Annular Gear & Pinion. Time, 3 hours.

9. In a cycloidal annular gear and pinion combination, the annular gear is to be stationary and the number of teeth in the pinion is to be such that a point in its pitch circle moves in a straight line.

DATA: Number of teeth in gear 24.

Diametral pitch 2.


Note.—Make a full-size pencil drawing, placing the annular gear in the center of the sheet. Time, 2 hours.

- 10. Using the data of Problem 6, draw the correct tooth curves for the two gears:
 - (a) so that the angle of action is a maximum;
 - (b) so that the angle of approach is a minimum;
 - (c) so that the angle of recess is a minimum.

PIN GEARS

118. Pin Gears.—If the diameter of the rolling circle having its center at D, Fig. 106, is increased until it coincides with its pitch circle it will generate epicycloids for the faces of the teeth of A and a point for the teeth of B.

Since a point or pin tooth could do no work, it is usual to substitute a pin of sensible diameter, then the tooth curve on the other gear will be parallel to the true epicycloid, and a distance away from it equal to the radius of the pin. In using pin gears, a small number of pins can be used on a gear to correspond to a small number of teeth, but they have not the disadvantage of having weak teeth. Fig. 110 shows a pin wheel of six teeth meshing with a toothed gear. The dotted outline shows the teeth of gear if the pins had no diameter. The circular pitch must of course be the same in each gear, or the arc P1' must equal the arc P1. The maximum radius of addendum circle is found by drawing a straight line P1 and finding where it cuts the circumference of the pin at a. The radius of the addendum circle will be from the center of the gear to a.

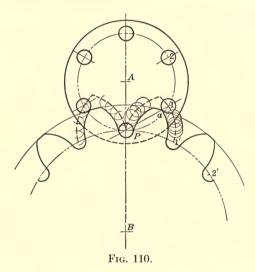

Sometimes rolls are placed on the pins in order to make the action between the teeth more nearly a rolling one. In this case the pins are secured between two circular plates, and the gear is then known as a *lantern wheel*. This type is common in watch and clock mechanisms, except that no rolls are used.

The pins should always be on the driven wheel since then the action between the teeth is almost all on the recess side. It will be wholly so if the pins have no diameter.

Pin gears are not confined to spur gears, but can be used in any combination, and the pins can be on either gear, as a pin annular gear and a toothed pinion.

113

STEPPED AND HELICAL GEARS

119. Stepped and Helical Gears.—Smoother action can be obtained in a pair of gears by having more teeth in contact at one time. This can be done by lengthening the teeth or by making the pitch smaller. By lengthening the teeth, the angle of action is made greater and since more teeth are brought into contact at one time, the pressure on each tooth is decreased, but gear teeth are assumed to act as cantilever beams and the teeth are lengthened at a greater rate than the number of pairs of teeth in contact is increased, so that the resulting gear is weaker.

By decreasing the pitch, the thickness of the tooth is decreased, and this is at a greater rate than the pairs of teeth are increased, so again the gear is made weaker.

More pairs of teeth can be brought into contact at one time by placing several gears side by side on the same shaft, and advancing the teeth of each ahead of the one next to it, by the circular pitch divided by the number of gears, and then fastening them securely together. Such a gear is called a *stepped gear*.

If the number of steps is increased infinitely, and the teeth on each placed $\frac{1}{n}$ th of the circular pitch ahead of the one next to it, where n equals the number of steps, a line drawn through the center of the top of each tooth will be a helix, and such gears are called *helical*, *spiral*, or *twisted* gears. A pair of such gears are shown conventionally in Fig. 111.

If the power to be transmitted is great, there will be considerable end thrust, that is, one gear will tend to slide by the other along its shaft. This tendency is overcome by placing on the shaft gears of the same size and of equal but opposite helix angles. These gears are represented conventionally in Fig. 112, and are known as herring-bone gears.


There has recently been introduced into this country a system of herring-bone gears known as the Wuest gear, named after its

¹ The term "spiral," as applied to gears, suggests a gear the teeth of which lie in a plane, but the word is used to denote gears the teeth of which have helical form, and while it has common usage the terms, twisted or helical would perhaps convey a better idea of the gear. This is suggested by Mr. R. E. Flanders in his book on "Gear Cutting Machinery."

inventor. The gear is cut from a solid piece and the teeth of one half are advanced one half the circular pitch ahead of the other.¹

Approximate Methods of Laying out Tooth Curves

120. Approximate Methods of Laying Out Tooth Curves.— There are a number of methods of laying out tooth curves by using templets, rectangular coördinates and circular arcs. It is not necessary to use these methods as much since gear cutting machinery has been brought to such a high state of develop-

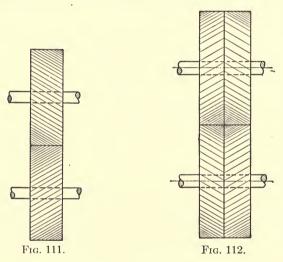

ment as it was when the pattern maker or millwright had to lay out the teeth of gears that were usually cast.

The Robinson Templet Odontograph is one of the best known templet methods for laying out tooth curves. The odontograph, together with the method of forming the side of a tooth, is illustrated in Fig. 113. It is necessary to have a table to set the instrument properly.

The curves of the sides of the templet are logarithmic spirals, one being the evolute of the other.

The holes in the templet are for the purpose of fastening it to a

¹ See article on "The Herring-bone Gear," by P. C. Day. *Tronsactions* of the American Society of Mechanical Engineers, Vol. 33, page 681.

bar, so that it can be swung about the center of the gear for the purpose of drawing in all of the tooth outlines. It will be noticed


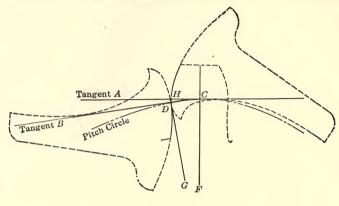


Fig. 113.

that two settings of the instrument are necessary to draw in one side of a tooth.

The Willis Odontograph is illustrated in Fig. 114 and is for laying out involute teeth by the

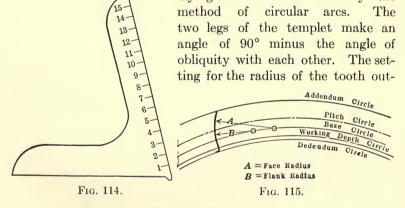

line depends upon the pitch diameter of the gear, and after the setting is obtained, the teeth can be drawn in.

Grant's Involute Odontograph is also a method of laying out involute teeth by means of circular arcs. The lengths of radii to be used for different pitches and numbers of teeth can be found from Table D.

The method of laying out the radii is shown in Fig. 115.

Table D.—Grant's Involute Odontograph (Standard Interchangeable Teeth)


Centers on Base Line

Teeth	DIVIDE BY THE I	DIAMETRAL PITCH	MULTIPLY BY THE CIRCULAR PITCH		
20002	Face radius	Flank radius	Face radius	Flank radius	
10	2.28	.69	. 73	.22	
11	2.40	.83	. 76	. 27	
12	2.51	.96	.80	.31	
13	2.62	1.09	.83	. 34	
14	2.72	1.22	.87	.39	
15	2.82	1.34	. 90	.43	
16	2.92	1.46	.93	.47	
17	3.02	1.58	. 96	.50	
18	3.12	1.69	. 99	.54	
19	3.22	1.79	1.03	. 57	
20	3.32	1.89	1.06	. 60	
21	3.41	1.98	1.09	. 63	
22	3.49	2.06	1.11	. 66	
23	3.57	2.15	1.13	. 69	
24	3.64	2.24	1.16	.71	
25	3.71	2.33	1.18	.74	
26	3.78	2,42	1.20	.77	
27	3.85	2.50	1.23	.80	
28	3.92	2.59	1.25	.82	
29	3.99	2.67	1.27	.85	
30	4.06	2.76	1.29	.88	
31	4.13	2.85	1.31	.91	
32	4.20	2.93	1.34	.93	
33	4.27	3.01	1.36	.96	
34	4.33	3.09	1.38	.99	
35	4.39	3.16	1.39	1.01	
36	4.45	3.23	1.41	1.03	
37-40	4.:	20	1.	.34	
41-45	4.			.48	
46-51	5.	06	1.	.61	
52-60	5.			.83	
61-70	6.	1		.07	
71-90	7.	72	2.	.46	
91-120	9.	78	3.	.11	
121-180	13.	38	4.	. 26	
181-360	21.	62	6.	. 88	
-					

GEAR CUTTING

121. Cutting Spur and Annular Gears.—The general method for cutting these gears is to use a tool, the outline of the cutting face of which is the same as the space between two teeth. Fig. 116 shows a tool that can be used in a planer or shaper for cutting spur and annular gears. The profile *abcd* is the shape of the space between the teeth. The tool can be sharpened across the front face without changing the profile.

Fig. 117 shows a rotary cutter for use in a milling machine. This also has the profile *abcd* the shape of the space between the teeth, and the face can be sharpened parallel to the axis

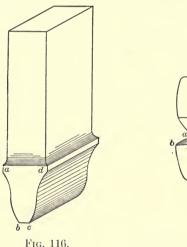

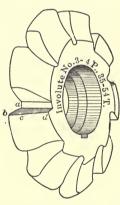


Fig. 117.

without changing the profile. This cutter cannot be used as readily for annular gears as that of Fig. 116.

122. Interchangeable Gear Cutters.—In order to use either of the two cutters just described to cut a gear theoretically correct, it is necessary to have a different cutter for each different number of teeth and pitch, since the space between the teeth changes with each number of teeth. Therefore to cut a complete set of gears of any one pitch, from twelve teeth to a rack theoretically correct, it will take as many different cutters as there are gears.

It has been found, however, that one cutter can be used to cut several different numbers of teeth of any one pitch, accurate enough for practical purposes, as in the larger gears the shape of the space does not change very much by the addition of a few teeth.

The following Table E shows the cutters used by the Brown & Sharpe Mfg. Co. for gear teeth.

TABLE E

Involute cutters, 8 cutters in each set		Cycloidal cutters, 24 cutters in each set				
Cutter	Teeth	Cutter	Teeth	Cutter	Teeth	
No. 1 cuts No. 2 cuts No. 3 cuts No. 4 cuts No. 5 cuts No. 6 cuts No. 7 cuts No. 8 cuts	135 to rack 55 to 134 35 to 54 26 to 34 21 to 25 17 to 20 14 to 16 12 to 13	A cuts B cuts C cuts D cuts E cuts F cuts G cuts H cuts I cuts J cuts K cuts L cuts	12 13 14 15 16 17 18 19 20 21 to 22 23 to 24 25 to 26	M cuts N cuts O cuts P cuts Q cuts R cuts S cuts T cuts U cuts V cuts W cuts X cuts	27 to 29 30 to 33 34 to 37 38 to 42 43 to 49 50 to 59 60 to 74 75 to 99 100 to 149 150 to 249 250 or more rack	

In order that standard involute gear teeth may be more accurately cut, a set of fifteen cutters has been introduced, the intermediate cutters being designated by half numbers.

TABLE F.—INVOLUTE CUTTERS, 15 CUTTERS TO EACH SET

Cutter	Teeth	Cutter	Teeth
No. 1 cuts	135 to rack	No. 5 cuts	21 to 22
No. 1½ cuts	80 to 134	No. $5\frac{1}{2}$ cuts	19 to 20
No. 2 cuts	55 to 79	No. 6 cuts	17 to 18
No. $2\frac{1}{2}$ cuts	42 to 54	No. 6½ cuts	15 to 16
No. 3 cuts	35 to 41	No. 7 cuts	14
No. 3½ cuts	30 to 34	No. 7½ cuts	13
No. 4 cuts	26 to 29	No. 8½ cuts	12
No. $4\frac{1}{2}$ cuts	23 to 25		

The cutters are given in terms of the number of teeth, for by this method they are applicable to all pitches.

It will be noticed that there are eight or fifteen cutters necessary for a set of involute gears, while in the cycloidal system there are twenty-four cutters. The reason for this is that in the involute system the tooth outlines do not change as rapidly as in the cycloidal system.

123. Conjugate Methods of Cutting Teeth.—If instead of using cutters that have the shape of the space between the teeth, those having an outline the same as the tooth of a gear are used, it is possible to cut a complete set of gears of one pitch with a single cutter.

This is known as the molding-generating principle and is largely used for cutting spur gear teeth.

Imagine a gear blank of wax or other plastic material rolled with a gear or rack on which the teeth have been cut, their pitch circles being tangent and rolling together without slipping. Teeth will be formed in the soft material of the blank, which will mesh properly with the molding gear.

The gear blank of course cannot be made of wax, so in order to get the same result, the molding gear has cutting edges on its teeth and is given a reciprocating motion across the face of the blank. The rolling together of the pitch circles taking place after the cutting gear has passed across the face of the blank and come back ready for the second stroke.

In Fig. 118 let A be a single tooth of an involute rack ¹ and B a blank on which teeth are to be cut. Let the motion be such

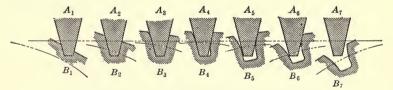


Fig. 118.

that the pitch line of the rack tooth and the pitch circle of the gear roll together without slipping, and also give the rack tooth, which has a cutting edge like the planer tool of Fig. 116, a reciprocating motion across the face of the blank. The different positions represent the stages in the cutting of the space between two teeth.

¹ Any other involute or cycloidal gear tooth could be used equally well.

All of the gears cut with this tooth will mesh properly with it and will also mesh correctly with each other.

Fig. 119 shows a complete gear for a cutter instead of a single tooth. The gear has cutting edges the same as the single tooth, and is first fed in to the proper depth, that is, so that the pitch circles are tangent, and then both rotate slightly before beginning each cutting stroke. Several teeth are in the process of being cut at one time, although but one tooth is completed at a time.

124. Fellows Gear Shaper.—This machine, illustrated in Fig. 120, uses a cutter shaped like a pinion, and works on the molding-generating principle.

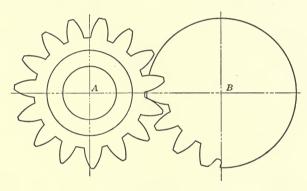


Fig. 119.

The cutter and blank are fastened to vertical axes which are connected so that when one rotates the other is rotated the proper amount, the two moving so that their pitch circles roll together without slipping. In addition to this, the spindle carrying the cutter can reciprocate in the direction along its axis, so that when ascending the teeth of the cutter act as cutting tools on the blank in the same way as the cutting tool of a shaper.

The cutter spindle, is carried on a cross-rail so that the axis of the cutter can be moved toward that of the blank.

The action of the machine is as follows: The cutter A and blank B of Fig. 120 A are keyed to their respective axes, with neither the cutter nor the blank rotating.

During the up-stroke, the teeth of the cutter cut metal from the blank, and on the down-stroke the cutter-spindle is fed toward the blank axis a small amount.

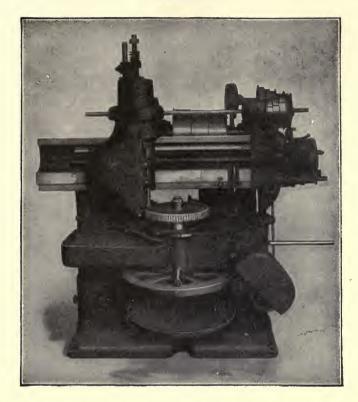


Fig. 120.


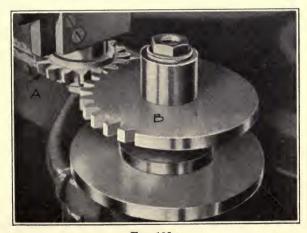


Fig. 120 A.

This feeding in motion is continued at the end of each noncutting stroke until the pitch circles are tangent and then ceases.

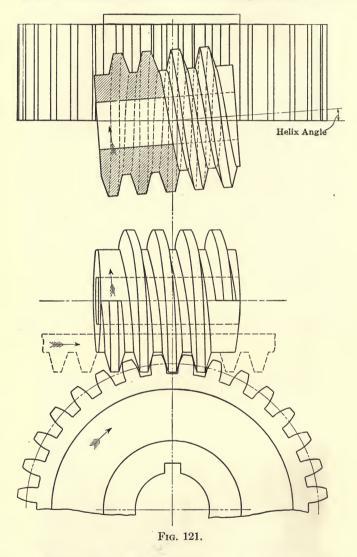

In place of this, at the end of each non-cutting stroke, both the cutter and blank axes rotate slightly through corresponding angles so that their pitch circles roll together without slipping.

During the cutting stroke neither the cutter nor blank rotate. After the blank has made one complete revolution the teeth are all cut. Each tooth of the cutter acts as a cutting tool in turn, although several teeth of the blank are acted upon at one time.

One cutter will cut all gears of the same pitch, and all gears that are cut by the cutter will mesh properly with it, and with each other.

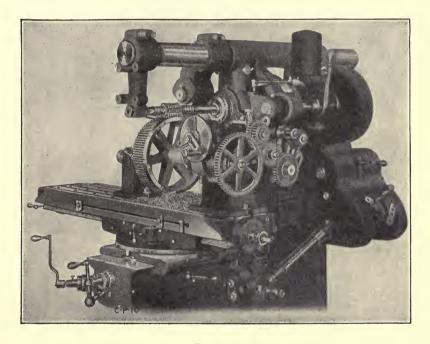


Fig. 122.

Either involute or cycloidal cutters can be used. An objection to the cycloidal form of cutter is that they must be produced by means of templets, while the involute form can actually be generated.

125. Gear Hobbing.—The gear hobbing machine is generally designed to cut teeth by the molding-generating principle in which a rack form of tooth is used for the cutter, instead of the circular cutter, but instead of a single rack tooth as in Fig. 118, a 'hob' is used. A hob is a cutter shaped like a worm, with its sides gashed similarly to a reamer or tap to form cutting faces.

Fig. 121 illustrates the principle, but instead of a hob, an ordinary worm is shown. In a section of the worm along its axis the teeth have straight sides, the same as involute rack teeth, the rack being shown in dotted outline.

The teeth of the worm or hob, being of helical form, like a screw thread, its axis, in order to cut teeth on the blank parallel with the axis of the blank, cannot be perpendicular to the blank, but must be at an angle of 90° minus the helix angle of the worm.

Fig. 122 shows a gear hobbing attachment on a universal milling machine, in which the hob is placed on the arbor of the machine with the hob and blank driven at the desired velocity ratio.

The hob is slowly fed across the face of the blank, and when it has gone all the way across the work is completed.

CHAPTER VIII

BEVEL GEARS, WORM AND WORM WHEEL

126. Bevel Gears.—In all of the gears thus far considered, the elements of the teeth were parallel to each other, and with the exception of the helical gears, the elements of the teeth were parallel to the axis of the gear, the tooth outlines being generated

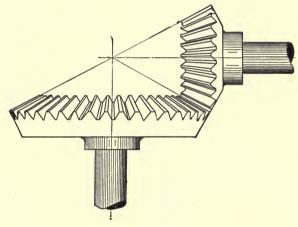


Fig. 123.

by a right line which was the element of a flexible band as in the involute system, or the element of a rolling cylinder as in the cycloidal system.

In bevel gears, the axes intersect, the pitch cylinders becoming pitch cones, and the elements of the teeth converging at the point of intersection of the shafts.

An idea of this can be had if it is imagined that alternate grooves and projections are placed on the friction cones of Fig. 84 as was done in Figs. 87 and 88. The cones will then look as in Fig. 123, which shows a pair of bevel gears.

The pitch cones are segments of a sphere, and in order to lay out the gears theoretically correct, the tooth outlines need to be laid out on the surface of the sphere, making use of spherical trigonometry. With the exception of this difference, the bevel gear differs little in theory from the ordinary spur gear.

Bevel gears are always laid out in pairs, and are not interchangeable as are gears for parallel axes.

127. Velocity Ratio.—The velocity ratio for bevel gears is inversely as the radii of the bases of their pitch cones, and the method of laying out a pair of cones for any desired velocity ratio was discussed in Art. 88.

128. Miter Gears.—These are bevel gears that are of the same size and in which the shaft angle is 90°. The velocity ratio in a pair of miter gears is therefore as 1:1.

129. Crown Gears.—A crown gear is one in which the sides of the pitch cone make an angle of 180° with each other. The base of the pitch cone is therefore a great circle of the sphere on which the teeth of the crown gear is developed. The crown gear is sometimes called the rack of bevel gears.

The involute crown gear has not, however, teeth with straight sides as in the involute rack of spur gears. The crown gear with

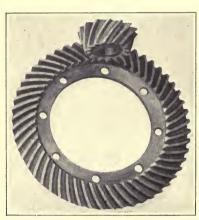


Fig. 124.


straight sided teeth is known as the *octoid* tooth, so called from the peculiar figure eight line of action. This tooth is the invention of Mr. Hugo Bilgram of Philadelphia, and will be referred to again under Cutting Bevel-gear Teeth.

130. Spiral Bevel Gears
—The spiral bevel gear has
recently been introduced
by the Gleason Gear
Works, having been developed primarily for automobile drives, but is ap-

plicable to any high-speed machinery where quiet running is desired.

To get the best results, the angle of the spiral should be such

as to give a spiral lead of at least one full pitch within the width of the gear face.¹

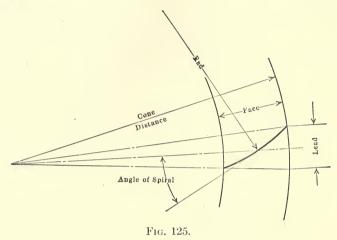

LAYING OUT THE TEETH OF BEVEL GEARS

131. Tredgold's Method.—It was stated above that to be laid out theoretically accurate, bevel gears must be laid out on a spherical surface, and as this is not developable it is necessary to use an approximate method, and the one most commonly employed is known as Tredgold's method.

Let OA and OB, Fig. 126, be the axes of two cones COP and POD respectively, their bases being a spherical surface. Normal to the elements of these cones, draw the cones PAC and PBD, the bases of these second or "back" cones coinciding with those of the cones first drawn. If these back cones are cut along one of their elements and rolled out into the plane of the paper, the radius of the upper one, the apex of which is at A, will be AP, and the length of the arc $PE = PC \times \pi$. The lower cone will have a radius BP, and the length of the arc $PF = PD \times \pi$. On the arcs PE and PF can be laid out the tooth curves, the same as for spur gears having pitch radii AP and BP. The pitch must be such that the gears will have a whole number of teeth. After laying out the tooth curves on the developed back cones,

¹ For a complete description of this type of gear, see the Gleason Gear Works' booklet, "Spiral Type Bevel Gears."

the cones can be rolled back into their original positions and the teeth drawn on the pitch cones.

It will be noticed that that part of the back cones on which the teeth are laid out differs very little from the spherical surface.

Fig. 127 shows one of these cones laid out with half of the teeth drawn in. The teeth in this figure appear in their true thickness in the plan view, but are foreshortened.

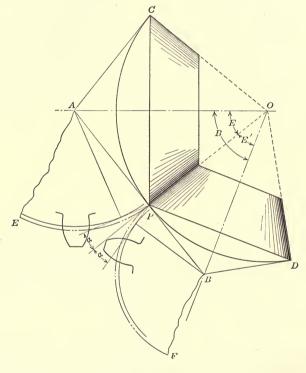


Fig. 126.

The method of construction is clearly shown in the figure so that there is no need of further explanation.

132. Shop Drawing of Bevel Gears.—In making a drawing for use in the shop, it is not necessary to go into the detail of drawing in the tooth curves as in the previous article, but a much more simple drawing together with the necessary angles and dimensions is all that is required.

Problem.—Make a complete working drawing of a pair of bevel gears of 26 and 20 teeth; diametral pitch 4; involute system; shaft angle 90°; width of face $1\frac{1}{2}$ in.; diameter of shafts 1 in.; diameter of hubs $2\frac{1}{4}$ in.

Make axis of large gear horizontal.

26 teeth, 4 pitch = $6\frac{1}{2}$ in. pitch diameter.

20 teeth, 4 pitch = 5 in. pitch diameter.

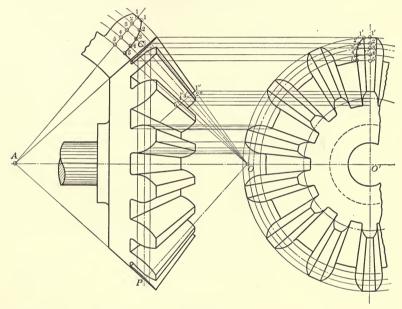


Fig. 127.

Draw the axes of the gears OA and OB, Fig. 128, making an angle of 90° with each other. From O on OA lay off $2\frac{1}{2}$ in., the pitch radius of the small gear and draw CP perpendicular to OA. On OB from O lay off $3\frac{1}{4}$ in., the pitch radius of the large gear and draw PD perpendicular to OB. Complete the pitch cones POC and POD and draw the back cones, or at least that part of them where the teeth are to be laid out.

The angles E and E' are called the pitch, or center angles.

From the table of tooth parts, page 94, find the addendum and dedendum of the teeth and lay them out from C, P and D as shown. From the points thus found, draw toward the apex of the pitch cones and lay off the face of the gears.

The angles that the addendum and dedendum lines make with the axes of the gears, give the face and cutting angles F and C respectively.

The angle of the edge, is T, and is the same as the center or pitch angle.

The angles U and V in the small figure are called, respectively, the angle increment and angle decrement. These are the differ-

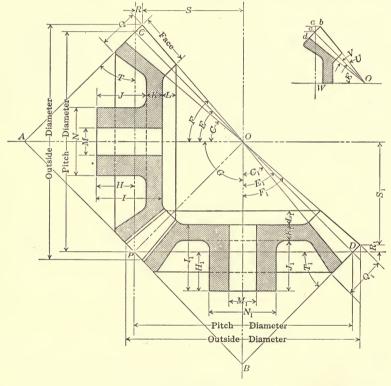


Fig. 128.

ences between the pitch angle and the face and cutting angles respectively.

When the axes of the gears are at right angles, the various angles and the outside diameter can be found as follows:

In the small figure,

Let Wc = pitch radius of small gear

Let OW = pitch radius of large gear

Then
$$\tan E = \frac{Wc}{OW} = \frac{\text{pitch radius of small gear}}{\text{pitch radius of large gear}}$$
$$= \frac{\text{number of teeth in small gear}}{\text{number of teeth in large gear}}$$
$$OC = \frac{Wc}{\sin E}$$
Then

$$\tan U = \frac{cb}{Oc}$$
 and $\tan V = \frac{cd}{Oc}$

cb and cd are the face and flank of the tooth, the dimensions being found in the table of tooth parts.

The angle acb = angle E.

Then $ac = cb \cos acb$.

Therefore pitch diameter of large gear + 2ac = outside diameter of large gear.

In a similar manner the distance R can be found.

It is of course necessary to find these angles and dimensions for each of the gears.

When the shaft angle is not 90° the method is not quite as simple, but after finding the pitch angles, the others are found in a manner similar to that described. By some authorities, R is called the "backing," while others use H as the backing.

The other dimensions necessary for a complete shop drawing are indicated in the figure.

CUTTING BEVEL-GEAR TEETH

133. Approximate Methods.—Bevel-gear teeth being on the surface of a cone, their section is different at all points along the elements of the face. It is not possible therefore to cut the teeth theoretically correct with circular cutters. For narrow faces it can be done approximately by using a cutter the shape of the tooth at the large end, but about 0.005 in. less than the thickness of the space at the small end, measured on the pitch line. The settings of the milling table and blank are so made that one side of all the teeth is finished first, then with another setting of the table, the other side is milled.

Sometimes for gears that are to be cut with circular cutters, the blank is turned up so that the addendum line of the face of the gear is parallel with the pitch line, or the face of the cone instead of being drawn to the apex of the pitch cone is drawn parallel with the pitch cone. In cutting the teeth on such a blank their depth is made constant.

Mr. C. H. Logue says,¹ "The milling of bevel gears is now practically a thing of the past, except for an occasional job required for shop use, the generating of bevel gears having reached such a point that the milling machine cannot compete either in quality or time."

134. Accurately Cut Bevel-gear Teeth.—Fig. 129 illustrates diagrammatically a method of cutting the teeth of bevel gears in which a former or templet is used.

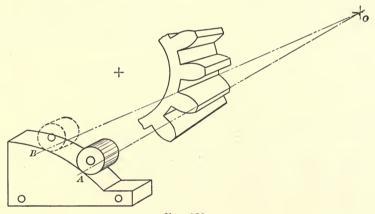


Fig. 129.

The templet is made the shape of the teeth that are to be cut, and being farther from the apex of the pitch cone, is made to a larger scale than the tooth outline. The cutting tool is carried on a frame, the back end of which is supported by a roll resting on the templet.

The cutting point of the tool moves with a reciprocating motion along the line OA, which is tangent to the templet and roll, and passes through the apex of the pitch cone.

Another method of guiding the rear end of the cutting tool frame is to move it in a circular arc by means of a link, instead of by using a templet. This is called the odontograph method.

¹ American Machinist Gear Book, page 153.

135. Bilgram Bevel-gear Planer.—This machine bears the same relation to the bevel gear that the Fellows gear planer does to the spur gear, in that the teeth are generated. In Art. 123 was discussed a method of making interchangeable gears by means of a rack tooth, and all gears that would mesh correctly with the rack would also mesh correctly with each other. In the Bilgram bevel-gear planer, the cutting tool corresponds to the straight-sided tooth of an octoid crown gear.



Fig. 130.

The space between the teeth of bevel gears being of varying width, however, it is not possible to use a tool the shape of Fig. 118, but only the right or left half of it.

The planer illustrated in Fig. 130 is automatic, and consists of two principal parts, the shaper which holds and operates the tool, and the evolver which holds and moves the blank.

The blank must move as a rolling cone, which is done first by

securing its arbor in an inclined position to a semi-circular horizontal plate between two uprights. This semi-circular plate can be oscillated on a vertical axis passing through the apex of the blank, and is driven by a worm and worm-wheel combination. The second part of the motion is obtained by means of two steel bands stretched in opposite directions, one end of each being fastened to the frame and the other ends wrapped around a cone, which corresponds to the pitch cone of the blank.

The tool which is operated by a Whitworth quick-return motion mechanism, cuts on the forward stroke, and during each return stroke the tool is raised clear of the blank by means of a cam, and the blank rotated one tooth by means of gearing and index mechanism. All spaces are treated in the same manner, after which the tool automatically adjusts itself for the second cut on a tooth, and so on until the blank is completed. A similar tool is used to finish the other sides of the teeth.

The inclination of the arbor that holds the blank is made adjustable in order to adapt it to the angle of the desired gear. This adjustment must be exactly concentric with the apex of the blank. Ordinarily a different sized rolling cone would have to be used to cut each different sized gear, but means have been devised whereby a limited number of cones are sufficient.¹

Problems

1. Make a finished pencil or ink shop drawing of a pair of bevel gears of 36 teeth and 27 teeth respectively, 3 pitch and 15° angle of obliquity. Face of gears $2\frac{1}{4}$ in.

Note.—Put on all of dimensions and angles shown in Fig. 128. No statement of problem to go on sheet, but this data. Bevel Gears,

Teeth 36 and 27. Pitch 3 diametral. Involute system.

Time, 4 hours.

2. Make a sketch showing how you would find the pitch cones for a pair of bevel gears in which the driver made five revolutions to seven of the driven, with a 115° shaft angle.

3. Make a finished pencil drawing of a miter gear of 20 teeth, 2 diametral pitch, and 15° angle of obliquity. Face of gear $2\frac{1}{2}$ in.


Note.—Make views of gear similar to gear shown by Fig. 127. Place gear in center of the sheet top and bottom; the point $A_{\frac{1}{4}}$ in. to right of left border line and O' 6 in. left of right border line. Time, 4 hours.

¹ For a more complete description of this machine, see *American Machinist* of May 9, 1885, and January 23, 1902.

4. Make a finished pencil drawing showing all dimensions of a pair of bevel gears, the small gear driving and the velocity ratio 1 to 2.

Data: Diametral pitch 2; involute system; angle of obliquity 15°; face of gears 2¼ in.; angle between shafts 90°.

Note.—Place the drawing on the sheet so that the sheet will appear balanced. The small gear on the horizontal center line to the left of the large gear. Time, 4 hours.

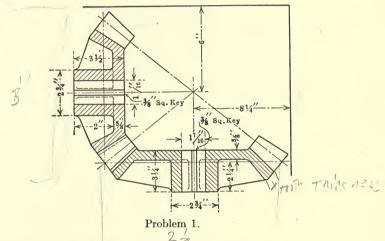

5. With all data the same as for Problem 4, design a pair of stub tooth bevel gears.

Note.—Same as for Problem 4.

6. With the angle between shafts $\begin{Bmatrix} 75^{\circ}, \\ 105^{\circ}, \end{Bmatrix}$ design a pair of bevel gears with the data the same as for Problem 4.

Note.—Same as for Problem 4.

WORM AND WORM WHEEL

136. Worm and Worm Wheel.—When two shafts are at right angles but do not intersect, motion can be transmitted between them by means of a worm and worm-wheel combination, which is illustrated in Fig. 131.

Velocity Ratio.—Worm gearing differs from spur gearing in that the velocity ratio does not depend upon the diameters of the gears, but is the relation between the number of threads on the worm (single or multiple) and the number of teeth in the worm wheel. The worm is usually the driver, and for a single thread worm, each revolution of the worm would rotate the worm wheel one tooth,

while if it were a double-thread worm, the worm wheel would be rotated two teeth and so on. For example, with a single-thread

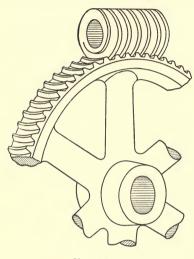


Fig. 131.

worm and a 48-tooth wheel, it would require 48 revolutions of the worm to rotate the wheel once. If the worm were of double-thread, it would require 24 revolutions of the worm for one of the wheel, while if a triple-thread worm were used 16 revolutions of the worm would be necessary for one of the wheel.

Thus it will be seen that the pitch diameters do not enter into the question.

If the pitch and number of teeth of the wheel are given, and also the distance between the shaft centers, the pitch

diameter of the worm should be such that the two pitch circles are tangent.

137. Pitch.—The circular pitch system is ordinarily used in making worm and worm-wheel calculations, for the reason that the worms are usually cut in the lathe the same as screw threads, and lathes are not equipped with the proper change gears for cutting diametral pitches. Diametral pitch may be used to cut a worm in the lathe if the proper change of gears are provided. The proportion is as follows: ¹

 $\frac{\text{Stud gear}}{\text{Lead screw gear}} =$

22

 $7 \times$ pitch of lead screw \times diam. pitch of worm to be cut

Example.—To cut a worm of 12 diametral pitch on a lathe having a lead screw 6 threads to the inch.

$$\frac{\text{Stud gear}}{\text{Lead screw gear}} = \frac{22}{7 \times 12 \times \frac{1}{6}} = \frac{11}{7}$$

¹ "Treatise on Gearing," by G. B. Grant.

Any change of gears in the proportion of 11 and 7 will cut the worm with an error of $\frac{1}{10,000}$ of an inch to the thread of the worm.

The objection to the circular pitch system for spur gears, that the distance between the shaft centers will be an inconvenient fraction unless the circular pitch is inconvenient, does not apply in this case however.

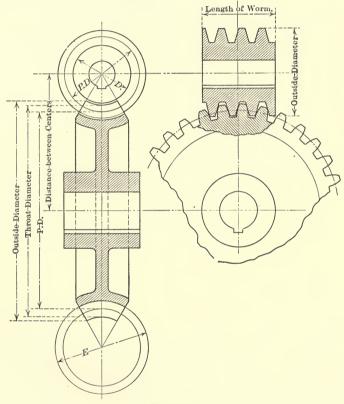


Fig. 132.

138. System of Teeth Used.—The involute system is used in worm gearing for the reason that the worm will have teeth of straight sides which are easily cut in the lathe.

Fig. 132 shows two views of a worm and worm wheel, the left-hand view being a section along the axis of the worm wheel and the right-hand view a section along the axis of the worm. From

these views it can be seen that the section of the worm in the righthand view is the same as an involute rack and the section of the wheel (not wholly cross-hatched), in the same view is the same as that of a spur gear having the same pitch diameter and number of teeth as the wheel. The throat diameter of the wheel is the same as the outside diameter of a spur gear having the same pitch and number of teeth. The dimension E on the figure represents the diameter of the hob that would be used to cut the teeth on the worm wheel.

139. Tooth Contact.—Contact between the worm and wheel teeth is not very definitely determined but it is generally believed to be nearly line contact between any pair of teeth for small gears, although it may have some width, and becomes surface contact for the larger gears. To get as much contact as possible, the worm wheel is constructed so that its sides partially envelop the worm. The included angle between the sides is generally made 60 degrees or 90 degrees.

140. Length of Worm.—The worm is not limited in length but should be long enough to provide all of the contact that can be obtained between any pair of teeth. It is often made longer than necessary and moved along the shaft when it becomes worn, to bring a new part of the worm in contact with the wheel teeth.


The curve¹ shown in Fig. 133 gives the length of worm required to get the maximum contact when $14\frac{1}{2}$ -degree angle of obliquity is used. Contact will not be along the whole length of the worm on its axial section, but on the sides as the wheel partially envelops the worm.

141. Cutting the Worm Wheel Teeth.—A worm is first made in the lathe, the same as the worm that is to mesh with the wheel, except that its diameter is twice the clearance greater, then its sides are fluted similar to a reamer or tap in order to form cutting edges. This hob and the wheel blank are then mounted in a milling machine, the hob being fed down into the blank until their pitch lines are tangent, then both are turned at the proper velocity ratio. The only difference between hobbing the worm wheel and the spur gear shown in Fig. 122 is that in the worm wheel the axis of the hob is directly over the center line of the blank, and does not move across it.

¹ From data of Browne & Sharpe Manufacturing Company.

For worm wheels of less than 30 teeth the flanks will be undercut unless the blank is made over-size.

If the axis of the worm deviates from a right angle with that of the wheel by an amount equal to the thread angle of the worm.

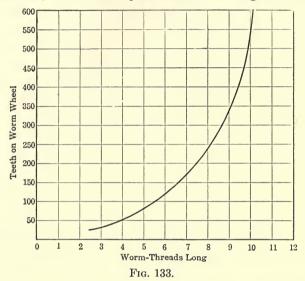

the worm can be used with an ordinary spur gear. This is sometimes done in rough work.

ELLIPTICAL GEARS

142. Elliptical Gears.—Elliptical gears are the most common of the non-circular gears.

In order that two ellipses roll together properly, they must be equal and similar, and each ellipse must rotate about one of its foci, the distance between the centers of rotation being equal to the major axis.

Let A and B, Fig. 134, be two ellipses with foci ab and cd respect-The links joining opposite foci form a crossed link kinematic chain similar to Fig. 16 in which the crossed and opposite links are equal. The point of intersection

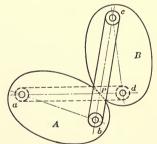


Fig. 134.

of the crossed links is at the tangent point P, of the ellipses. If one of the ellipses is held stationary, the other can be rolled with pure-rolling contact around it.

143. Velocity Ratio.—Since the two ellipses are the same size, the velocity ratio will be as 1:1, but at any part of the revolution the ratio is inversely as the radii from the fixed foci to the tangent point P, of the ellipses.


Any system of teeth that is practicable for spur gears can be used for elliptical gears and the teeth if cut with the same cutter will all have different profiles. This may result in weak under-cut teeth at and near the ends of the ellipses, but can be remedied by using one cutter for the ends where the ellipse has a small radius, and another for the sides where the radius is larger. The blanks are usually cut by clamping them together and cutting both at one operation. This insures the mating teeth being the same.

Elliptical gears can be used for "quick-return motions" such as slotters and shapers, where all of the work is done on half of the revolution, the other half being used to get the tool out of the way and the work ready for the next stroke.

They are not in very general use as they are hard to cut without the use of special attachments.

Problems

1. Make a full-size working drawing of a worm and worm-wheel combination. Involute system.

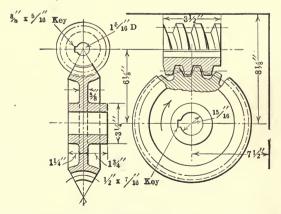

Problem 1.

Data: Velocity ratio 32:1.

Single thread right-hand worm.

Circular pitch 7 in.

Note.—Make teeth in contact at pitch point. Draw tooth outlines of wheel teeth by means of Grant's Involute Odontograph table, page 116. Develop helix for outline of worm teeth. No statement of problem, but these data:

WORM AND WORM WHEEL.

Teeth in wheel 32.

Single thread R. H. worm.

Circular pitch $\frac{7}{8}$ in.

Involute system.

Time, 4 hours.

2. Make a full-size working drawing of a worm and worm wheel combination. Involute system.

Data: Velocity ratio 16:1.

Double thread right-hand worm.

Circular pitch 7 in.

Note.—Same as for Problem 1.

3. In a worm and worm wheel combination the number of teeth in the worm is 80, the velocity ratio 40:1; the circular pitch is 1 in.; the outside diameter of the worm is 6 in. What is the distance between centers?

4. Make a full-size working drawing of a worm and worm wheel combination. Involute system.

Data: Outside diameter of worm 5 in.

Length of worm 6 in.

Diameter of worm shaft $2\frac{1}{2}$ in.

Distance between centers 9 in.

Diametral pitch 2.

Angle of obliquity 15°.

Triple thread R. H. worm.

Note.—Place drawing on the center line of the sheet right and left, and the center line of the worm shaft $3\frac{1}{2}$ in. down from top. Pencil drawing showing all dimensions. No statement of the problem. Time 4 hours.

CHAPTER IX

GEAR TRAINS

144. Gear Trains.—When more than two gears are in mesh, such a combination is a train of mechanism (Art. 15), and is called a gear train or train of gears.

It is often desirable to find the revolutions of the last gear of a train without finding the revolutions of each intermediate gear.

The number of teeth on any two gears that mesh together is proportional to their respective pitch diameters, and since the revolutions are inversely proportional to the pitch diameters (Art. 14), therefore, their revolutions are also inversely proportional to the number of teeth on the gears.

145. Value of a Train.—By this expression is meant the ratio of the revolutions of the first and last gear of the train in a given time.

In Fig. 135 let A, B, C, D, E, and F be the pitch circles of gears on the shafts, 1, 2, 3, 4 and 5, and having the number of teeth as shown.

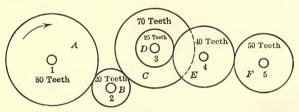


Fig. 135.

The gear A drives B, B drives C, and since C and D are on the same shaft they will rotate as one gear. D drives E and E drives F.

Revolutions of B_80 .	Revolutions of C_20
Revolutions of $A = \overline{20}$;	Revolutions of $B - \overline{70}$
Revolutions of E_{25} .	Revolutions of F_40
Revolutions of $D = \overline{40}$;	Revolutions of $E = 50$

Or,

$$\frac{\text{Revolutions of } F}{\text{Revolutions of } A} = \frac{80}{20} \times \frac{20}{70} \times \frac{25}{40} \times \frac{40}{50} = \frac{4}{7}$$

That is for each revolution of A, F will make $\frac{4}{7}$ of a revolution. Instead of the number of teeth, the pitch diameters can be used. A rule for the above may be expressed as follows: To find the number of revolutions of the last gear of a train, divide the continued product of the teeth or pitch diameters of all the drivers times the revolutions of the first gear, by the continued product of the teeth or pitch diameters of all the driven gears.

It is not necessary that the same unit be used throughout the various ratios, but the same unit must be used in the same ratio. That is, we may have a 60-tooth gear driving a 45-tooth gear and a 12-in. gear driving a 6-in. gear, and so on, but we cannot use a 60-tooth gear driving a 12-in. gear.

A gear train may be written in the following manner to avoid making a sketch of the gears.

First axis, 64 teeth.

Second axis, 32-10''Third axis, 15-50 teeth

Fourth axis, 20Fifth axis, 30-12'' (annular)

Sixth axis, 3-24 teeth

All of the gears on the same horizontal line are on the same shaft, and each gear drives the one directly below it.

If the first gear of this train makes 60 revolutions per minute, the value of the train will be $\frac{64\times10\times50\times20\times12\times60}{32\times15\times20\times30\times3}=533\frac{1}{3}$ revolutions per minute for the sixth axis.

146. Idle Gear and Direction of Rotation.—An idle gear is a gear placed between two axes for the purpose of changing the directional relation of the two. Thus if two gears are placed in direct contact their direction of rotation will be opposite, but if one intermediate gear is placed between them their direction of rotation will be the same. The idler does not change the velocity ratio, since it is both a driver and a driven. In Fig. 135, the gears B and E are idlers and the velocity ratio would not be affected if they were left out. The gears C and D however are not idlers

although they are on the same shaft, since the number of teeth on them is not the same.

In spur gears when there is an odd number of intermediate axes between the first and last, the direction of rotation of the first and last axes will be the same, while if there is an even number of intermediate axes, the direction of rotation will be opposite.

If there is one annular gear in the train, it changes the direction of rotation of the last gear from what it would be otherwise. Thus in the last problem worked out there are four intermediate axes and one annular gear, so that the direction of rotation of the first and last axes will be the same.

147. Gear Train for Thread Cutting.—Fig. 136 illustrates the gearing found on an ordinary engine lathe that is equipped for cutting screw threads. On the spindle E, are the gears F, C and D and the stepped cone. The gear D is keyed to the spindle and the stepped cone is free to revolve on the spindle except when it is locked to D by means of a pin.

The gear C is fastened to the stepped cone and revolves with it. A and B are the back gears and are keyed to a shaft that is parallel to the spindle. This shaft has eccentric bearings so that the back gears may be thrown out of mesh with C and D.

When the back gears are "thrown out," D and the stepped cone are locked together, and as many speeds can be obtained as there are steps on the cone, while with the back gears "thrown in," D and the stepped cone are not locked and the number of speeds of the spindle is doubled.

F is the spindle gear and is for driving the thread-cutting train. G and H are tumbling gears or tumblers, and are for the purpose of changing the direction of rotation of the screw M.


G meshes with I, which is the inside stud gear, and the arrangement is such that F and H may be thrown out of mesh and G be made to mesh directly with F. F and I are generally made the same size, but when they are not the same, I is usually made twice the size of F, so that I makes one-half as many revolutions as the spindle.

On the same shaft with I is the outside stud gear J. Meshing with J is an intermediate K which meshes with the screw gear L on the end of the lead screw M. The only gears that it is necessary to change in thread cutting are the stud gear J and the screw gear L. The intermediate K is held on a slotted bracket, not

shown in the figure, which allows K to be adjusted to accommodate different sized gears J and L.

The cutting tool is held in a tool holder which is moved back and forth along the work by means of a split nut engaging the lead screw.

If there are eight threads per inch on the lead screw, then eight revolutions of the lead screw would advance the cutting tool one inch, and if the work made four revolutions to eight of the lead screw, four threads per inch would be cut on the work.

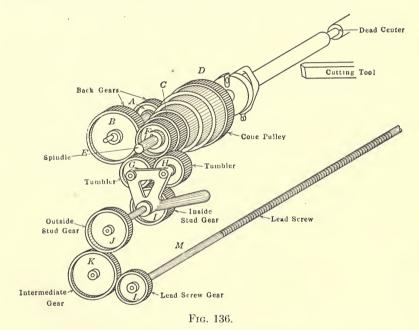

To find the number of teeth in the stud and screw gears when F and I are of the same size. Since the gears G, H and K are idlers they need not enter into the calculations, and since the spindle and stud shafts make the some number of revolutions it is only necessary to find the revolutions of the stud shaft.

Let N = number of threads per inch to be cut on work.

Let n = number of threads per inch on lead screw.

Let T = number of teeth on screw gear.

Let t = number of teeth on stud gear.

Then

 $\frac{\text{Revolutions of stud shaft}}{\text{Revolutions of lead screw}} = \frac{\text{number of teeth on screw gear}}{\text{number of teeth on stud gear}}$

or

$$\frac{N}{n} = \frac{T}{t}$$
 and $T = \frac{N}{n} \times t$.

The following table of change gears was taken from the plate on a 16 in. swing lathe, having six threads per inch on the lead screw and twice as many teeth on the inside stud gear as on the spindle gear.

TABLE G

Threads to be cut	Teeth on stud gear	Teeth on screw gear	Threads to be cut	Teeth on stud gear	Teeth on screw gear
3 4	80 72	20 24	15 16	48 48	60 64
5	48	20	18	48	72
$\frac{6}{7}$	48 48	24 28	20 22	24 24	40 44
- 8 9	48 48	32 36	24 26	24 24	48 52
10 11	48 48	40 44	28 30	24 24	56 60
$11\frac{1}{2}$	48	46	32	24	64
12 13	48 48	48 52	36 40	$\begin{array}{c} 24 \\ 24 \end{array}$	72 80
14	48	56	48	20	80

To obtain a greater range of threads without adding more change gears, the intermediate gear K, on Fig. 136, might be compounded, that is, replaced by two gears of different sizes, and fastened together, one of them meshing with the stud gear and the other with the screw gear.

The involute system is used for change gear sets for in this system the center distance can be varied without affecting the velocity ratio.

Problems

1. How many R.p.m. does the last gear of the following train make, if the first gear makes 25 R.p.m.? Is its direction of rotation the same or opposite?

12 in.
$$6$$
 in. 20 in. -6 in. 12 in. 20 in. $-48T$ (annular) $24T-12$ in.

2. The first gear of the following train makes 100 R.p.m. and turns clockwise. How many R.p.m. does the last gear make?

$$60T-4P$$
.
15 in.
10 in. -12 in.
15 in.
30 T (bevel)—single Thd. worm

120T worm wheel 10 in.

3. Design a lathe screw train for right- and left-hand thread cutting, to cut 8, 9, 10, 11, $11\frac{1}{2}$, 12, 13, 14, 16, 18, 20, 24, and 27 threads per inch.

Data: Threads per inch on lead screw 8.

Teeth in spindle and inside stud gears 24.

Teeth in tumblers 21.

Teeth in intermediate 108.

All gears 12 pitch.

Note.—Make a full-size pencil drawing, representing the extreme positions of the gears by their pitch circles.

4. An engine lathe screw train is designed to cut right-hand and left-hand threads. What gear will be used on the lead screw to cut 5 threads per inch?

Data: Back gears 40 teeth and 20 teeth.

Threads per inch on lead screw 10.

Teeth in spindle gear 20.

Teeth in stud gear 20.

5. The lead screw of a lathe has 6 threads per inch. Find the numbers of teeth for change gears to cut 8, $11\frac{1}{2}$, 14, 18 and 27 threads per inch.

Note.—These threads are the Briggs standard pipe threads.

6. A motor running at 1500 R.p.m. is connected by a train of gears to a shaft as follows:

Double thread worm

$$80T$$
 worm wheel — 12 in.

9 in.—
$$8T$$

 $12T$ — $16T$ (bevel)
 $20T$ (bevel)— 8 in.
12 in.

What is the R.p.m. of the shaft?

CHAPTER X

BELTING

148. Belts.—Belts are flexible connectors and are used for connecting shafts where the distance is too great for gears, or where an absolutely constant velocity ratio is not required.

Belting may be divided into two general classes, flat and round; the former is used on pulleys with faces that are cylindrical or nearly so, and the latter which is usually either of fiber or metal, requiring pulleys with grooves or flanges to keep the rope from running off the pulley or drum.

149. Velocity Ratio and Directional Relation.—When two pulleys are connected by an inelastic belt of no appreciable thickness, all parts of the belt and the surfaces of the pulleys have the same linear velocity, if there be no slipping and therefore their revolutions are inversely proportional to their radii.


This condition is not attained in practice on account of the elasticity and thickness of the belt. In order to be accurate the thickness of the belt should be added to the diameters of the pulleys in making calculations. In this discussion, where the diameter of the pulley is referred to, it means diameter of pulley plus thickness of belt.

When the velocity ratio between two shafts is large, instead of making a single reduction, it may be made in one or more steps by using a *counter shaft* or *jack shaft*. This is an intermediate shaft on which there are two pulleys of different diameters. Thus if the velocity ratio between two shafts were 1:40, the ratio might be divided up 1:5 and 1:8.

The method of connection shown in Fig. 137 is an open belt, while that shown in Fig. 138 is a crossed belt.

With an open belt both pulleys turn in the same direction, or the directional relation is the same, while in the case of the crossed belt, the directional relation is opposite. BELTING 149

In order that a belt may maintain its position on a pulley, its center line on the approaching¹ side must lie in a plane perpendicular to the axis of the pulley. If a force is applied to the approaching side of the belt parallel to the axis of the pulley, each succeeding part of the belt will take up a position a little farther along on the face of the pulley. A force applied to the receding side of the belt will have no effect on that pulley unless it is great enough to move the belt bodily. However the receding side with respect to one pulley is the approaching side with respect to the other pulley.

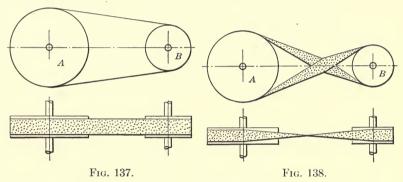

- 150. Crowning Pulleys.—Because of the fact that belts do not remain exactly straight and the pulleys in exact alignment, some means must be provided for keeping the belts from running off, and this can be accomplished by means of flanges on the pulleys, or a fork placed on each side of the belt, but the most common method is to *crown* the pulley. By this is meant that the diameter of the pulley is greater in the center than at the edges. The crown may be either straight or spherical and its amount will depend upon the width and speed of the belt, and the distance between the centers of the pulleys. Less crown is required the wider the face of the pulley, the greater the speed and the greater the distance between the pulley centers.
- 151. Tight and Loose Pulleys.—When machines are driven from a line shaft, and it is not desirable to have them run all of the time, means must be provided so that any machine may be

¹ By the approaching side is meant the part of the belt advancing toward the pulley. The side where the belt leaves the pulley is called the receding side.

stopped without stopping the line shaft. Common methods of doing this are by means of clutches, or the tight and loose pulley combination. The tight and loose pulleys are two pulleys placed side by side on the counter shaft, the tight pulley being keyed to the shaft, and revolving with it, while the loose pulley is held in place by a collar, and is free to revolve on the shaft. When the machine is thrown out of operation the belt is shifted from the tight pulley to the loose pulley. The loose pulley should be made of slightly smaller diameter so that the belt will not be stretched as tightly when running idle.

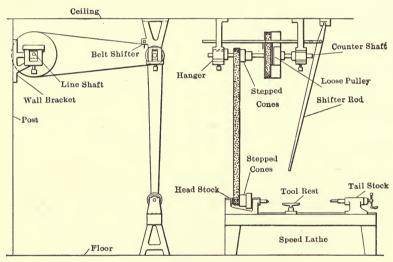


Fig. 139.

Fig. 139 illustrates a method of connecting a lathe with the line shaft by means of belts.

The pulley on the line shaft, over which the belt runs from the tight or loose pulley is made with a cylindrical face, and a width at least equal to that of the tight and loose pulleys combined.

- **152.** Mule Pulleys.—In Fig. 140 is shown a method of comnecting two shafts with a belt when they are too close together to connect them by the methods of Figs. 137 or 138.
- 153. Belts for Intersecting Shafts.—When two intersecting shafts are to be connected by belts, guide pulleys must be so placed that the belt will run on the pulley straight (Art. 149). This is accomplished in Fig. 141 by using guide pulleys CC, the

axes of which are perpendicular to a tangent to the pulleys A and B shown in the upper view, and their faces are tangent to the center line of the pulleys A and B in the lower view.

154. Belts for Shafts that are neither Parallel nor Intersecting.—The most common form of this arrangement is the "quarter turn" belt in which the shaft angle is 90 degrees.

Fig. 142 shows two views of such a combination. The main point to bear in mind

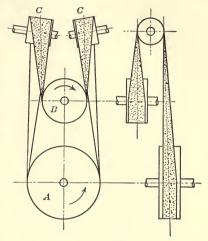


Fig. 140.


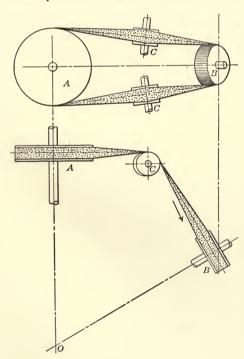


Fig. 141.

when adjusting the pullevs for a belt of this kind is to have it run on the pulley straight. This is accomplished if a plane passed through the middle of the face of each pulley, and perpendicular to its axis is tangent to the face of the other pulley. It will be noted that after the pulleys are adjusted, the belt will run in one direction only. In order to have it run in the opposite direction. each pulley must be moved along its shaft a distance equal to the diameter of the other. or else a guide pulley must be used as shown in Fig. 143.

155. Length of Belts.—If the distance between the centers of two shafts and the diameters of the pulleys are known, the length of belt required for them can be calculated as follows:

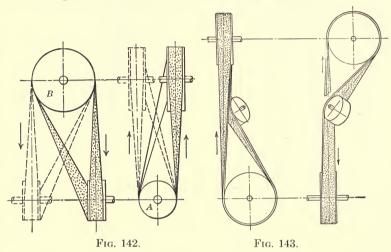

1. For Open Belts. See Fig. 144.

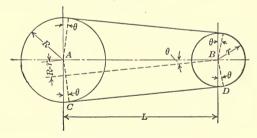


Fig. 144.

Let L = distance between pulley centers in inches.

Let R = radius of large pulley in inches.

Let r = radius of small pulley in inches.

The total length of belt is the length not in contact with either pulley plus the length in contact with the large pulley plus the length in contact with the small pulley.

Let C and D be the tangent points of the belt and pulleys. Then 2 CD = length of belt not in contact with the pulleys.

$$2CD = 2\sqrt{L^2 - (R-r)^2}$$

Length of belt in contact with large pulley

$$= R(\pi + 2\theta) = R\left(\pi + 2\sin^{-1}\frac{R - r}{L}\right)$$

Length of belt in contact with small pulley

$$= r(\pi - 2\theta) = r\left(\pi - 2\sin^{-1}\frac{R - r}{L}\right)$$

: Total length of open belt

$$=2\sqrt{L^2-(R-r)^2}+R\left(\pi+2\sin^{-1}\frac{R-r}{L}\right)+r\left(\pi-2\sin^{-1}\frac{R-r}{L}\right)$$

$$=2\sqrt{L^2-(R-r)^2}+\pi(R+r)+2(R-r)\sin^{-1}\frac{R-r}{L}$$

For large distances between shafts and with pulleys of nearly the same diameter, the third part of the above equation may be omitted.

2. For Crossed Belts. See Fig. 145.

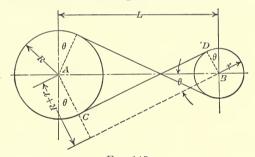


Fig. 145.

Using the same notation as before, the tangent points of the belt and the pulleys are C and D, then 2CD=the length of belt not in contact with the pulleys.

$$2CD = 2\sqrt{L^2 - (R+r)^2}$$

Length of belt in contact with large pulley

$$= R(\pi + 2\theta) = R\left(\pi + 2\sin^{-1}\frac{R+r}{L}\right)$$

Length of belt in contact with small pulley

$$= r(\pi + 2\theta) = r\left(\pi + 2\sin^{-1}\frac{R+r}{L}\right)$$

:. Total length of belt


$$=2\sqrt{L^2-(R+r)^2}+R\left(\pi+2\sin^{-1}\frac{R+r}{L}\right)+r\left(\pi+2\sin^{-1}\frac{R+r}{L}\right)$$
$$=2\sqrt{L^2-(R+r)^2}+(R+r)\left(\pi+2\sin^{-1}\frac{R+r}{L}\right)$$

It will be noticed that for open belts, the sum and difference of the radii of the pulleys are used, while in the case of crossed belts only the sum of the radii are considered.

- 156. Stepped Cones for Same Length of Belt.—On most machine tools the driving pulley is usually stepped, the belt running over a similar one on the counter shaft, and as the same belt must be used on the different pairs of steps they must be designed with this in mind.
- 1. For Open Belts.—No simple formula has been derived that can be used for calculating the size of steps on which an open belt is to be used, so this problem is generally solved graphically.

An approximate method often used is that of C. A. Smith¹ and is as follows:

Let A and B, Fig. 146, be the centers of the shafts, and L the distance between them in inches.

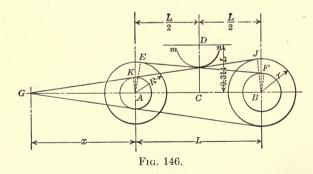

At C half way between A and B, erect a perpendicular CD of length equal to 0.314 L (this coefficient was determined experimentally).²

¹ See Transactions American Society of Mechanical Engineers, Vol. X, page 269.

² When the angle between the belt and center line of pulley exceeds 18 degrees, *CD* is taken as 0.298*L*.

Draw a line EF tangent to the pulleys at E and F. With D as a center draw the are mn of such a radius that it will be tangent to the line EF.

Let BJ be the radius of one of the pulleys of the second pair of steps; to find its mate draw the line JG tangent to the arc mn and tangent to an arc of radius BJ. From A drop a perpendicular AK to this line which will be the radius of the mate.

If instead of the diameter of one of the second pair of steps, the velocity ratio of the second pair together with the diameters of the first pair is given, the solution will be as follows:

Let the distance from where the line JK extended, intersects the line of centers at G, to A equal x. Let the velocity ratio of $\frac{A}{B} = \frac{BJ}{AK} = a$.

Then by similar triangles
$$\frac{x+L}{x} = \frac{BJ}{AK}$$
. $\therefore x = \frac{L}{a-1}$.

So that by taking $GA = x = \frac{L}{a-1}$ and drawing a line through G tangent to FJ, pulleys for the required velocity ratio will be obtained.

When the smaller pulley is at B, the value of a becomes less than 1, and that of x negative, which indicates that it must be laid off from A toward the right in the figure.

2. For Crossed Belts.—In designing stepped pulleys for a crossed belt, it is only necessary to keep the sum of the radii for the different pairs of steps constant. Thus if the radius of each one of a pair of steps is 18 in., their sum is 36 in., and the radii of the other pairs of steps that would take the same length of crossed belt could be 24 in. and 12 in., 30 in. and 6 in., and other radii in which their sum is 36 in.

ROPE DRIVING

157. Rope Drive.—In this form of belting, the pulleys must be provided with grooves to guide the rope. For fibrous ropes these grooves are generally of V section, the rope pulling down into them and increasing the tractive power.

For metal rope or cable, this form of groove would be injurious to the cable, so it is made of semi-circular section, the cable resting on the bottom of the groove which may have a leather, gutta-percha or wood insert to prevent metal rubbing on metal. There are two systems of rope driving in general use, the English or individual rope system, which has a separate rope for each groove and the American or single rope system in which a single rope is carried around all of the grooves and brought back from the last to the first by means of a guide pulley set at an angle with the other pulleys.

These two systems are shown diagrammatically in Figs. 147 and 148. With the individual ropes, a single rope may break

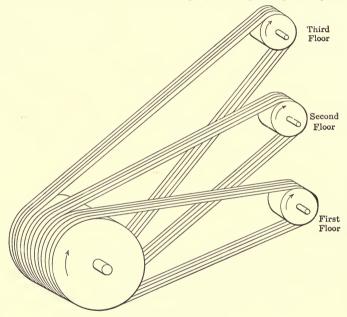


Fig. 147.

and the load be carried by the others, which is not the case with the single rope system. On the other hand, it is difficult to obtain uniform tension on all of the ropes. This is accomplished in the single rope system by means of a tension pulley and weight, so that the wear on the rope is more uniform throughout its length than on the separate ropes of the individual system.

CHAIN DRIVING

158. Chain Drive.—The chain drive is generally used where the work is heavy and a positive motion is required at a com-

BELTING 157

paratively low speed. The wheels over which the chains run have teeth to receive alternate links of the chain and are called *sprocket* wheels. The wheels shown in Figs. 149 and 150 have


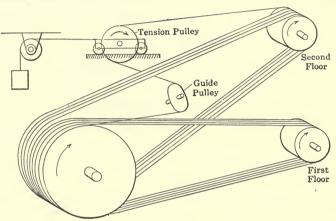


Fig. 148.

alternate single and double teeth to receive the chain, in other cases the teeth of the wheels are all alike as in bicycle sprocket wheels.

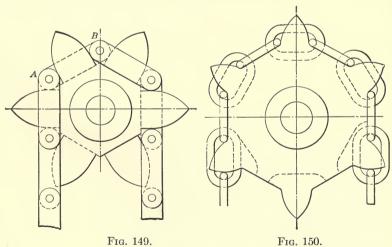

In Fig. 149 the curve of the tooth may be found by taking a center at A and a radius AB minus the radius of the end of the chain link.

To reduce friction the pins are often provided with rolls as in pin gearing. This form of chain is used in automobile drives.

To find the pitch diameter of an ordinary sprocket wheel, Let P', Fig. 151, be the pitch or length of one link of the chain.¹

Let T = number of teeth in wheel.

Let c = pitch radius of wheel.


Let b = one-half of the chordal pitch.

$$\phi = \frac{360^{\circ}}{2T}$$

then

$$\sin \phi = \frac{b}{c};$$
 and $c = \frac{b}{\sin \phi}$

After chains have been used for some time, the pitch may change on account of the links stretching and the pins becoming worn,

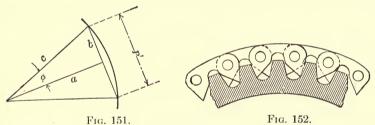

so that if the chain originally fitted the teeth, it will not later, and the strain may be all carried on a single tooth.

159. Renold Silent Chain.—This is the invention of Hans Renold and is a great improvement in chain drives.


A short section of the chain and sprocket is shown in Fig. 152.

The chain is built up of flat pieces which lap by each other and are fastened together by steel pins. The sides of the teeth that come in contact with the wheel as well as those of the wheel are made straight.

It is very satisfactory for motor drives where a positive motion is desired and the distance between the shafts too small for belting. It also always fits the wheel and takes up the backlash.

¹ This can be readily found by taking a piece of chain, measuring its length and dividing by the number of links.

160. Morse Rocker Joint Chain.—This chain, shown in Fig. 153, like the one just described, is built up of flat pieces of steel but of a different shape. The pins instead of being a single

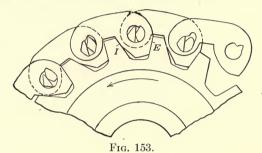

round pin consists of two hardened steel parts so formed that they will rock together and reduce friction. This chain can be used in place of belting for speeds up to 2000 ft. per minute.

Problems

- 1. A countershaft makes 50 R.p.m. and has on it a stepped cone, the diameters of the steps being 4 in., 6 in., and 8 in. respectively. The diameters of the corresponding steps on the machine spindle are 9 in., 7 in., and 5 in. respectively. The number of teeth in the back gears are 40 and 25, and the gears that mesh with them have 25 and 35 teeth. How many changes of speed can be obtained, and what will be the R.p.m. of the work for each?
- 2. Calculate the lengths of crossed and open belt required for two pulleys of 10 ft. and 4 ft. in diameter respectively, and 25 ft. between centers.
- 3. An emery wheel 8 in diameter is to have a peripheral speed of 2500 ft. per minute. It is driven by means of a countershaft upon which there are two pulleys, one 18 in. diameter driven by means of a belt from a pulley 36 in. diameter on the main shaft, and the second which drives a pulley 2 in. diameter on the emery-wheel shaft. What must be the diameter of the second pulley on the countershaft if the lineshaft makes 80 R.p.m.?
- 4. Design a pair of stepped pulleys for a { crossed open } belt in which the distance between the centers is 24 in., diameter of smallest step 4 in., diameter of shafts 1 in. Revolution per minute of driver 200. Revolutions per minute of driven to be 50, 100, 200, 400, and 800 respectively, for each of the pairs of steps.

Note.—Lay out the pulleys according to the formulas for crossed belt and by Smith's graphical method for open belts. Check the diameters of each pair of pulleys by calculating the length of belt required. Make the drawing half size. Time, 4 hours.

- 5. A countershaft 10 ft. from the lineshaft which revolves 200 R.p.m. is to be driven at the speeds 60, 80, 100, 120 and 140 R.p.m. Find the diameter of the stepped cone pulleys to drive with an open belt, the smallest pulley to be not less than $4\frac{1}{2}$ in, diameter.
- 6. Two stepped cone pulleys are equal and the diameters of the largest pulleys each 16 in. The maximum and minimum speeds of the driven shaft is 340 and 30 R.p.m. With a crossed belt, what are the diameters of the pulleys and find the R.p.m. of the driving cone pulley shaft?
- 7. Two shafts are 4 ft. apart and are to be connected by a chain drive of 1 in. pitch links. The velocity ratio is 5:3 and the small sprocket has 9 teeth. What are the pitch diameters of the sprockets and what length of chain is necessary?

CHAPTER XI

INTERMITTENT MOTIONS

RATCHET GEARING

161. Ratchet Gearing.—This is perhaps the most common form of intermittent motion and consists of two principal parts, the *ratchet wheel* and *pawl* or *detent*.

A simple form is shown in Fig. 154. The center of the ratchet

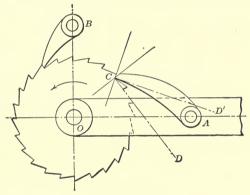


Fig. 154.


wheel is at O, and the driving pawl has a center at A on the arm OA.

The wheel is prevented from turning backward by the pawl with a center at B.

The wheel teeth and pawl should be so shaped that when a load is applied, the pawl will not tend to leave contact with the wheel tooth. To obtain this result a common normal to the front face of the pawl and teeth should pass between the pawl and ratchet wheel centers. CD is such a normal. If the teeth and pawl were so shaped that the common normal were CD', the pawl would then tend to disengage itself from the wheel when under load.

162. Multiple-pawl Ratchet.—In using the pawl with center at B, to prevent backward motion of the wheel, it will only do it after the wheel has rotated backward far enough for the pawl to engage the teeth, which may vary from zero to the pitch of the teeth.

This backward motion can be reduced by making the pitch smaller, which weakens the teeth, and is not always desirable.

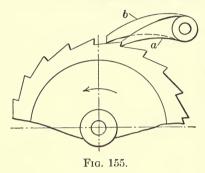

It can also be reduced by placing several pawls side by side on the pin and making them of different lengths. In this way the backward motion can be reduced to the pitch divided by the number of pawls.

By placing a number of driving pawls side by side and having them of different lengths, a very fine feed can be obtained without decreasing the pitch.

An illustration of this is the set works on sawmill log carriages. Here a fine feed is required for sawing various thickness but fine teeth would not stand the wear and tear.

Fig. 155 shows this arrangement with two pawls in which one

is made one-half of the pitch of the teeth longer than the other.

163. Weston Ratchet.

—Fig. 156 illustrates a simple ratchet wheel and pawl as applied to the Weston Ratchet or Scotch drill. The friction of the drill in the


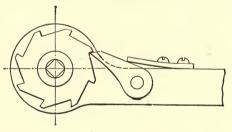


Fig. 156.


hole in this case prevents backward motion.

164. Armstrong Universal Ratchet.—The Armstrong Universal Ratchet, shown in Fig. 157, has 12 teeth on the wheel and four pawls, which engage one at a time. The universal quality of the tool as claimed by the makers is due only to the fact that the axis of the two trunnions on which the handle turns, is at an acute angle with the axis of the drill, so that a very small motion of the end of the handle will turn the drill.

165. Double Acting Ratchet.—To get a motion of the wheel in one direction for both the forward and backward motions of the pawl lever the methods of Figs. 158 or 159 may be employed.

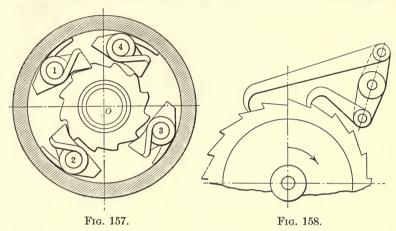


166. Reversing Pawl.—If it is desired to get a motion of the wheel in either direction, the form of reversing pawl shown in Fig. 160 may be used. In this case it will be noted that the form of wheel teeth are different from where motion in one direction

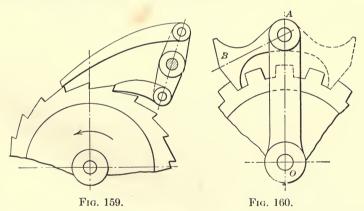

only is required. This form is sometimes used on machine tool feed mechanisms.


167. Masked Ratchet.—When it is necessary to vary the motion of the ratchet wheel without varying that of the pawl, it may be done by "masking" one or more teeth of the wheel.

In Fig. 161, if the full movement of the pawl will advance the wheel, say eight teeth, then the cam b, which has a slightly larger diameter than the outside diameter of the wheel, is cut away on one side so that the pawl can act on the wheel tooth during the whole angle, and hole number 1 is located in the plate. Then the cam is revolved on its shaft so that the pawl will act on the teeth during the last seven-eighths of its motion, and hole number 2 is located, and so on, locating the holes so that one tooth will be cut out each time, till in the ninth hole all of the teeth are masked. The width of pawl face must be equal to the face of ratchet wheel plus the cam face. A mechanism similar to this is used on some of the positive feed engine lubricators and on printing press inking mechanisms.

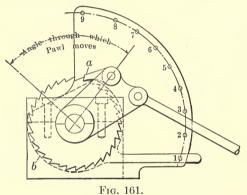

- 168. Silent Ratchets.—It is not always necessary that the connection between the wheel and pawl be of positive form as shown in the foregoing figures, and in some cases a friction drive may be substituted as in Figs. 162, 163 or 164. These are sometimes called *silent* ratchets.
- 169. Positive Ratchets.—The ratchet mechanisms so far discussed together with many variations of them are suitable for feed mechanisms where the motions of the driver are not too rapid; in such cases the shock at the beginning of motion may be too great, and the inertia of the wheel may be such as to cause it to "over-travel." In such mechanisms as revolution counters where a definite motion of the follower must be secured each time, some means must be employed to prevent over-travel. A device for this purpose is shown in Fig. 165. The lever to which


the pawl is attached has a projecting beak so formed that when the pawl first acts on a pin, the end C of this beak passes across the line of motion of the pins and limits their motion. The curve CD is an arc with O as a center.

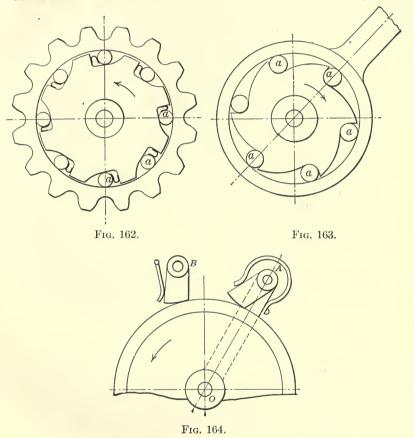

170. Magnetic Ratchet.—The magnetic ratchet shown in Fig. 166 also accomplishes the same result. This consists of a metal disk A and an arm B that swings about the center of A. On B is a magnet C, which grips the plate and by a commutator device is released for the return stroke of the lever.

As soon as the magnet C releases A a second magnet on the back (not shown), grips it and prevents any backward movement of the disk. These ratchets are used on dividing engines.

171. Jack Ratchets.—In all of the ratchet mechanisms so far discussed, a rotary motion was given to the wheel, but ratchet

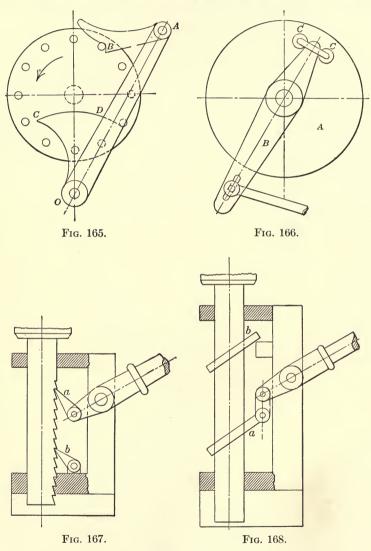


mechanisms can be used to impart a reciprocating motion. Two examples of this kind are shown in the lifting jacks of Figs. 167 and 168. In each case, the pawl a does the lifting, and b holds

the load while a new grip is taken with a. Fig. 168 is of the silent ratchet type.


CLUTCHES

172. Positive Clutches.—In Fig. 169 is shown a method of connecting the ends of two shafts, A and B, that are in alignment

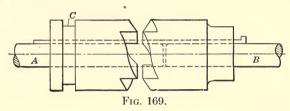

so that motion can be transmitted from B to A in one direction only. This is accomplished by having the part of the clutch on B rigidly keyed to it, and the part on A fastened by a feather key to prevent its turning, but allowing it to be moved along the shaft, to engage with the part on B. These jaws can be made the other hand from that shown so that A will be turned in the opposite direction.


If it is desired to have A turn in either direction the jaws can be made square as shown in Fig. 170. These are positive clutches.

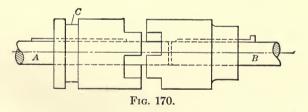

173. Friction Clutches.—Another type of clutch is that in which the motion is imparted from one part to the other by means of friction between the surfaces.

One of the most common forms of this type is shown in Fig. 171 and is known as a cone clutch. Another form is shown in Fig. 172, in which the friction surfaces are alternate disks of different materials and are brought into contact by means of the toggle joint arrangement K, L, M.

In the figure this clutch is shown on a single shaft. When the clutch is "thrown out" the part A which has a pulley fastened

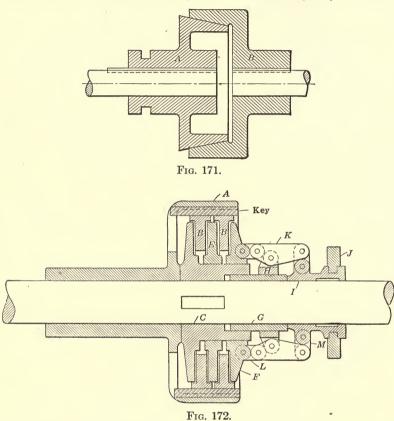

on its long hub, but not shown in the figure, does not revolve, but is made to revolve by the action of the toggle joint, bringing the friction surfaces into contact.

INDEX

A	C
Accelerated motion, 50, 53, 54	Cam, base circle, 49
Action, angle of, 86	belt shifter, 73
arc of, 86	contact with follower, 48
line of, 87	constant breadth, 65
Addendum circle, 84	diameter, 64, 77
Angle of obliquity, 88	curves, motions used, 50
Angular velocity, 91, 107	cylindrical, 66, 67, 69, 70
Approach, angle of, 86	definition of, 48
Approximate methods of laying out	"dwell" or "rest," 52
gear teeth, 114, 127	inverse, 70, 75
Armstrong ratchet, 162	involute, 58
Axis, instantaneous, 11	main and return, 65, 76
	pitch line, 48
В	positive motion, 64
Back cones, 127	pressure angle of, 49
gears, 144	with flat-face follower, 49, 56
lash, 84	off-set follower, 55
Base circle, 49, 87, 90, 92	oscillating follower, 59, 75
Belt, crossed, 148	roll follower, 49, 60
for intersecting shafts, 150	theoretical curve, 48
length of, 152	working curve, 48
open, 148	Center, instantaneous, 11
quarter turn, 151	Centro, definition of, 11
shifter cam, 73	location of, in a single body, 12
Belting, 148	Centros, location of, in three bodies
American system, 156	moving relatively to each
chain drive, 156	other, 12
English system, 156	location of, in compound kine-
Morse rocker joint chain, 159	matic chain, 16
Renold silent chain, 158	Chain drive, 156
rope drive, 155	kinematic, definition of, 13
Bevel cones, 81	Morse rocker joint, 159
gears, shop drawing of, 128	Renold silent, 158
spiral, 126	Circle, addendum, definition of, 84
Tredgold's method of laying out,	dedendum, definition of, 84
127	rolling, 101, 102, 103, 105, 106, 107,
Bilgram bevel gear planer, 133	108, 109
Bricard's straight line motion, 46	working depth, definition of, 84
Brush plate and wheel, 81	Circular pitch, definition of, 85, 131
4	30

Fellows gear shaper, 120

Flank of tooth, 84 Flat-face follower, 49, 54

Follower, cam, 48, 70

Friction gears, 78, 79, 80, 81

Clearance, 84 Friction bevel cones, 81 Clutch, cam, 76 brush plate and wheel, 81 cone, 167 Evans cones, 79 disk, 167 grooved cylinders, 79 Clutches, 167 plain cylinders, 78 Comparison of involute and cycloidal Sellers feed disks, 80 systems, 110 G Cones, Evans friction, 79 stepped, 144, 154 Gear cutters, interchangeable, table Conjugate methods of cutting gear of, 118 teeth, 119 cutting, 117, 119, 120, 132, 133 Counter shaft, 148 hobbing, 123 Crossed belt, 148 shaper, Fellows', 120 Crosshead, Scotch, 70 teeth, approximate methods of, Crown gears, 126 laying out, 114, 115, 116, 127 Crowning pulleys, 149 contact between, 89 Cutting gear teeth, 117, 119, 120, limiting length of, 90 132, 133 octoid, 126 Cycloid, construction of, 101 standard sizes of, 93 Cycloidal gears, interchangeable, 108 with straight flanks, 106 system of gear teeth, 101 train, definition of, 142 Cylindrical cam, 66, 67, 69, 70 direction of rotation in, 143 for thread cutting, 144 value of, 142 Gearing, ratchet, 161 Dedendum circle, 84 Detent, 161 Gears, back, 144 Diagrams, linear velocity, 25 bevel, 125 polar velocity, 26 approximate method of laying velocity of engine crank and crossout, 127 head, 26 methods of cutting teeth, 131 Drafting board parallel mechanisms, Bilgram planer for, 133 shop drawing for, 128 Drill, Weston or Scotch, 162 to calculate outside diameter of, "Dwell," 52 \mathbf{E} comparison of involute and cycloidal systems of teeth, 110 Effect of changing distance between crown, 126 centers of involute gears, 92 cycloidal annular gear and pinion, Elliptical gears, 139 107 Epicycloid, construction of, 102 interchangeable, 108 Evans friction cones, 79 spur, 82, 88, 105 F rack and pinion, 106 Face of tooth, 84 rolling circle, standard diameter

> of, 109 system, 101, 103

friction, 78, 79, 80, 81

elliptical, 139

definition of tooth parts, 84

Gears, helical, 113	J
herringbone, 113	Jack shaft, 148
idle, 143	K
involute, annular and pinion, 91	Kinematic chain, 14
interchangeable, 93	location of centers in, 14
interference in, 92	,
rack and pinion, 89, 90	L
spur, 82	Lantern wheel, 112
stub tooth, 97, 98, 100	Lead screw, 144
system, 87	Length of belts, 146
miter, 126	Linear velocity, 4, 5, 11, 18, 25, 29,
pin, 111	32, 34, 35, 36, 37
spiral, 113	Loose pulley, 149
stepped, 113	M
toothed, 82	M
tumbling, 145	Machine, definition of, 1
twisted, 113	design of, 1
worm and worm wheel, 135, 137,	Magnetic ratchet, 165
140, 141	Main and return cams, 66, 76
cutting, 138	Mechanisms, definition of, 10
Wuest, 113	crossed link, 20
Grant's odontograph, 115, 116	modes of connection of, 10
Н	open four link, 19
	parallel motion, 38
Harmonic motion, 52	slider crank, 21
Helical gears, 113	straight line motion, 38, 41
motion, 3	variable motion, 28, 29
Helix angle, 113, 122	Miter gears, 126 Molding generating principle of cut-
Herringbone gears, 113	ting gear teeth, 119
Hobbing gears, 123 Hypocycloid, construction of, 103	Morse rocker joint chain, 159
Trypocycloid, construction of, 100	Motion, definition of, 1
I	forms of, 2
Idle gear, 143	harmonic, 52
Indicator motion, Tabor, 8	helical, 3
Thompson, 44	instantaneous, 11
Instantaneous axis, 11	intermittent, 161
center, definition of, 11	parallel, 38
location of, 12	plane, 2
motion, 11	quick return
Interchangeable gear cutters, table	oscillating arm, 34, 35, 36, 37
of, 118	Whitworth, 31, 134
Inverse cam, 70	spherical, 3
Involute cam, 58	straight line, 38, 42
gear teeth, 87, 88, 89, 91	Bricard's, 46
interference in, 92	Peaucellier's, 45
gears, interchangeable, 93	Roberts, 45
method of constructing, 58	Scott Russell, 43

mule, 150

tight and loose, 149

Q. Motion, straight line Tchebicheff, 44 Quarter turn belt, 151 Thompson indicator, 44 Quick return motion, 140 Watts', 42 oscillating arm, 34, 35, 36, 37 uniform, 50 Whitworth, 31, 134 uniformly accelerated, 50, 53, 54 retarded, 50, 55 Rack and pinion, cycloidal system, 106 Obliquity, angle of, 88 involute system, 89, 90 line of, 90, 91 Radian, 5 Octoid gear tooth, 126, 133 Radius arm, 30 Odontograph, Grant, 115, 116 center, 31 Robinson, 114 Ratchet gearing, 161 Willis, 115 Ratchets, Armstrong universal, 162 Off-set follower, 55 double acting, 163 Open belt, 148 jack, 166 Oscillating follower, 59, 70 magnetic, 165 masked, 163 multiple pawl, 162 Parallel motion mechanisms, definipositive, 164 tion of, 38 silent, 164 drafting board, 40 Weston, 162 ruler, 40 Recess, angle of, 86 Roberval balance, 40 Renold silent chain, 158 parallelogram, 38 "Rest," 52 Path, definition of, 3 Retarded motion, 50, 55 Pawl, 163, 166 Reversing pawl, 163 Peaucellier's exact straight line mo-Roberts straight line motion, 45 tion mechanism, 45 Roberval balance, 40 Pin gears, 111 Robinson odontograph, 114 Pinion for annular gear, limiting Roll follower, 49, 60, 62, 63, 64, 65 size of, 107 Rolling circle, standard diameter, of, Pitch, 85, 136 109 arc, 89 Rolls, friction, 78 circle, 82 grooved friction, 79 circular, 85, 136 velocity ratio of, 78 cones, 127 Root circle, 84 diameter, 84 Rope drive, 155 diametral, 85 Rotation, 3 line of cam, 48 Positive motion cam, 64 Scotch crosshead, 70 Pressure angle, 49 Scott Russell straight line motion, 43 Problems, 6, 17, 23, 24, 46, 62, 72, 86, Screw cutting gear train, 144 98, 110, 134, 140, 147, 159 lead, 144 Pulleys, crowning, 149

Sellers' feed disks, 80

Shop drawing of bevel gears, 128

Silent ratchets, 164 Spherical motion, 3 Spiral gears, 113, 126 Sprocket wheel, 157 Spur gears, 82 Stepped cones, 144 gears, 113 Stub tooth gear, 97, 98, 100 Stud gear, 144 Straight line motions, Bricard's, 46 Peaucellier's, 45 Roberts, 45 Scott Russell, 43 Tchebicheff's, 44 Thompson indicator, 44 Watt's, 42

T

Tables ofinterchangeable gear cutters, 118 standard tooth parts, 94, 95 stub tooth parts, 98 Tchebicheff's straight line motion, 44 Theoretical cam curve, 48 Thompson indicator motion, 44 Thread, multiple, 136 cutting, 144 Throat diameter, 138 Tight pulleys, 149 Tooth parts, definition of, 84 tables of, 94, 95, 98 Translation, 3 Tredgold's method, 127 Tumbler gears, 145 Twisted gears, 113

U

Uniform motion, 50 Uniformly accelerated motion, 50, 53, 54 retarded motion, 50, 55

\mathbf{v}

Variable motion mechanisms, 28, 29 Velocity, angular, 5 definition of, 4 diagrams, 25, 26, 28 linear, 4, 5, 11, 18, 25, 29, 32, 34, 35, 36, 37 ratio, belting, 148 bevel gears, 79, 125 brush plate and wheel, 81 effect of idle wheel on, 143 elliptical gears, 140 Evans friction cones, 79 gearing, 83 gear trains, 142 rolling cylinders, 78 Sellers' feed disks, 80 stepped cones, 144 worm and worm wheel, 135 relation between linear and angular. 6 relative linear, solution of problems in, 18 variable linear, 4

W

Watt's straight line motion, 42

Weston ratchet, 162
Wheel, lantern, 112
ratchet, 161
sprocket, 157
Whitworth, quick return motion, 31,
134
Willis odontograph, 115
Working cam curve, 48
depth circle, 84
Worm, 125, 130
length of, 138
and worm wheel, 135, 137, 140, 141
method of cutting, 138
pitch used, 136
Wuest gears, 113














































THIS BOOK IS DUE ON THE LAST DATE STAMPED BELOW

AN INITIAL FINE OF 25 CENTS WILL BE ASSESSED FOR FAILURE TO RETURN THIS BOOK ON THE DATE DUE. THE PENALTY

THIS BOOK ON THE DATE DUE. THE PENALTY WILL INCREASE TO 50 CENTS ON THE FOURTH DAY AND TO \$1.00 ON THE SEVENTH DAY OVERDUE.

DEC 1 1938	SEP 13 1940 FEB 18 1942
	AUG 28 1842
DEC 15 1938	
SEP 25 1939	DEC 28 1942
NOV 24 1939	80ct'53LM QCT2 1953 LU
JAN 2 1940	
	LD 21-95m-7,'37

